

Model Y Correction Codes. Codes are updated every week and are valid as of 5/20/2022.

Correction Code	Name	FRT	Model
00003064	Perform Final Check (CN)	0	Model Y
00004935	Perform Vehicle Inspection for Spring Festival holiday (CN Only)	0.2	Model Y
00008598	Tesla Body Repair - Menu Pricing	1	Model Y
00020003	Firmware Update	0.05	Model Y
00020007	Firmware Update - Garage	0.05	Model Y
00020008	Firmware Redeploy - Toolbox	0.05	Model Y
00020010	Remote – Known Characteristic of Current Firmware	0.25	Model Y
00020018	Software Reinstall	0.05	Model Y
00020020	Remote – Over the Air Update	0.25	Model Y
00022008	User Data (Factory Reset)	0.05	Model Y
00030007	Enable Model Y AWD Acceleration Boost	0	Model Y
00030100	PDI (Without Test Drive)	0.3	Model Y
00030300	Perform North Carolina State Inspection	0.1	Model Y
00030400	Courtesy Inspection	0.1	Model Y
00030500	Perform State Inspection - Texas	0.1	Model Y
00030600	Perform China Safety Inspection	1	Model Y
00030700	Perform General Inspection	1.2	Model Y
00030800	Perform Belgium Safety Inspection	1	Model Y
00030900	Perform Hawaii State Inspection	0.35	Model Y
00031000	Perform New York State Inspection	0.2	Model Y
00031100	Perform Missouri State Inspection	0.25	Model Y
00031300	Vehicle Transfer Inspection	0.1	Model Y
00031500	Perform Nova Scotia Provincial Motor Vehicle Inspection	0.5	Model Y
00031600	Norway EU Inspection Control	0.8	Model Y
00031700	Norway EU Post Inspection Control	0.4	Model Y
00032000	Used Vehicle Inspection	1.2	Model Y
00032100	Used Vehicle Final Quality Check	0.3	Model Y
00032200	Pre-Loaner Vehicle Inspection	1	Model Y
00032500	Shaken Inspection (Japan)	2.4	Model Y
00032700	Perform Germany MOT Pre-Inspection	0.4	Model Y
00032800	Perform Germany MOT Post-Inspection	0.4	Model Y
00034000	Perform Total Loss Vehicle (Soaking in Water) Inspection (CN only)	32	Model Y
00037000	Perform Final Inspection China	0.25	Model Y
00038000	Global Press Vehicle inspection	5.1	Model Y
00039000	Used Vehicle Intake Inspection (UVIS Only)	0	Model Y
00039100	Extend Warranty Agreement Inspection (China)	0.75	Model Y
00040100	Perform Validation Test Drive	0.3	Model Y
00040900	Virginia Safety Inspection	0.5	Model Y
00041000	Annual Service Inspection (Japan Only)	0	Model Y
00041100	NSW e-Safety Inspection (Pink Slip)	0.3	Model Y
00041110	NSW e-Safety Inspection (Blue Slip)	0.7	Model Y
00042000	Warrant of Fitness - New Zealand	0.75	Model Y
00070018	Vehicle Sanitation - Tunap (Basic Package)	0.2	Model Y
00070028	Vehicle Sanitation - Tunap (Complete Package)	0.75	Model Y
00100004	General Diagnosis	0.5	Model Y
00100014	General Diagnosis - No Trouble Found	0.1	Model Y
00100024	Remote Diagnosis	0.3	Model Y
00100034	Repair Plan Confirmation	0.05	Model Y
1027521	Assistance with Refund of Reservation		Model Y
7000005	Mobile Ranger Service (includes travel)	0	Model Y
7000022	Fluid Disposal (Remove & Replace)	0.5	Model Y
7000030	Parts Not Available - Add to future service visit.	0	Model Y
7000060	Valet Service	0	Model Y
7000070	Tesla (Internal Loaner or Rental)	0	Model Y
7000090	Roadside Assistance - Tow	0	Model Y
7000200	Extended Service Agreement - Deductible	1	Model Y
7000201	Service Loaner Damage - Deductible	0	Model Y
7000400	Shipping/Handling	0	Model Y
7000405	Vehicle Storage	0	Model Y
7000410	Placement of Documentation in Glove Box	0.05	Model Y

7007100	Towing - Sublet	0	Model Y
7007200	Parking - Sublet	0	Model Y
7007300	Other - Sublet	0	Model Y
7100001	NO LABOR PERFORMED	0	Model Y
7100002	Seasonal Tire Storage	1	Model Y
10000105	Jack Mode Activation	0.05	Model Y
10001105	Raise Vehicle - 2 Stands	0.4	Model Y
10010007	Tesla Body Repair - Paint Supplies	0	Model Y
10010008	Tesla Body Repair - Miscellaneous Labor	0	Model Y
10010009	Storage Fees	1	Model Y
10010010	Tesla Body Repair - Frame Labor	0	Model Y
10010011	Tesla Body Repair - Structural	0	Model Y
10010013	Tesla Body Structural--Vehicle Dismantling	1	Model Y
10010014	Tesla Body Structural--Sheet Metal Repair	1	Model Y
10010015	Tesla Body Structural--Reassemble Parts	1	Model Y
10010016	Tesla Body Repair - Aluminum Labor	0	Model Y
10011001	Fascia Assembly - Front (Remove & Install)	0.35	Model Y
10011002	Fascia Assembly - Front (Remove & Replace)	0.75	Model Y
10011008	Fascia Assembly - Front (Swap)	0.6	Model Y
10011011	Cover - Tow Hook - Front (Remove & Install)	0.05	Model Y
10011058	Fascia Assembly - Front (Refinish)	4.7	Model Y
10011102	Bumper Beam - Front (Remove & Replace)	0.75	Model Y
10011202	Ankle Catcher Assembly (Remove & Replace)	0.45	Model Y
10011502	Grille - Fascia - Front (Remove & Replace)	0.65	Model Y
10011702	Foam - Bumper Beam - Front (Remove & Replace)	0.35	Model Y
10012011	Cover - Tow Hook - Rear (Remove and Install)	0.05	Model Y
10012012	Cover - Tow Hook - Rear (Remove & Replace)	0.05	Model Y
10012202	Valance - Front Fascia (Remove & Replace)	0.4	Model Y
10012402	Crush Can - Front - LH (Remove & Replace)	1.25	Model Y
10012412	Crush Can - Front - RH (Remove & Replace)	1.25	Model Y
10012802	Fascia Assembly - Rear - Upper (Remove & Replace)	0.75	Model Y
10012902	Fascia Assembly - Rear - Lower (Remove & Replace)	0.7	Model Y
10013001	Fascia Assembly - Rear (Remove & Install)	0.55	Model Y
10013002	Fascia Assembly - Rear (Remove & Replace)	0.6	Model Y
10013008	Fascia Assembly - Rear (Swap)	0.8	Model Y
10013102	Bumper Beam - Rear (Remove & Replace)	0.75	Model Y
10014002	Cover - Tow Hook - Front (Remove & Replace)	0.05	Model Y
10014302	Bracket - Rear - Center (Remove & Replace)	0.6	Model Y
10014602	Air Extractor - LH (Remove & Replace)	0.75	Model Y
10014902	Air Extractor - RH (Remove & Replace)	0.75	Model Y
10016002	Cover - Trailer Hitch (Remove & Replace)	0.05	Model Y
10016102	Bracket - Rear Wing - LH (Remove & Replace)	0.55	Model Y
10016202	Bracket - Rear Wing - RH (Remove and Replace)	0.55	Model Y
10017102	Bracket - Taillight - LH (Remove & Replace)	0.55	Model Y
10017202	Bracket - Taillight - RH (Remove & Replace)	0	Model Y
10018102	Bracket - Center - Front Fascia - LH (Remove and Replace)	0.6	Model Y
10018202	Bracket - Center - Front Fascia - RH (Remove and Replace)	0.6	Model Y
10018725	EMEA - Front Fender to Fascia Interface Rework	0.25	Model Y
10019489	Install Protective Film to Liftgate (CN Only)	0.05	Model Y
10100008	Tesla Body Repair - Mechanical Labor	0	Model Y
10100301	Hood Assembly (Remove & Install)	0.2	Model Y
10100302	Hood Assembly (Remove & Replace)	0.35	Model Y
10101001	Bracket - Taillight - LH (Remove & Install)	0.75	Model Y
10101002	Carrier - Front End (Remove & Replace)	1.9	Model Y
10101032	Bracket - Front End Module (FEM) - LH (Remove & Replace)	0.65	Model Y
10101042	Bracket - Front End Module (FEM) - RH (Remove & Replace)	0.65	Model Y
10101602	Bracket - Crash Can - SubFrame - LH (Remove & Replace)	0.55	Model Y
10101702	Bracket - Crash Can - RH (Remove & Replace)	0.55	Model Y
10102202	Brace - Shock Tower (Remove & Replace)	0.5	Model Y
10102302	Panel Assembly - Rear (Remove and Replace)	1	Model Y
10103001	Fender Assembly - Front - LH (Remove & Install)	0.8	Model Y
10103002	Fender Assembly - Front - LH (Remove & Replace)	0.85	Model Y

10103101	Fender Assembly - Front - RH (Remove & Install)	0.8	Model Y
10103102	Fender Assembly - Front - RH (Remove & Replace)	0.85	Model Y
10106001	Door Assembly - Front - LH (Remove & Install)	0.15	Model Y
10106002	Door Assembly - Front - LH (Remove & Replace)	1	Model Y
10106052	Check Strap - Door - Front - LH (Remove and Replace)	0.2	Model Y
10106101	Door Assembly - Front - RH (Remove & Install)	0.15	Model Y
10106102	Door Assembly - Front - RH (Remove & Replace)	1	Model Y
10106152	Check Strap - Door - Front - RH (Remove and Replace)	0.2	Model Y
10106501	Door Assembly - Rear - LH (Remove & Install)	0.25	Model Y
10106502	Door Assembly - Rear - LH (Remove & Replace)	1	Model Y
10106552	Check Strap - Door - Rear - LH (Remove and Replace)	0.5	Model Y
10106601	Door Assembly - Rear - RH (Remove & Install)	0.25	Model Y
10106602	Door Assembly - Rear - RH (Remove & Replace)	1	Model Y
10106652	Check Strap - Door - Rear - RH (Remove and Replace)	0.5	Model Y
10107001	Liftgate Assembly (Remove & Install)	0.35	Model Y
10107002	Liftgate Assembly (Remove & Replace)	2	Model Y
10108008	Color Matching / Tint Refinement (Refinish)	0.5	Model Y
10108108	Cover Car Exterior (Refinish)	0.3	Model Y
10108208	Corrosion Protection (Refinish)	0.3	Model Y
10108500	Create Imprint of VIN	0.1	Model Y
10108608	Tesla Body Repair - Body Labor	0	Model Y
10108808	Tesla Body Repair - Sublet	0	Model Y
10109008	Structural Body Repair	0	Model Y
10109108	Non-Structural Body Repair	0	Model Y
10109608	Tesla Body Repair - Insurance Pay	0	Model Y
10182019	Customer Generated Quote - Issue (Transaction) Resolved - Bound		Model Y
10200108	Glass Chip Repair - Windshield	0.4	Model Y
10200301	Windshield (Vehicles with 2nd Generation or Later Autopilot Hardware) (Remove & Install)	1.4	Model Y
10200302	Windshield (Remove & Replace)	2.25	Model Y
10200312	Windshield (Reuse Humidity and Temperature Sensor) (Remove & Replace)	1.55	Model Y
10200322	Windshield (Structural Pack) (Remove & Replace)	1.6	Model Y
10200348	Windshield (Clean Camera Area)	0.1	Model Y
10203001	Glass - Rear Quarter - LH (Remove & Install)	1.05	Model Y
10203002	Glass - Rear Quarter - LH (Remove & Replace) (Requires Urethane and Primer. Reference TBX Article # 55577)	0.75	Model Y
10203101	Glass - Rear Quarter - RH (Remove & Install)	1.05	Model Y
10203102	Glass - Rear Quarter - RH (Remove & Replace)	0.75	Model Y
10204102	Glass - Backlight (Remove & Replace)	0.95	Model Y
10205002	Glass - Roof - Fixed (Remove & Replace)	1.65	Model Y
10206002	Sensor - Relative Humidity and Temperature (Remove & Replace)	0.35	Model Y
10300020	Touch Up Paint - Apply - 0.2	0.2	Model Y
10300040	Touch Up Paint - Apply - 0.4	0.4	Model Y
10300060	Touch Up Paint - Apply - 0.6	0.6	Model Y
10300250	Paint Defects - Denib/Polish - 0.25	0.25	Model Y
10300500	Paint Defects - Denib/Polish - 0.5	0.5	Model Y
10301000	Paint Defects - Denib/Polish - 1	1	Model Y
10302008	Clean Up Water Ingress	0	Model Y
10303025	Dent Repair - Paintless - 0.25	0.25	Model Y
10303050	Dent Repair - Paintless - 0.5	0.5	Model Y
10303100	Dent Repair - Paintless - 1	1	Model Y
11204311	Install Wedge Dampers (X2) and Seal Stuffers to Liftgate (China Only)	0.35	Model Y
11205560	Install Seal Stuffers to Liftgate (China Only)	0.07	Model Y
11330302	Hinge - Hood - LH (Remove & Replace)	0.25	Model Y
11330402	Hinge - Hood - RH (Remove & Replace)	0.6	Model Y
11330502	Gas Strut - Hood - LH (Remove & Replace)	0.05	Model Y
11330602	Gas Strut - Hood - RH (Remove & Replace)	0.05	Model Y
11330702	C-Clips - Strut - Hood - LH (Remove and Replace)	0.05	Model Y
11330712	C-Clips - Strut - Trunk - LH (Remove and Replace)	0.05	Model Y
11330812	C-Clips - Strut - Trunk - RH (Remove and Replace)	0.05	Model Y
11334202	Power Strut - Liftgate (Remove & Replace)	0.2	Model Y
11334402	Strut - Liftgate (Remove & Replace)	0.05	Model Y
11335202	Bump Stop - Liftgate - Lower - LH (Remove & Replace)	0.05	Model Y
11335212	Bump Stop - Liftgate - Lower - RH (Remove & Replace)	0.05	Model Y

11335302	Bump Stop - Liftgate - Upper - LH (Remove & Replace)	0.05	Model Y
11335312	Bump Stop - Liftgate - Upper - RH (Remove & Replace)	0.05	Model Y
11335602	Hinge - Trunk - LH (Remove & Replace)	0.8	Model Y
11335702	Hinge - Trunk - RH (Remove & Replace)	0.8	Model Y
11336402	Hinge - Door - Front - Upper - LH (Remove & Replace)	0.15	Model Y
11336502	Hinge - Door - Front - Upper - RH (Remove & Replace)	0.15	Model Y
11336602	Hinge - Door - Front - Lower - LH (Remove & Replace)	0.15	Model Y
11336702	Hinge - Door - Front - Lower - RH (Remove & Replace)	0.15	Model Y
11336802	Hinge - Door - Rear - Upper - LH (Remove & Replace)	0.15	Model Y
11336902	Hinge - Door - Rear - Upper - RH (Remove & Replace)	0.15	Model Y
11337002	Hinge - Door - Rear - Lower - LH (Remove & Replace)	0.15	Model Y
11337102	Hinge - Door - Rear - Lower - RH (Remove & Replace)	0.15	Model Y
11350010	Latch Integrity Check	0.5	Model Y
11350020	Actuator Integrity Check	0.5	Model Y
11350302	Latch - Hood (Single Actuator System) (Remove & Replace)	0.1	Model Y
11350402	Actuator - Latch - Hood (Single Actuator System) (Remove & Replace)	0.15	Model Y
11351002	Latch - Door - Front - LH (Remove & Replace)	0.5	Model Y
11351102	Latch - Door - Front - RH (Remove & Replace)	0.5	Model Y
11351802	Latch - Door - Lubricate (Remove & Replace)	0.05	Model Y
11352802	Switch - Liftgate - Interior (Remove & Replace)	0.05	Model Y
11352902	Striker - Hood (Remove & Replace)	0.05	Model Y
11353002	Striker - Door - Front - LH (Remove & Replace)	0.05	Model Y
11353102	Striker - Door - Front - RH (Remove & Replace)	0.05	Model Y
11353402	Striker - Liftgate (Remove & Replace)	0.05	Model Y
11353702	Latch - Door - Rear - LH (Remove & Replace)	0.5	Model Y
11353802	Latch - Door - Rear - RH (Remove & Replace)	0.45	Model Y
11354002	Striker - Door - Rear - LH (Remove & Replace)	0.05	Model Y
11354102	Striker - Door - Rear - RH (Remove & Replace)	0.05	Model Y
11355002	Latch - Trunk (Remove & Replace)	0.05	Model Y
11355202	Actuator - Latch - Hood - Primary (Remove & Replace)	0.2	Model Y
11355302	Actuator - Latch - Hood - Secondary (Remove & Replace)	0.2	Model Y
11355602	Switch - Exterior Release - Trunk (Remove & Replace)	0.1	Model Y
11358005	Manual Release - Door - Rear - LH (Actuate)	0.05	Model Y
11359005	Manual Release - Door - Rear - RH (Actuate)	0.05	Model Y
11451002	Handle - Exterior Release - Door - Front - LH (Remove & Replace)	0.6	Model Y
11451102	Handle - Exterior Release - Door - Front - RH (Remove & Replace)	0.55	Model Y
11452002	Handle - Exterior Release - Door - Rear - LH (Remove & Replace)	0.55	Model Y
11452102	Handle - Exterior Release - Door - Rear - RH (Remove & Replace)	0.55	Model Y
11455002	Hall Sensor - Exterior Release - Door - Front - LH (Remove & Replace)	0.6	Model Y
11455102	Hall Sensor - Exterior Release - Door - Rear - LH (Remove & Replace)	0.5	Model Y
11456002	Hall Sensor - Exterior Release - Door - Front - RH (Remove & Replace)	0.6	Model Y
11456102	Hall Sensor - Exterior Release - Door - Rear - RH (Remove & Replace)	0.5	Model Y
11500100	Door Glass - Front - LH (Adjust)	0.4	Model Y
11500102	Door Glass - LH - Front (Remove & Replace)	0.35	Model Y
11500200	Door Glass - Front - RH (Adjust)	0.4	Model Y
11500202	Door Glass - RH - Front (Remove & Replace)	0.35	Model Y
11500300	Door Glass - Rear - LH (Adjust)	0.35	Model Y
11500302	Door Glass - LH - Rear (Remove & Replace)	0.3	Model Y
11500400	Door Glass - Rear - RH (Adjust)	0.35	Model Y
11500402	Door Glass - RH - Rear (Remove & Replace)	0.3	Model Y
11501006	Window Guide Rail - Front - LH	0.1	Model Y
11501106	Window Guide Rail - Front - RH	0.1	Model Y
11501202	Window Guide Rail - Rear - LH (Remove & Replace)	0.1	Model Y
11501302	Window Guide Rail - Rear - RH (Remove & Replace)	0.1	Model Y
11501908	Clean Up Broken Glass	0	Model Y
11502000	Window Regulator - Front - LH (Recalibrate)	0.05	Model Y
11502002	Window Motor/Regulator Assembly - Front - LH (Remove & Replace)	0.6	Model Y
11502100	Window Regulator - Front - RH (Recalibrate)	0.05	Model Y
11502102	Window Motor/Regulator Assembly - Front - RH (Remove & Replace)	0.4	Model Y
11502200	Window Regulator - Rear - LH (Recalibrate)	0.05	Model Y
11502202	Window Regulator - Rear - LH (Remove & Replace)	0.5	Model Y
11502300	Window Regulator - Rear - RH (Recalibrate)	0.05	Model Y

11502302	Window Regulator - Rear - RH (Remove & Replace)	0.5	Model Y
11502502	Switch - Window - Driver (Remove & Replace)	0.1	Model Y
11502702	Switch - Window - Front Passenger (Remove & Replace)	0.1	Model Y
11503002	Switch - Window - Rear - LH (Remove & Replace)	0.1	Model Y
11503102	Switch - Window - Rear - RH (Remove & Replace)	0.2	Model Y
11505102	Window Motor - Front - LH (Remove & Replace)	0.2	Model Y
11505202	Window Motor - Front - RH (Remove & Replace)	0.2	Model Y
11505302	Window Motor - Rear - LH (Remove & Replace)	0.15	Model Y
11505402	Window Motor - Rear - RH (Remove & Replace)	0.15	Model Y
11506102	Window Regulator - Front - LH (Remove & Replace)	0.55	Model Y
11506202	Window Regulator - Front - RH (Remove & Replace)	0.55	Model Y
11700302	Seal - Body - Side - Front - Primary - LH (Remove & Replace)	0.05	Model Y
11700402	Seal - Body - Side - Front - Primary - RH (Remove & Replace)	0.05	Model Y
11700502	Seal - Body - Side - Rear - Primary - LH (Remove & Replace)	0.05	Model Y
11700602	Seal - Body - Side - Rear - Primary - RH (Remove & Replace)	0.05	Model Y
11700802	Seal - B-Pillar Applique - LH (Remove & Replace)	0.25	Model Y
11700902	Seal - B-Pillar Applique - RH (Remove & Replace)	0.25	Model Y
11701001	Closeout Panel - Door - Front - LH (Remove & Install)	0.35	Model Y
11701032	Closeout Panel - Door - Front - LH (Remove & Replace)	0.25	Model Y
11701101	Closeout Panel - Door - Front - RH (Remove & Install)	0.35	Model Y
11701112	Seal - Glass Run - Front Door - LH (Remove & Replace)	0.4	Model Y
11701122	Seal - Glass Run - Front Door - RH (Remove & Replace)	0.4	Model Y
11701132	Closeout Panel - Door - Front - RH (Remove & Replace)	0.6	Model Y
11701401	Closeout Panel - Door - Rear - LH (Remove & Install)	0.55	Model Y
11701452	Closeout Panel - Door - Rear - LH (Remove & Replace)	0.55	Model Y
11701501	Closeout Panel - Door - Rear - RH (Remove & Install)	0.55	Model Y
11701552	Closeout Panel - Door - Rear - RH (Remove & Replace)	0.55	Model Y
11701802	Seal - Hood (Remove & Replace)	0.05	Model Y
11702002	Seal - Trunk (Remove & Replace)	0.1	Model Y
11702102	Seal - Header - LH (Remove and Replace)	0.05	Model Y
11702202	Seal - Header - RH (Remove and Replace)	0.05	Model Y
11703002	Seal - Outer Belt - Front Door - LH (Remove & Replace)	0.05	Model Y
11703102	Seal - Outer Belt - Front Door - RH (Remove & Replace)	0.05	Model Y
11703202	Seal - Inner Belt - Front Door - LH (Remove & Replace)	0.2	Model Y
11703302	Seal - Inner Belt - Front Door - RH (Remove & Replace)	0.2	Model Y
11704102	Seal - Inner Belt - Rear Door - LH (Remove & Replace)	0.1	Model Y
11704202	Seal - Inner Belt - Rear Door - RH (Remove and Replace)	0.1	Model Y
11704402	Seal - Outer Belt - Rear Door - LH (Remove & Replace)	0.05	Model Y
11704502	Seal - Outer Belt - Rear Door - RH (Remove & Replace)	0.05	Model Y
11705002	Seal - Secondary - Front Door - LH (Remove & Replace)	0.1	Model Y
11705102	Seal - Secondary - Front Door - RH (Remove & Replace)	0.1	Model Y
11705402	Seal - Secondary - Rear Door - LH (Remove & Replace)	0.2	Model Y
11705502	Seal - Secondary - Rear Door - RH (Remove & Replace)	0.2	Model Y
12010102	Noise Absorber - Motor Bay - Front (Remove & Replace)	3.2	Model Y
12010202	Noise Absorber - Motor Bay - Rear (Remove & Replace)	2.25	Model Y
12010902	Wheel Arch Liner - Front - LH (Remove & Replace)	0.35	Model Y
12010912	Wheel Arch Liner - Front - LH (Structural Pack) (Remove & Replace)	0.3	Model Y
12011002	Wheel Arch Liner - Front - RH (Remove & Replace)	0.35	Model Y
12011012	Wheel Arch Liner - Front - RH (Structural Pack) (Remove & Replace)	0.3	Model Y
12011102	Wheel Arch Liner - Rear - LH (Remove & Replace)	0.2	Model Y
12011112	Wheel Arch Liner - Rear - LH (Structural Pack) (Remove & Replace)	0.2	Model Y
12011202	Wheel Arch Liner - Rear - RH (Remove & Replace)	0.2	Model Y
12011212	Wheel Arch Liner - Rear - RH (Structural Pack) (Remove & Replace)	0.2	Model Y
12030101	Panel - Aero Shield - Front (Remove & Install)	0.2	Model Y
12030102	Panel - Aero Shield - Front (Remove & Replace)	0.2	Model Y
12030112	Panel - Aero Shield - Front (Structural Pack) (Remove & Replace)	0.25	Model Y
12030501	Panel - Aero Shield - Mid (Remove & Install)	0.25	Model Y
12030502	Panel - Aero Shield - Mid (Remove & Replace)	0.3	Model Y
12030802	Diffuser - Rear Fascia (Remove & Replace)	0.45	Model Y
12050502	Tesla Badge - Front (Remove & Replace)	0.15	Model Y
12050602	Vehicle Configuration Badge (Remove & Replace)	0.15	Model Y
12050606	Vehicle Configuration Badge (Retrofit)	0.15	Model Y

12050607	Vehicle Configuration Badge (Remove)	0.05	Model Y
12050702	Tesla Badge - Rear (Remove & Replace)	0.15	Model Y
12051102	Sill Plate - Front - LH (Remove & Replace)	0.1	Model Y
12051202	Sill Plate - Front - RH (Remove & Replace)	0.1	Model Y
12051306	Sill Plate - illuminated - Front - Pair (Retrofit)	0.25	Model Y
12052006	Paint Protection Film - Rear Doors (Retrofit)	0.2	Model Y
12052007	Paint Protection Film - Remove	0.5	Model Y
12053592	Paint Protection Film - Rear Doors (PDI Retrofit)	0.2	Model Y
12056560	Mud Flaps (PDI Retrofit)	0.15	Model Y
12070102	Bracket - License Plate - Front (Remove & Replace)	0.1	Model Y
12070106	Bracket - License Plate - Front (Retrofit)	0.1	Model Y
12070116	Bracket - License Plate - Front (EMEA) (Retrofit using Template)	0.05	Model Y
12070126	Bracket - License Plate - Front (EMEA) (Retrofit using Jig)	0.05	Model Y
12070206	Install Tesla License Plate Frame	0.1	Model Y
12071001	License Plates (Install Onto Existing Brackets)	0.05	Model Y
12072302	Bracket - License Plate - Rear (EMEA and APAC) (Remove & Replace)	0.05	Model Y
12072306	Bracket - License Plate - Rear (Retrofit)	0.05	Model Y
12072312	Bracket - License Plate - Rear (NA) (Remove & Replace)	0.05	Model Y
12091101	Door Mirror Assembly - LH (Remove & Install)	0.25	Model Y
12091102	Door Mirror Assembly - LH (Remove & Replace)	0.3	Model Y
12091201	Door Mirror Assembly - RH (Remove & Install)	0.25	Model Y
12091202	Door Mirror Assembly - RH (Remove & Replace)	0.3	Model Y
12091702	Skull Cap - Door Mirror - LH (Remove & Replace)	0.05	Model Y
12091802	Skull Cap - Door Mirror - RH (Remove & Replace)	0.05	Model Y
12092002	Glass - Door Mirror - LH (Remove & Replace)	0.05	Model Y
12092102	Glass - Door Mirror - RH (Remove & Replace)	0.05	Model Y
12200102	Applique - B-Pillar - LH (Remove & Replace)	0.15	Model Y
12200202	Applique - B-Pillar - RH (Remove & Replace)	0.15	Model Y
12200302	Brightwork - Upper - LH (Remove & Replace)	0.35	Model Y
12200402	Brightwork - Upper - RH (Remove & Replace)	0.35	Model Y
12200502	Brightwork - Body Side - LH (Remove & Replace)	0.1	Model Y
12200602	Brightwork - Body side - RH (Remove & Replace)	0.1	Model Y
12200702	Brightwork - Quarter Panel - LH (Remove & Replace)	0.1	Model Y
12200802	Brightwork - Quarter Panel - RH (Remove & Replace)	0.1	Model Y
12201102	Applique - A-Pillar - LH (Remove & Replace)	0.3	Model Y
12201112	Applique - A-Pillar - RH (Remove & Replace)	0.3	Model Y
12201202	Garnish - Fender - Front - LH (Remove & Replace)	0.05	Model Y
12201302	Garnish - Fender - Front - RH (Remove & Replace)	0.05	Model Y
12201402	Garnish - Fender - Rear - LH (Remove & Replace)	0.05	Model Y
12201502	Garnish - Fender - Rear - RH (Remove & Replace)	0.05	Model Y
12202402	Carrier - Rocker Panel - LH (Remove & Replace)	0.2	Model Y
12202412	Carrier - Rocker Panel - LH (Structural Pack) (Remove & Replace)	0.15	Model Y
12202502	Carrier - Rocker Panel - RH (Remove & Replace)	0.2	Model Y
12202512	Carrier - Rocker Panel - RH (Structural Pack) (Remove & Replace)	0.15	Model Y
12202602	Cover - Rocker Panel - Lower - LH (Remove & Replace)	0.05	Model Y
12202702	Cover - Rocker Panel - Lower - RH (Remove & Replace)	0.05	Model Y
12207006	Mud Flaps (Retrofit)	0.05	Model Y
12207102	Mud Flap - LH (Remove and Replace)	0.1	Model Y
12207202	Mud Flap - RH (Remove and Replace)	0.1	Model Y
12208006	Splash Guards (Retrofit)	0.05	Model Y
12208102	Splash Guard - LH (Remove and Replace)	0.1	Model Y
12208202	Splash Guard - RH (Remove and Replace)	0.1	Model Y
12208583	Mud Flap (PDI Retrofit)	0.05	Model Y
12220401	Spoiler - Rear (Remove and Install)	0.5	Model Y
12220402	Spoiler - Rear (Remove & Replace)	0.3	Model Y
12220406	Spoiler - Rear (Retrofit using Tape)	0.2	Model Y
12220407	Spoiler - Rear (Remove)	0.15	Model Y
12220416	Spoiler - Rear (Retrofit using Jig)	0.15	Model Y
12250012	Baffle - Hood (Remove & Replace)	0.05	Model Y
12250902	Panel - Cowl Screen (Remove & Replace)	0.15	Model Y
12251011	Cover - Shock Tower - LH (Remove & Install)	0.05	Model Y
12251012	Cover - Shock Tower - LH (Remove & Replace)	0.05	Model Y

12251102	Underhood Apron - Rear (Remove & Replace)	0.05	Model Y
12251111	Cover - Shock Tower - RH (Remove & Install)	0.05	Model Y
12251112	Cover - Shock Tower - RH (Remove & Replace)	0.05	Model Y
12252102	Bracket - Center - Cowl Screen (Remove and Replace)	1.65	Model Y
12300202	Assembly - Trailer Hitch (Remove & Replace)	0.7	Model Y
12400001	Roof Rack (Install)	0.3	Model Y
12400002	Roof Rack (Remove)	0.3	Model Y
12522446	Install Wedge Dampers (X2) to Taillight (China Only)	0.2	Model Y
13010032	Plastic Insulator - Suspension - Driver Seat (Remove & Replace)	0.45	Model Y
13010042	Plastic Insulator - Suspension - Front Passenger Seat (Remove & Replace)	0.45	Model Y
13010300	Seat - Driver - Calibration	0.05	Model Y
13010400	Seat - Front Passenger - Calibration	0.05	Model Y
13011202	Motor - Seat Track - Driver Seat (Remove & Replace)	0.4	Model Y
13011415	Front Passenger Seat Lumbar Switch Rework (China only)	0.3	Model Y
13011502	Motor - Seat Tilt - Driver Seat (Remove & Replace)	0.5	Model Y
13011602	Motor - Seat Height - Driver Seat (Remove & Replace)	0.35	Model Y
13011812	Cover - Front - Seat Track - 1st Row Seat (Remove & Replace)	0.15	Model Y
13011822	Cover - Rear - Seat Track - 1st Row Seat (Remove & Replace)	0.05	Model Y
13012002	Riser - Outer - Driver Seat (Remove & Replace)	0.1	Model Y
13012202	Frame - Seat Cushion - Driver Seat (Remove & Replace)	0.85	Model Y
13012302	Frame - Seat Cushion - Front Passenger Seat (Remove & Replace)	0.85	Model Y
13012412	Podium - 1st Row (Remove & Replace)	1	Model Y
13012422	Podium - Seat - Front Passenger (Remove & Replace)	1	Model Y
13012502	Sensor - Position - Seat Track - 1st Row Seat - LH (Remove and Replace)	0.05	Model Y
13012602	Sensor - Position - Seat Track - 1st Row Seat - RH (Remove and Replace)	0.05	Model Y
13013202	Motor - Seat Track - Front Passenger Seat (Remove & Replace)	0.7	Model Y
13013502	Motor - Seat Tilt - Front Passenger Seat (Remove & Replace)	0.5	Model Y
13013602	Motor - Seat Height - Front Passenger Seat (Remove & Replace)	0.4	Model Y
13014097	Retrofit Passenger Lumbar Support Switch (CN only)	0.3	Model Y
13015102	Switch - Back Rest and Cushion Adjust - Driver Seat (Remove & Replace)	0.15	Model Y
13015202	Switch - Back Rest and Cushion Adjust - Front Passenger Seat (Remove & Replace)	0.1	Model Y
13015203	Switch - Back Rest and Cushion Adjust - Front Passenger Seat (Rework)	0.15	Model Y
13016602	Motor - Recliner - Back Rest - Driver Seat (Remove & Replace)	0.65	Model Y
13016702	Motor - Recliner - Back Rest - Front Passenger Seat (Remove & Replace)	0.65	Model Y
13017102	Button - Recliner Adjust - Driver Seat (Remove & Replace)	0.05	Model Y
13018102	Button - Cushion Adjust - Driver Seat (Remove & Replace)	0.05	Model Y
13018202	Button - Cushion Adjust - Front Passenger Seat (Remove & Replace)	0.05	Model Y
13020012	Actuator - EZ Entry - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.4	Model Y
13020022	Actuator - EZ Entry - 40 Track - 2nd Row Seat (7-Seat) (Remove & Replace)	0.3	Model Y
13020042	Podium - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.2	Model Y
13020052	Actuator - Floor Latch - 2nd Row Seat - LH (7-Seat) (Remove and Replace)	0.4	Model Y
13020062	Actuator - Floor Latch - 2nd Row Seat - RH (7-Seat) (Remove and Replace)	0.35	Model Y
13020132	Casting - Podium - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.3	Model Y
13020312	Seat Track - Outer - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.4	Model Y
13020322	Seat Track - Inner - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.4	Model Y
13020332	Seat Track - Outer - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.7	Model Y
13020342	Seat Track - Inner - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.7	Model Y
13021812	Cover - Seat Track - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.05	Model Y
13021822	Cover - Seat Track - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.05	Model Y
13021832	Cover - Seat Track - 2nd Row Seat - Center (7-Seat) (Remove & Replace)	0.05	Model Y
13022602	Sensor - Position - Seat Track - 2nd Row Seat - RH (Remove and Replace)	0.05	Model Y
13023702	Towel Bar - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.65	Model Y
13032802	Actuator - Recliner - 3rd Row Seat - LH (Remove & Replace)	0.4	Model Y
13032902	Actuator - Recliner - 3rd Row Seat - RH (Remove & Replace)	0.4	Model Y
13040032	Post Guide - Headrest - Driver Seat (Remove & Replace)	0.6	Model Y
13040042	Post Guide - Headrest - Front Passenger Seat (Remove & Replace)	0.6	Model Y
13040101	Seat - Driver (Remove & Install)	0.4	Model Y
13040102	Seat - Driver (Remove & Replace)	0.35	Model Y
13040201	Seat Assembly - Front Passenger (Remove & Install)	0.6	Model Y
13040202	Seat - Front Passenger (Remove & Replace)	0.35	Model Y
13041002	Shell - Seat Back - Driver (Remove & Replace)	0.1	Model Y
13041102	Shell - Seat Back - Front Passenger (Remove & Replace)	0.1	Model Y

13042002	Trim - Headrest - Driver (Remove & Replace)	0.05	Model Y
13042102	Trim - Headrest - Front Passenger (Remove & Replace)	0.05	Model Y
13043002	Lumbar Support - Backrest - Driver Seat (Remove & Replace)	0.45	Model Y
13043202	Lumbar Support - Back Rest - Front Passenger Seat (Remove & Replace)	0.45	Model Y
13043402	Frame - Seat Back Rest - Driver's Seat (Remove & Replace)	0.9	Model Y
13050022	Cushion Pan - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.65	Model Y
13050032	Switch Box - Actuator - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.35	Model Y
13050042	Switch Box - Actuator - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.3	Model Y
13050052	Seat Assembly - 2nd Row - LH (7-Seat) (Remove and Replace)	0.2	Model Y
13050062	Seat Assembly - 2nd Row - RH (7-Seat) (Remove and Replace)	0.15	Model Y
13050132	Cushion Pan - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.45	Model Y
13050402	Pivot Clamps - Seat Back - 2nd Row - Center (Remove and Replace)	0	Model Y
13050702	Headrest - 2nd Row - LH (Remove & Replace)	0.05	Model Y
13050802	Trim - Headrest - 2nd Row - RH (Remove & Replace)	0.05	Model Y
13050902	Trim - Headrest - 2nd Row - Center (Remove & Replace)	0.05	Model Y
13051002	Seat Cushion - Lower - 2nd Row (Remove & Replace)	0.05	Model Y
13051902	Switch - Seat Fold - 2nd Row - Trunk (Remove and Replace)	0.2	Model Y
13052002	Rail - 2nd Row - Outer - LH (Remove & Replace)	0.2	Model Y
13052102	Rail - 2nd Row - Outer - RH (Remove & Replace)	0.2	Model Y
13052202	Rail - 2nd Row - Inner - LH (Remove & Replace)	0.2	Model Y
13052302	Rail - 2nd Row - Inner - RH (Remove & Replace)	0.2	Model Y
13053302	Actuator - Recliner - 2nd Row - 60 (Remove & Replace)	0.2	Model Y
13053402	Actuator - Recliner - 2nd Row - 40 (Remove & Replace)	0.3	Model Y
13054001	Seat Back - 2nd Row - LH (Remove & Install)	0.5	Model Y
13054002	Seat Back Assembly - 2nd Row - LH (Remove & Replace)	0.5	Model Y
13054012	Handle - Seat Back - 2nd Row - LH (Remove & Replace)	0.5	Model Y
13054101	Seat Back - 2nd Row - RH (Remove & Install)	0.3	Model Y
13054102	Seat Back Assembly - 2nd Row - RH (Remove & Replace)	0.3	Model Y
13054112	Handle - Seat Back - 2nd Row - RH (Remove and Replace)	0.5	Model Y
13054702	Frame - Seat Back - 2nd Row - LH (Remove & Replace)	0.5	Model Y
13054802	Frame - Seat Back - 2nd Row - RH (Remove & Replace)	0.5	Model Y
13055102	Bolster - Outer - Seat - 2nd Row - LH (Remove & Replace)	0.1	Model Y
13055202	Bolster - Outer - Seat - 2nd Row - RH (Remove & Replace)	0.1	Model Y
13055902	Latch - Seat Back - 2nd Row Seat - LH (Remove & Replace)	0.5	Model Y
13056002	Latch - Seat Back - 2nd Row Seat - RH (Remove & Replace)	0.5	Model Y
13056102	Latch - Seat Back - 2nd Row - Center (Remove and Replace)	0.25	Model Y
13056302	Striker - Seat Back - 2nd Row Seat - LH (Remove & Replace)	0.3	Model Y
13056402	Striker - Seat Back - 2nd Row Seat - RH (Remove & Replace)	0.3	Model Y
13056752	Pivot Clamp - Seat Back - 2nd Row - LH (Remove and Replace)	0.1	Model Y
13056852	Pivot Clamp - Seat Back - 2nd Row - RH (Remove and Replace)	0.1	Model Y
13057102	Pivot Sleeve - Seat Back - 2nd Row Seat - LH (Remove & Replace)	0.2	Model Y
13057202	Pivot Sleeve - Seat Back - 2nd Row Seat - RH (Remove & Replace)	0.2	Model Y
13057302	Pivot Bushing - Seat Back - 2nd Row - Center (Remove and Replace)	0.15	Model Y
13057402	Bracket - Hinge - Seat Back - 2nd Row Seat - LH (Remove & Replace)	0.2	Model Y
13057502	Bracket - Hinge - Seat Back - 2nd Row Seat - RH (Remove & Replace)	0.2	Model Y
13058002	Armrest - 2nd Row (Remove & Replace)	0.15	Model Y
13058012	Closeout - Armrest - 2nd Row (Remove & Replace)	0.1	Model Y
13058102	Shoulder Switch - Seat Back - 2nd Row - LH (Remove and Replace)	0.05	Model Y
13058202	Shoulder Switch - Seat Back - 2nd Row - RH (Remove and Replace)	0.05	Model Y
13058302	Backrest Switch - Seat Back - 2nd Row - Center (Remove and Replace)	0.05	Model Y
13059252	Adjustment Guide - Headrest - 2nd Row (Remove and Replace)	0.05	Model Y
13059452	Guide Lock - Headrest - 2nd Row (Remove and Replace)	0.05	Model Y
13059502	Lumbar Bun - 2nd Row (Remove and Replace)	0.1	Model Y
13060012	Bolster - Seat Cushion - 3rd Row - LH (Remove & Replace)	0.1	Model Y
13060022	Bolster - Seat Cushion - 3rd Row - RH (Remove & Replace)	0.1	Model Y
13060032	Cushion - Seat - 3rd Row (Remove & Replace)	0.1	Model Y
13060042	USB Hub - Seat - 3rd Row (Remove & Replace)	0.1	Model Y
13060052	NVH Insulator - 3rd Row Seat (Remove & Replace)	0.5	Model Y
13061202	Seat Backs - 3rd Row (Remove & Replace)	0.35	Model Y
13062102	Shoulder Switch - Seat Back - 3rd Row - LH (Remove & Replace)	0.05	Model Y
13062202	Shoulder Switch - Seat Back - 3rd Row - RH (Remove & Replace)	0.05	Model Y
13064002	Back Panel - 3rd Row Seat - LH (Remove & Replace)	0.05	Model Y



13064102	Back Panel - 3rd Row Seat - RH (Remove & Replace)	0.05	Model Y
13064302	Headrest - 3rd Row Seat - LH (Remove & Replace)	0.05	Model Y
13064402	Headrest - 3rd Row Seat - RH (Remove & Replace)	0.05	Model Y
13070101	Trim and Foam Assembly - Driver Seat (Remove & Install)	0.1	Model Y
13070102	Foam - Cushion - Driver Seat (Remove & Replace)	0.8	Model Y
13070202	Foam - Cushion - Front Passenger Seat (Remove & Replace)	0.8	Model Y
13072002	Trim - Seat Back - Driver Seat (Remove & Replace)	0.65	Model Y
13072202	Trim - Cushion - Driver Seat (Remove & Replace)	0.5	Model Y
13072302	Trim - Cushion - Front Passenger Seat (Remove & Replace)	0.5	Model Y
13072402	Cover - Seat Side -1st Row- LH (Remove and Replace)	0.1	Model Y
13072502	Diamond Cover - Seat Side -1st Row - RH (Remove and Replace)	0.2	Model Y
13072602	Foam - Seat Back - Driver Seat (Remove & Replace)	0.65	Model Y
13072702	Foam - Seat Back - Front Passenger Seat (Remove & Replace)	0.65	Model Y
13074001	Cover - Outer Side - Driver Seat (Remove & Install)	0.1	Model Y
13074101	Cover - Outer Side - Passenger Seat (Remove & Install)	0.1	Model Y
13074202	Side Shield - Outboard - Driver Seat (Remove & Replace)	0.1	Model Y
13074302	Side Shield - Outboard - Front Passenger Seat (Remove & Replace)	0.1	Model Y
13074602	Side Shield - Inboard - Driver Seat (Remove & Replace)	0.05	Model Y
13074702	Side Shield - Inboard - Front Passenger Seat (Remove & Replace)	0.05	Model Y
13080012	Cover - Toe Kick - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.05	Model Y
13080022	Cover - Toe Kick - 2nd Row Seat - RH (7-Seat) (Remove and Replace)	0.05	Model Y
13080032	Trim - Cushion - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.8	Model Y
13080042	Trim - Cushion - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.6	Model Y
13080052	Side Shield Sub-Assembly - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.05	Model Y
13081002	Cover - Seat Back - 2nd Row Seat - RH (Remove & Replace)	0.4	Model Y
13081102	Cover - Seat Back - 2nd Row Seat - LH (Remove & Replace)	0.45	Model Y
13082002	Cup Holder - 2nd Row (Remove & Replace)	0.05	Model Y
13082302	Back Panel – 2nd Row Seat – LH (Remove & Replace)	0.05	Model Y
13082312	Back Panel – 2nd Row Seat – RH (Remove & Replace)	0.05	Model Y
13082322	Back Panel – 2nd Row Seat – Center (Remove & Replace)	0.05	Model Y
13084102	B-Cover - Outer - 2nd Row - LH (Remove and Replace)	0.1	Model Y
13084202	B-Cover - 2nd Row - Inner - LH (Remove and Replace)	0.1	Model Y
13084212	B-Cover - 2nd Row - Inner - LH (7-Seat) (Remove & Replace)	0.55	Model Y
13084302	B-Cover - 2nd Row - Outer - RH (Remove and Replace)	0.1	Model Y
13084312	B-Cover - Outer - 2nd Row - RH (7-Seat) (Remove & Replace)	0.05	Model Y
13084402	B-Cover - 2nd Row - Ininner - RH (Remove and Replace)	0.25	Model Y
13084502	B-Cover - 2nd Row - Outer - Center (Remove and Replace)	0.1	Model Y
13084602	B-Cover - Inner - 2nd Row - Center (Remove & Replace)	0.15	Model Y
13089502	Foam - Cushion - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.8	Model Y
13090012	B-Cover - Inner - 3rd Row - LH (Remove & Replace)	0.5	Model Y
13090022	B-Cover - Inner - 3rd Row - RH (Remove & Replace)	0.45	Model Y
13090032	Substrate - Seat Back - 3rd Row - LH (Remove & Replace)	0.35	Model Y
13090042	Substrate - Seat Back - 3rd Row - RH (Remove & Replace)	0.35	Model Y
13090052	B-Cover - Outer - 3rd Row - LH (Remove & Replace)	0.25	Model Y
13090062	B-Cover - Outer - 3rd Row - RH (Remove & Replace)	0.25	Model Y
13090072	Cover - Seat Back - 3rd Row - LH (Remove & Replace)	0.4	Model Y
13090082	Cover - Seat Back - 3rd Row - RH (Remove & Replace)	0.4	Model Y
13090092	B-Cover - Outer - 3rd Row - Center (Remove & Replace)	0.1	Model Y
13090102	B-Cover - Inner - 3rd Row - Center (Remove & Replace)	0.4	Model Y
13092012	Liner - Cup Holder - Seat - 3rd Row (Remove & Replace)	0.05	Model Y
13092022	Closeout - Cup Holder - Seat - 3rd Row (Remove & Replace)	0.05	Model Y
13093102	Headrest Closeout - 3rd Row Seat - LH (Remove & Replace)	0.05	Model Y
13093202	Headrest Closeout - 3rd Row Seat - RH (Remove & Replace)	0.05	Model Y
14050022	Gap Hider - Steering Column - Lower (Remove & Replace)	0.3	Model Y
14050072	Gap Hider - Steering Column - Upper (Remove & Replace)	0.25	Model Y
14050082	Riser - Instrument Panel (Remove & Replace)	0.1	Model Y
14050092	NVH Pad - Instrument Panel - Upper (Remove & Replace)	1.65	Model Y
14051001	Glove Box (Remove & Install)	0.45	Model Y
14051002	Glove Box (Remove & Replace)	0.45	Model Y
14051012	Glove Box (Without Knee Airbags) (Remove & Replace)	0.2	Model Y
14051102	Solenoid - Glove Box (Remove & Replace)	0.5	Model Y
14051202	Damper - Glove Box (Remove & Replace)	0.5	Model Y

14051302	NVH Pad - Glove Box (Remove & Replace)	0.4	Model Y
14051502	Defrost Cover - Instrument Panel - LH (Remove & Replace)	1.6	Model Y
14051602	Defrost Cover - Instrument Panel - RH (Remove & Replace)	1.6	Model Y
14052102	IP Carrier/Cover (Remove & Replace)	2	Model Y
14052202	Cross Car Beam (Remove & Replace)	2.35	Model Y
14053102	Vent - Front - LH (Remove & Replace)	0.2	Model Y
14053202	Vent - Front - RH (Remove & Replace)	0.2	Model Y
14053702	Shroud - Upper - Steering Column (Remove & Replace)	0.25	Model Y
14054102	End Cap - Instrument Panel - LH (Remove & Replace)	0.05	Model Y
14054202	End Cap - Instrument Panel - RH (Remove & Replace)	0.05	Model Y
14054701	Grille - Speaker - Instrument Panel (Remove & Install)	0.2	Model Y
14054702	Grille - Speaker - Instrument Panel (Remove & Replace)	0.2	Model Y
14055002	Skin - Dash - Lower (Remove & Replace)	0.1	Model Y
14055102	End Cap - Air Wave - LH (Remove & Replace)	0.05	Model Y
14055202	End Cap - Air Wave - RH (Remove & Replace)	0.05	Model Y
14055302	Cover - Footwell - Driver (Remove & Replace)	0.1	Model Y
14055402	Cover - Footwell - Passenger (Remove & Replace)	0.05	Model Y
14056002	Cover - Knee Airbag - Driver (Remove & Replace)	0.3	Model Y
14056102	Cover - Knee Airbag - Front Passenger (Remove & Replace)	0.3	Model Y
14057002	Decor - Instrument Panel - Main (Remove & Replace)	0.1	Model Y
14057502	Finisher - Vent (Remove & Replace)	0.2	Model Y
14057802	Housing - Center Display (Remove & Replace)	0.2	Model Y
15050202	Mirror - Rear View (Remove & Replace)	0.05	Model Y
15050402	Assembly - Mirror - Sun Visor - LH (Remove & Replace)	0.1	Model Y
15050702	Assembly - Mirror - Sun Visor - RH (Remove & Replace)	0.1	Model Y
15050902	Quad Camera Cover - Lower (Remove & Replace)	0.05	Model Y
15051002	Sun Visor - Driver (Remove & Replace)	0.05	Model Y
15051072	Check Base - Magnetic - Sun Visor - Driver (Remove & Replace)	0.05	Model Y
15051172	Check Base - Magnetic - Sun Visor - Front Passenger (Remove & Replace)	0.05	Model Y
15051202	Sun Visor - Front Passenger (Remove & Replace)	0.1	Model Y
15051302	Triple Cam Hood (Remove & Replace)	0.05	Model Y
15051802	Quad Camera Cover - Upper (Remove & Replace)	0.05	Model Y
15110012	Bracket - Side Trim - Liftgate - LH (Remove & Replace)	0.05	Model Y
15111002	Trim - Upper - Liftgate (Remove & Replace)	0.05	Model Y
15111107	Garnish - Trunk (Modify)	0.1	Model Y
15111302	Trim - Liftgate - Lower (Remove & Replace)	0.05	Model Y
15111901	Trim - Lid - Trunk (Remove & Install)	0.05	Model Y
15111902	Trim - Lid - Trunk (Remove & Replace)	0.05	Model Y
15112102	Grille - Speaker - Liftgate - LH (Remove & Replace)	0.1	Model Y
15112202	Grille - Speaker - Liftgate - RH (Remove & Replace)	0.1	Model Y
15113629	Model Y Trunk Retrofit for HK	0.45	Model Y
15130201	Panel - Door Trim - Front - LH (Remove & Install)	0.2	Model Y
15130202	Panel - Door Trim - Front - LH (Remove & Replace)	0.15	Model Y
15130301	Panel - Door Trim - Front - RH (Remove & Install)	0.2	Model Y
15130302	Panel - Door Trim - Front - RH (Remove & Replace)	0.15	Model Y
15130602	Reflector - Door Trim - Front - LH (Remove & Replace)	0.05	Model Y
15130702	Reflector - Door Trim - Front - RH (Remove & Replace)	0.05	Model Y
15131002	Decor - Trim - Front Door - LH (Remove & Replace)	0.05	Model Y
15131102	Decor - Trim - Front Door - RH (Remove & Replace)	0.05	Model Y
15131402	NVH Pad - Panel - Door Trim - Front - LH (Remove & Replace)	0.1	Model Y
15131502	NVH Pad - Panel - Door Trim - Front - RH (Remove & Replace)	0.1	Model Y
15132001	Panel - Door Trim - Rear - LH (Remove & Install)	0.2	Model Y
15132002	Panel - Door Trim - Rear - LH (Remove & Replace)	0.1	Model Y
15132101	Panel - Door Trim - Rear - RH (Remove & Install)	0.2	Model Y
15132102	Panel - Door Trim - Rear - RH (Remove & Replace)	0.1	Model Y
15132702	NVH Pad - Panel - Door Trim - Rear - LH (Remove & Replace)	0.1	Model Y
15132802	NVH Pad - Panel - Door Trim - Rear - RH (Remove & Replace)	0.1	Model Y
15180032	Bezel - Seatbelt - C-Pillar - LH (Remove & Replace)	0.05	Model Y
15180042	Bezel - Seatbelt - C-Pillar - RH (Remove & Replace)	0.05	Model Y
15180152	Bracket - Harness - Sill Panel - Front - LH (Remove and Replace)	0.05	Model Y
15180252	Bracket - Harness - Sill Panel - Front - RH (Remove and Replace)	0.05	Model Y
15180502	Trim - C-Pillar - Lower - LH (5 Seat) (Remove & Replace)	0.1	Model Y

15180512	Trim - Sill Panel - Rear - LH (7 Seat) (Remove & Replace)	0.05	Model Y
15180602	Trim - C-Pillar - Lower - RH (5 Seat) (Remove & Replace)	0.1	Model Y
15180612	Trim - Sill Panel - Rear - RH (7 Seat) (Remove & Replace)	0.05	Model Y
15182402	Trim - A-Pillar - Lower - LH (Remove & Replace)	0.05	Model Y
15182502	Trim - A-Pillar - Lower - RH (Remove & Replace)	0.05	Model Y
15182602	Trim - A-Pillar - Middle - LH (Remove & Replace)	0.05	Model Y
15182702	Trim - A-Pillar - Middle - RH (Remove & Replace)	0.05	Model Y
15183002	Trim - B-Pillar - Upper - LH (Remove & Replace)	0.05	Model Y
15183102	Trim - B-Pillar - Upper - RH (Remove & Replace)	0.05	Model Y
15183402	Trim - B-Pillar - Lower - LH (Remove & Replace)	0.1	Model Y
15183412	Trim - B-Pillar - Lower - LH (Structural Pack) (Remove & Replace)	0.05	Model Y
15183422	Trim - B-Pillar - Mid - LH (Structural Pack) (Remove & Replace)	0.1	Model Y
15183502	Trim - B-Pillar - Lower - RH (Remove & Replace)	0.1	Model Y
15183512	Trim - B-Pillar - Lower - RH (Structural Pack) (Remove & Replace)	0.05	Model Y
15183522	Trim - B-Pillar - Mid - RH (Structural Pack) (Remove & Replace)	0.1	Model Y
15183702	Ramp - Airbag - B-Pillar - LH (Remove & Replace)	0.55	Model Y
15183802	Ramp - Airbag - B-Pillar - RH (Remove & Replace)	0.55	Model Y
15184001	Trim - A-Pillar - Upper - LH (Remove & Install)	0.05	Model Y
15184002	Trim - A-Pillar - Upper - LH (Remove & Replace)	0.05	Model Y
15184101	Trim - A-Pillar - Upper - RH (Remove & Install)	0.05	Model Y
15184102	Trim - A-Pillar - Upper - RH (Remove & Replace)	0.05	Model Y
15185002	Footrest - Driver (Remove & Replace)	0.1	Model Y
15185102	Trim - C-Pillar - Rear - LH (Remove & Replace)	0.2	Model Y
15186002	Trim - C-Pillar - Upper - LH (Remove & Replace)	0.3	Model Y
15186102	Trim - C-Pillar - Upper - RH (Remove & Replace)	0.3	Model Y
15186402	Bracket - C-Pillar - LH (Remove & Replace)	0.25	Model Y
15186602	Trim - Side Rail - LH (Remove & Replace)		Model Y
15190101	Center Console Assembly (Remove & Install)	0.4	Model Y
15190102	Center Console Assembly (Remove & Replace)	0.4	Model Y
15190121	Center Console (Structural Pack) (Remove & Install)	0.25	Model Y
15190122	Center Console (Structural Pack) (Remove & Replace)	0.25	Model Y
15190202	Bright Strip - Center Console - LH (Remove & Replace)	0.1	Model Y
15190302	Bright Strip - Center Console - RH (Remove & Replace)	0.1	Model Y
15190401	Decor Trim - Cup Holder - Center Console (Remove & Install)	0.3	Model Y
15190402	Decor Trim - Cup Holder - Center Console (Remove & Replace)	0.3	Model Y
15190411	Decor Trim - Cup Holder - Center Console (2nd Generation) (Remove & Install)	0.25	Model Y
15190412	Decor Trim - Cup Holder - Center Console (2nd Generation) (Remove & Replace)	0.25	Model Y
15190502	Air Vent - Center Console (Remove & Replace)	0.1	Model Y
15190602	Switch - Light - Center Console (Remove & Replace)	0.1	Model Y
15190702	Panel - Air Vent - Center Console (Remove & Replace)	0.05	Model Y
15191802	Cup Holder (Remove & Replace)	0.35	Model Y
15191812	Cup Holder (2nd Generation) (Remove & Replace)	0.3	Model Y
15191822	Liner - Cup Holder - Center Console (2nd Generation) (Remove & Replace)	0.25	Model Y
15191832	Sliding Lid - Center Console (Remove & Replace)	0.65	Model Y
15191902	Trim - Center Console - Front (Remove & Replace)	0.55	Model Y
15192002	Trim - Center Console - Rear (Remove & Replace)	0.05	Model Y
15192502	Armrest - Center Console (Remove & Replace)	0.2	Model Y
15193602	Decor Trim - Center Console - LH (Remove & Replace)	0.05	Model Y
15193702	Decor Trim - Center Console - RH (Remove & Replace)	0.05	Model Y
15193902	Module - Inductive Charger - Center Console (2nd Generation) (Remove & Replace)	0.15	Model Y
15195002	End Panel - Center Console (Remove & Replace)	0.1	Model Y
15195202	Panel - Lower Rear - Center Console (Remove & Replace)	0.5	Model Y
15195402	Carpet - Side Panel - Center Console (Remove & Replace)	0.1	Model Y
15195602	Insert - Front Bin - Center Console (Remove & Replace)	0.65	Model Y
15196202	Front Bin Door (Remove & Replace)	0.1	Model Y
15196402	Phone Tray - Center Console (Remove & Replace)	0.05	Model Y
15196502	Phone Dock Bar - Center Console (Remove and Replace)	0.05	Model Y
15196802	Side Panel - Center Console - LH (Remove & Replace)	0.05	Model Y
15196902	Side Panel - Center Console - RH (Remove & Replace)	0.05	Model Y
15197105	Remove Console Storage boxes(X2) (China Only)	0.01	Model Y
15198102	Rail - Lower - Center Console - LH (Structural Pack) (Remove & Replace)	0.25	Model Y
15198202	Rail - Lower - Center Console - RH (Structural Pack) (Remove & Replace)	0.25	Model Y

15201001	Headliner - Solid Roof (Remove & Install)		Model Y
15202302	Overhead Console - Front (Remove & Replace)	0.1	Model Y
15202402	Overhead Console - Rear (Remove & Replace)	0.05	Model Y
15204001	Headliner - Front (Remove and Install)	0.55	Model Y
15204002	Headliner - Front (Remove & Replace)	0.55	Model Y
15204101	Headliner - Rear (Remove and Install)	0.8	Model Y
15204102	Headliner - Rear (Remove & Replace)	0.8	Model Y
15204302	Coat Hook - Rear - LH (Remove & Replace)	0.7	Model Y
15204402	Coat Hook - Rear - RH (Remove & Replace)	0.7	Model Y
15240042	Tie Down - Rear - RH (Remove & Replace)	0.25	Model Y
15240052	Tie Down - Rear - LH (Remove & Replace)	0.2	Model Y
15240062	Tie Down - Front - RH (Remove & Replace)	0.25	Model Y
15240072	Tie Down - Front - LH (Remove & Replace)	0.25	Model Y
15240701	Underhood Storage Unit (Remove & Install)	0.1	Model Y
15240702	Underhood Storage Unit (Remove & Replace)	0.1	Model Y
15241002	Access Panel - Underhood Storage Unit (Remove and Replace)	0.05	Model Y
15241102	Hood Latch Cover (Remove & Replace)	0.1	Model Y
15241402	Switch - Underhood Storage Area - Child Safety (Remove & Replace)	0.05	Model Y
15243002	Trim - Package Tray (Remove & Replace)	0.3	Model Y
15243102	Flip Door - Tether Anchor - LH (Remove and Replace)	0.3	Model Y
15243202	Flip Door - Tether Anchor - Center (Remove and Replace)	0.3	Model Y
15243302	Flip Door - Tether Anchor - RH (Remove and Replace)	0.3	Model Y
15244802	Trim - Sill - Trunk (Remove & Replace)	0.05	Model Y
15245002	Trim - Side - Trunk - LH (Remove & Replace)	0.2	Model Y
15245102	Trim - Side - Trunk - RH (Remove & Replace)	0.2	Model Y
15245302	Trim - Floor - Rear Trunk (Remove & Replace)	0.1	Model Y
15245402	Carpet - Rear Trunk (Remove & Replace)	0.05	Model Y
15245702	Folding Parcel Shelf - Rear Trunk (Remove & Replace)	0.05	Model Y
15247002	Trunk Assembly - Lower (Remove and Replace)	0.25	Model Y
15301001	Carpet - Front - LH (Remove & Replace)	0.55	Model Y
15301101	Carpet - Front - RH (Remove & Replace)	0.55	Model Y
15301122	Carpet - Front - RH (Structural Pack) (Remove & Replace)	0.25	Model Y
15301132	Carpet - Front - LH (Structural Pack) (Remove & Replace)	0.25	Model Y
15301152	Carpet - Front - LH (7-Seat) (Remove & Replace)	0.6	Model Y
15301902	Floor Mat Set (Remove & Replace)	0.05	Model Y
15302002	Carpet - Underhood Storage (Remove & Replace)	0.1	Model Y
15302102	Carpet - Interior Complete (Remove & Replace)	0.1	Model Y
15303002	Carpet - Front - LH (Remove & Replace)	0.1	Model Y
15303102	Carpet - Front - RH (Remove & Replace)	0.1	Model Y
15303112	Carpet - Front - RH (7-Seat) (Remove & Replace)	0.55	Model Y
15303202	Carpet - Rear (Remove & Replace)	0.85	Model Y
15303212	Carpet - 2nd Row (7-Seat) (Remove & Replace)	0.85	Model Y
15305002	Trunk Load Floor - Front (Remove & Replace)	0.05	Model Y
15305102	Trunk Load Floor - Rear (Remove and Replace)	0.05	Model Y
15305202	Bracket - Trunk Load Floor - LH (Remove and Replace)	0.4	Model Y
15305302	Bracket - Trunk Load Floor - RH (Remove and Replace)	0.35	Model Y
15306102	Bracket - Trunk Pocket - LH (Remove and Replace)	0.05	Model Y
15306202	Bracket - Trunk Pocket - RH (Remove and Replace)	0.05	Model Y
15306302	Support - Carpet - LH (Structural Pack) (Remove & Replace)	0.15	Model Y
15306402	Support - Carpet - RH (Structural Pack) (Remove & Replace)	0.1	Model Y
15308102	Carpet - 3rd Row (Remove & Replace)	0.45	Model Y
15308402	Insulator - Dash (Remove & Replace)	4.75	Model Y
16010101	HV Battery (Remove & Install)	3.55	Model Y
16010102	HV Battery (Remove & Replace)	4.3	Model Y
16010201	HV Battery (Dual Motor) (Remove & Install) (Add Coolant 1029320-00 if Needed)	3.3	Model Y
16010202	HV Battery (Dual Motor) (Remove & Replace)	4.4	Model Y
16010211	HV Battery (Dual Motor) (Structural Pack) (Remove & Install)	3.8	Model Y
16010212	HV Battery (Dual Motor) (Structural Pack) (Remove & Replace)	4.9	Model Y
16010806	Access Ports - Shipping Crate - HV Battery (Retrofit)	0.01	Model Y
16011002	Flood Port - LH (Remove & Replace)	0.7	Model Y
16011012	Retainer - Flood Port - LH (Remove & Replace)	0.95	Model Y
16011102	Flood Port - RH (Remove & Replace)	1.1	Model Y

16011908	Inspection for Vehicle Soaking in Water (CN Only)	1.7	Model Y
16014212	Replace HV Battery and Reapply Adhesive	4.65	Model Y
16015300	Discharge HV Battery (At Pack Contactors)	0.8	Model Y
16015400	Discharge HV Battery (Smart CAN Off)	0.8	Model Y
16100032	Thermal Vent (Structural Pack) (Remove & Replace)	0.5	Model Y
16100400	Penthouse Air Leak Test	0.3	Model Y
16100420	Penthouse Air Leak Test (Structural Pack)	0.55	Model Y
16101001	Cover - Penthouse (Remove & Install)	0.9	Model Y
16101002	Cover - Penthouse (Remove & Replace)	0.9	Model Y
16101031	Cover - Penthouse (7-Seat) (Remove & Install)	0.95	Model Y
16101032	Cover - Penthouse (7-Seat) (Remove & Replace)	0.95	Model Y
16101042	Cover - Penthouse (Structural Pack) (Remove & Replace)	1.35	Model Y
16101601	Cover - HV Probe - HV Battery (Remove & Install)	0.3	Model Y
16101602	Cover - HV Probe - HV Battery (Remove & Replace)	0.3	Model Y
16102000	Platter Enclosure Air Leak Test	0.4	Model Y
16102001	Skid Plate - HV Battery - Front (Remove & Install)	0.3	Model Y
16102002	Skid Plate - HV Battery - Front (Remove & Replace)	0.3	Model Y
16102010	Platter Enclosure Coolant Leak Test	1.15	Model Y
16102020	Platter Enclosure Coolant (Drain and Refill) (Add Coolant 1029320-00 if Needed)	0.1	Model Y
16102030	Platter Enclosure Air Leak Test (Structural Pack)	0.5	Model Y
16102100	HV Battery Air Leak Test	0.55	Model Y
16102102	Vent Assembly - HV Battery - LH (Remove & Replace)	0.65	Model Y
16102112	Vent Assembly - HV Battery - RH (Remove & Replace)	0.6	Model Y
16102120	HV Battery Air Leak Test (Structural Pack)	0.65	Model Y
16102201	Skid Plate - HV Battery - Rear (Remove & Install)	0.4	Model Y
16102202	Skid Plate - HV Battery - Rear (Remove & Replace)	0.4	Model Y
16102302	Breathers - HV Battery (Remove & Replace)	0.25	Model Y
16102602	Ski - Center Rail - HV Battery (Remove & Replace) (Add Coolant 1029320-00 if Needed)	1.25	Model Y
16102612	Ski - Center Rail - HV Battery (Dual Motor) (Remove & Replace)	1.4	Model Y
16102702	Flood Ports - 2nd Generation (Remove & Replace)	0.65	Model Y
16102722	Flood Port - Rear (Structural Pack) (Remove & Replace)	0.75	Model Y
16103002	Gasket - Cover - HV Battery (Remove & Replace)	3.2	Model Y
16103101	Compression Strips - Cover - HV Battery (Install)	0.15	Model Y
16200200	Penthouse Coolant Leak Test (Add Coolant 1029320-00 if Needed)	0.1	Model Y
16200505	Coolant - HV Battery (Drain and Refill) (Add Coolant 1029320-00 if Needed)	0.9	Model Y
16202000	Penthouse Coolant (Drain and Refill) (Add Coolant 1029320-00 if Needed)	1.9	Model Y
16202001	Tube - Input - Coolant - Power Conversion System (Remove & Install) (Add Coolant 1029320-00 if Needed)	2.7	Model Y
16202002	Tube - Input - Coolant - Power Conversion System (Remove & Replace) (Add Coolant 1029320-00 if Needed)	2.7	Model Y
16202201	Tube - Output - Coolant - Power Conversion System (Remove & Install) (Add Coolant 1029320-00 if Needed)	2.1	Model Y
16202202	Tube - Output - Coolant - Power Conversion System (Remove & Replace) (Add Coolant 1029320-00 if Needed)	2.1	Model Y
16202302	Hose - Return - Coolant - Power Conversion System (Structural Pack) (Remove & Replace)	2.6	Model Y
16202402	Hose - Supply - Coolant - Power Conversion System (Structural Pack) (Remove & Replace)	2.6	Model Y
16300002	Pyrotechnic Battery Disconnect (Remove & Replace)	0.95	Model Y
16300052	Cover - Pyrotechnic - HV Battery (Remove & Replace)	2.5	Model Y
16300092	Pyrotechnic Battery Disconnect (Structural Pack) (Remove & Replace)	0.7	Model Y
16300100	Resistance Meter (Zero Adjust)	0.01	Model Y
16300500	HV Integrity Check - HV Battery	0.1	Model Y
16301002	Power Conversion System (Remove & Replace)	2.55	Model Y
16301012	Power Conversion System (Structural Pack) (Remove & Replace)	2.95	Model Y
16301102	HV Harness - Heat Pump - HV Battery (Structural Pack) (Remove & Replace)	1.7	Model Y
16301602	Controller - High Voltage (Remove & Replace)	1.15	Model Y
16301611	Support Hinge - Controller - High Voltage (Remove & Install)	1.2	Model Y
16301612	Support Hinge - Controller - High Voltage (Remove & Replace)	1.2	Model Y
16301621	Hinge Tray - Controller - High Voltage (Remove & Install)	1.1	Model Y
16301622	Hinge Tray - Controller - High Voltage (Remove & Replace)	1.1	Model Y
16301632	Controller - High Voltage (Structural Pack) (Remove & Replace)	1.6	Model Y
16301702	HV Header Doubler - DC Input - HV Battery (Structural Pack) (Remove & Replace)	0.75	Model Y
16302001	Insulators - HV Battery (Remove & Install)	0.05	Model Y
16302002	Contact - Negative - HV Battery (Remove & Replace)	0.9	Model Y
16302012	Contact - Negative - HV Battery (Structural Pack) (Remove & Replace)	1.65	Model Y
16302101	Contact - Negative - HV Battery (Remove & Install)	0.9	Model Y
16302102	Contact - Positive - HV Battery (Remove and Replace)	2.65	Model Y

16302112	Contactors - Positive - HV Battery (Structural Pack) (Remove & Replace)	1.65	Model Y
16302201	Power Switch - HV Battery - Positive (Remove & Install)	2.65	Model Y
16302401	DC Input Assembly - HV Battery (Busbar Type) (Remove & Install)	1.3	Model Y
16302402	DC Input Assembly - HV Battery (Busbar Type) (Remove & Replace)	1.3	Model Y
16302601	Contactors - Fast Charge - HV Battery (Remove & Install)	2.5	Model Y
16302602	Contactors - Fast Charge - HV Battery (Remove & Replace)	2.5	Model Y
16303001	Busbar - HV Battery - Negative (Remove & Install)	0.1	Model Y
16303002	Busbar - HV Battery - Negative (Remove & Replace)	0.1	Model Y
16303101	Busbar - HV Battery - Positive (Remove & Install)	1	Model Y
16303102	Busbar - HV Battery - Positive (Remove & Replace)	1	Model Y
16303602	Shunt - HV Battery (Remove & Replace)	1.2	Model Y
16303611	Insulator - Shunt - HV Battery (Remove & Install)	0.9	Model Y
16303612	Insulator - Shunt - HV Battery (Remove & Replace)	0.9	Model Y
16303621	Cover - Busbar - Shunt - HV Battery (Remove & Install)	2.5	Model Y
16303622	Cover - Busbar - Shunt - HV Battery (Remove & Replace)	2.5	Model Y
16303632	Shunt - HV Battery (Structural Pack) (Remove & Replace)	2.05	Model Y
16303801	Guide - Probing - HV Battery (Remove & Install) (Add Coolant 1029320-00 if Needed)	2.15	Model Y
16303802	Guide - Probing - HV Battery (Remove & Replace) (Add Coolant 1029320-00 if Needed)	2.15	Model Y
16304001	Fuse - HV Battery - Cabin Heater (Remove & Install)	0.9	Model Y
16304002	Fuse - HV Battery - Cabin Heater (Remove & Replace)	0.9	Model Y
16304012	Fuse - Heat Pump - HV Battery (Structural Pack) (Remove & Replace)	1.5	Model Y
16304102	Seal - Penthouse Cover Gasket - HV Battery (Remove and Replace)	0.25	Model Y
16304201	Fuse - HV Battery - A/C Compressor (Remove & Install)	0.9	Model Y
16304202	Fuse - HV Battery - A/C Compressor (Remove & Replace)	0.9	Model Y
16304401	Fuse - Power Conversion System - HV Battery (Remove & Install)	1	Model Y
16304402	Fuse - Power Conversion System - HV Battery (Remove & Replace)	1	Model Y
16305001	Harness - HV Battery - High Voltage Controller (Remove & Install) (Add Coolant 1029320-00 if Needed)	3.2	Model Y
16305002	Harness - HV Battery - High Voltage Controller (Remove & Replace) (Add Coolant 1029320-00 if Needed)	3.2	Model Y
16305101	Harness - HV Battery - PCS to HV Modules (Remove & Install)	0.1	Model Y
16305102	Harness - HV Battery - PCS to HV Modules (Remove & Replace)	0.1	Model Y
16305201	Harness - HV Battery - PCS to Charge Port Connector (Remove & Install)	0.1	Model Y
16305202	Harness - HV Battery - PCS to Charge Port Connector (Remove & Replace)	0.1	Model Y
16305301	Harness - HV Battery - Fast Charge (Remove & Install) (Add Coolant 1029320-00 if Needed)	0.1	Model Y
16305302	Harness - HV Battery - Fast Charge (Remove & Replace) (Add Coolant 1029320-00 if Needed)	0.1	Model Y
16305312	Harness - AC Filter - HV Battery (Structural Pack) (Remove & Replace)	1.55	Model Y
16306001	Passthrough - DCDC - 12V (Remove & Install)	1.15	Model Y
16306002	Passthrough - DCDC - 12V (Remove & Replace)	1.15	Model Y
16306102	HV Header - Front Drive Unit - HV Battery (Remove & Replace)	0.8	Model Y
16306202	HV Header - PTC Heater and A/C Compressor - HV Battery (Remove and Replace)	0.9	Model Y
16306302	HV Header - Rear Drive Unit - HV Battery (Remove & Replace)	0.8	Model Y
16307202	Busbar - Outlet - Positive - Fast Charge - HV Battery (Structural Pack) (Remove & Replace)	1.65	Model Y
16307302	Busbar - Auxiliary Fuse - HV Battery (Structural Pack) (Remove & Replace)	2	Model Y
16307402	Busbar - Inlet - Negative - Fast Charge - HV Battery (Structural Pack) (Remove & Replace)	1.6	Model Y
16307502	Busbar - Outlet - Negative - Fast Charge - HV Battery (Structural Pack) (Remove & Replace)	1.65	Model Y
16307602	Busbar - Inlet - Positive - Fast Charge - HV Battery (Structural Pack) (Remove & Replace)	1.6	Model Y
16309000	HV Battery Contactor Seize Check	0	Model Y
16900308	HV Battery Damage Evaluation (Reman)	1	Model Y
16900508	HV Battery Safety Check (Reman)	1	Model Y
16901008	HV Battery Standard Remanufacturing (Reman)	7.45	Model Y
16902008	HV Battery Capacity Test (Reman)	1	Model Y
16903108	HV Battery Coolant Leak Rectification (Reman)	1	Model Y
16903308	Umbrella Valves - HV Battery (Reman)	0.15	Model Y
16903708	Ski - Side Rail - HV Battery - LH (Reman)	0.25	Model Y
16903808	Ski - Side Rail - HV Battery - RH (Reman)	0.25	Model Y
16904008	Enclosure - HV Battery - Remanufactured (Reman)	5.35	Model Y
16904208	Enclosure - HV Battery - New (Reman)	4.6	Model Y
16904508	Baffle - Vent - HV Battery (Reman)	0.15	Model Y
16905008	Battery Management System (BMS) (Reman)	0.45	Model Y
16905208	Spine - HV Battery (Reman)	1.45	Model Y
16906008	Modules - HV Battery - Inspection (Reman)	0.6	Model Y
16906208	Modules - HV Battery - Upper (Reman)	0.25	Model Y
16906408	Modules - HV Battery - Lower (Reman)	0.7	Model Y

17010000	Vehicle Electrical Isolation Procedure	0.45	Model Y
17010010	Vehicle Electrical Isolation Procedure (7-Seater)	0.45	Model Y
17010020	Vehicle Electrical Isolation Procedure (Structural Pack)	0.45	Model Y
17010200	12V Power (Lead Acid) (Disconnect & Connect)	0.05	Model Y
17010402	Fuse Holder - Positive Terminal - 12V Battery (Remove & Replace)	0.1	Model Y
17010410	LV Power (Li-Ion) (Disconnect & Connect)	0.05	Model Y
17010500	LV Maintainer (Connect & Disconnect)	0.05	Model Y
17011002	Vent Hose - 12V Battery (Remove & Replace)	0.1	Model Y
17011202	Battery - 12V (Lead Acid) (Remove & Replace)	0.1	Model Y
17011232	Battery - LV (Li-Ion) (Remove & Replace)	0.15	Model Y
17012702	Beam - 12V Battery (RWD) (Remove & Replace)	0.1	Model Y
17012712	Beam - 12V Battery (Dual Motor) (Remove & Replace)	1.3	Model Y
17014002	Bracket - 12V Battery (RWD) (Remove & Replace)	0.5	Model Y
17014012	Bracket - 12V Battery (Dual Motor) (Remove & Replace)	1.3	Model Y
17014202	Strap - 12V Battery (Remove & Replace)	0.1	Model Y
17044828	ETC Remove and Replace for China		Model Y
17048099	ETC Installation for China	0.05	Model Y
17100008	Harness Connector - Reconnect	0.1	Model Y
17100010	Harness Connector - Repair (Does Not Include Access Labor)	0.5	Model Y
17100022	Harness - Cushion - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.3	Model Y
17100032	Harness - Seat - 3rd Row (Remove & Replace)	0.5	Model Y
17100042	Harness - Seat Cushion - 3rd Row (Remove & Replace)	0.1	Model Y
17100052	Harness - Steering Wheel (Remove & Replace)	0.1	Model Y
17100062	Harness - Heat Pad - Seat Cushion - 2nd Row (Remove & Replace)	0.1	Model Y
17100072	Harness - 2nd Row Seat - LH (Remove & Replace)	0.15	Model Y
17100082	Harness - 2nd Row Seat - RH (Remove & Replace)	0.15	Model Y
17100092	Harness - Backrest - 2nd Row Seat - Center (Remove & Replace)	0.15	Model Y
17100102	Harness - Front Door - LH (Remove & Replace)	0.6	Model Y
17100142	Harness - Back Rest - 2nd Row Seat - RH (7-Seat) (Remove & Replace)	0.15	Model Y
17100152	Harness - Cushion - 2nd Row Seat - LH (7-Seat) (Remove & Replace)	0.55	Model Y
17100202	Harness - Front Door - RH (Remove & Replace)	0.6	Model Y
17100302	Harness - Center Console (Remove & Replace)	0.5	Model Y
17100602	Harness - Instrument Panel (Remove & Replace)	1.95	Model Y
17100702	Harness - Main Front (Remove & Replace)	3.05	Model Y
17100712	Harness - Main Front (RHD) (Remove and Replace)	4.6	Model Y
17100742	Harness - Main Front (Structural Pack) (Remove & Replace)	3.4	Model Y
17100756	Ground Overlay - Hood Latch - Harness - Main Front (Retrofit)	0.95	Model Y
17100802	Harness - Body - LH (Remove & Replace)	2.5	Model Y
17100902	Harness - Body - RH (Remove & Replace)	2.6	Model Y
17101001	Harness - Windshield (Remove & Replace)	0.5	Model Y
17101002	Harness - Fascia - Front (Remove & Replace)	0.7	Model Y
17101102	Harness - Fascia - Rear (Remove & Replace)	0.6	Model Y
17101202	Harness - Drive Unit - Front (Remove & Replace)	0.35	Model Y
17101302	Harness - Thermal Beam (Remove & Replace)	0.45	Model Y
17101402	Harness - Front End Module (Remove & Replace)	0.4	Model Y
17101802	Harness - Seat - Driver (Remove and Replace)	0.65	Model Y
17101902	Harness - Seat - Front Passenger (Remove and Replace)	0.65	Model Y
17102002	Harness - Subframe - Rear (Includes Alignment Check) (Remove & Replace)	0.95	Model Y
17102012	Jumper Harness - Trailer Hitch (Remove and Replace)	0.6	Model Y
17102102	Jumper Harness - Parking Brake - LH (Remove and Replace)	0.25	Model Y
17102202	Jumper Harness - Parking Brake - RH (Remove and Replace)	0.25	Model Y
17102402	Busbar - DCDC Ground (Remove & Replace)	0.2	Model Y
17102502	Harness - Headliner (Remove & Replace)	0.8	Model Y
17102802	Harness - Rear Door - LH (Remove & Replace)	0.65	Model Y
17102902	Harness - Rear Door - RH (Remove & Replace)	0.65	Model Y
17104102	Harness - HVAC Assembly (Remove & Replace)	3.15	Model Y
17104502	Harness - Trunk (Remove & Replace)	0.6	Model Y
17105006	Wire - Electrical Harness (Does Not Include Access Labor) (Overlay)	0	Model Y
17105008	Wire - Electrical Harness (Does Not Include Access Labor) (Repair)	0	Model Y
17105102	Connector Housing - Electrical Harness (Does Not Include Access Labor) (Remove & Replace)	0.2	Model Y
17105208	Connector Terminal - Electrical Harness (Does Not Include Access Labor) (Repair)	0	Model Y
17105306	Coaxial Cable - Electrical Harness (Does Not Include Access Labor) (Overlay)	0	Model Y

17106002	Harness - 12V Battery + (Remove & Replace)	0.8	Model Y
17106202	Harness - 12V Battery Ground (Remove & Replace)	0.9	Model Y
17106602	Harness - Front Body Controller Module Ground (Remove & Replace)	0.1	Model Y
17106702	Elastic Strap - Harness - 2nd Row Seat - Center (Remove and Replace)	0.1	Model Y
17107102	Harness - Front Subframe (Remove & Replace)	0.3	Model Y
17108100	Low Voltage Circuit Integrity Check	1	Model Y
17150006	Singapore Electronic Road Pricing System (Retrofit)	0.5	Model Y
17150016	Electronic Toll Collection System (Retrofit)	0.5	Model Y
17152102	Module - Body Controller - LH (Remove & Replace)	0.5	Model Y
17152202	Module - Body Controller - RH (Remove & Replace)	0.6	Model Y
17152902	Module - Body Controller - Front (RWD) (Remove & Replace)	0.75	Model Y
17152912	Module - Body Controller - Front (Dual Motor) (Remove & Replace)	0.8	Model Y
17154202	Module - HomeLink Transmitter (Remove & Replace)	0.15	Model Y
17154802	Steering Controller (Remove & Replace)	0.2	Model Y
17200012	Radar - Interior (Remove & Replace)	0.35	Model Y
17201500	Sensor - Radar - Front (Calibration)	0.55	Model Y
17201502	Sensor - Radar - Front (Remove & Replace)	1.15	Model Y
17201702	Heater - Radar (Remove & Replace)	0.7	Model Y
17201706	Heater - Radar (Retrofit)	0.75	Model Y
17201802	Bracket - Radar - Front (Remove & Replace)	1.15	Model Y
17209106	Enable Autopilot Convenience Features (TB Article #13859)	0.4	Model Y
17209116	Enable Highway Autopilot	0	Model Y
17209126	Enable Basic Autopilot (TB Article #13859)	0	Model Y
17209136	Enable Enhanced Autopilot (TB Article #13859)	0	Model Y
17209146	Enable Full Self-Driving (TB Article #13859)	0	Model Y
17230500	Drive Cycle Calibration - Forward Facing Camera	0.5	Model Y
17230600	Camera - Forward Facing (Pitch Verification)	0.1	Model Y
17231002	Camera - Triple - Forward Facing (Remove & Replace)	0.2	Model Y
17241602	Camera - Occupant (Remove & Replace)	0.05	Model Y
17250102	Camera - Rear Facing (Remove & Replace)	0.1	Model Y
17271011	Sensor - Parking Distance - Inner - Front (Remove & Install)	0.55	Model Y
17271012	Sensor - Parking Distance - Inner - Front (Remove & Replace)	0.55	Model Y
17271021	Sensor - Parking Distance - Outer - Front (Remove & Install)	0.2	Model Y
17271022	Sensor - Parking Distance - Outer - Front (Remove & Replace)	0.2	Model Y
17271111	Sensor - Parking Distance - Inner - Rear (Remove & Install)	0.6	Model Y
17271112	Sensor - Parking Distance - Inner - Rear (Remove & Replace)	0.6	Model Y
17271121	Sensor - Parking Distance - Outer - Rear (Remove & Install)	0.05	Model Y
17271122	Sensor - Parking Distance - Outer - Rear (Remove & Replace)	0.1	Model Y
17272682	Retainer - Sensor - Park Assist (Remove & Replace)	0.5	Model Y
17300702	Switch - Steering Wheel - LH (Remove & Replace)	0.25	Model Y
17300802	Switch - Steering Wheel - RH (Remove & Replace)	0.2	Model Y
17303202	Power Socket 12V - Center Console (Remove & Replace)	0.3	Model Y
17351202	Puddle Light - Front Door - LH (Remove & Replace)	0.05	Model Y
17351302	Puddle Light - Front Door - RH (Remove & Replace)	0.05	Model Y
17352202	Puddle Light - Rear Door - LH (Remove & Replace)	0.05	Model Y
17352302	Puddle Light - Rear Door - RH (Remove & Replace)	0.1	Model Y
17355102	Task Light - Footwell Cover - LH (Remove & Replace)	0.05	Model Y
17400100	Headlights - Adjust	0.15	Model Y
17400101	Headlight - LH (Remove & Install)	0.55	Model Y
17400102	Headlight - LH (Remove & Replace)	0.8	Model Y
17400112	Bracket - Headlight - LH (Remove and Replace)	0.8	Model Y
17400150	Headlights - Adjust - NA (Tool Method)	0.15	Model Y
17400160	Headlights - Adjust - Global (Wall Method)	0.1	Model Y
17400170	Headlights - Adjust - Global (Tool Method)	0.15	Model Y
17400201	Headlight - RH (Remove & Install)	0.5	Model Y
17400202	Headlight - RH (Remove & Replace)	0.8	Model Y
17400212	Bracket - Headlight - RH (Remove and Replace)	0.8	Model Y
17400801	ECU - Headlight (Remove & Install)	1	Model Y
17400802	ECU - Headlight (Remove & Replace)	1.3	Model Y
17402001	Tail Light Assembly - LH (Remove & Install)	0.3	Model Y
17402002	Taillight - LH (Remove & Replace)	0.25	Model Y
17402201	Tail Light Assembly - RH (Remove & Install)	0.3	Model Y



17402202	Taillight - RH (Remove & Replace)	0.25	Model Y
17402502	Light - Brake - High Mounted (Remove & Replace)	1.25	Model Y
17402602	Light - License Plate (Remove & Replace)	0.05	Model Y
17402701	Light - Fog/Reverse - Rear - LH (Remove & Install)	0.1	Model Y
17402702	Light - Fog/Reverse - Rear - LH (Remove & Replace)	0.05	Model Y
17402801	Light - Fog/Reverse - Rear - RH (Remove & Install)	0.05	Model Y
17402802	Light - Fog/Reverse - Rear - RH (Remove & Replace)	0.05	Model Y
17403002	Light - Side Repeater - Front - LH (Remove & Replace)	0.5	Model Y
17403022	Trim - Light - Side Repeater - Front - LH (Remove & Replace)	0.15	Model Y
17403102	Light- Side Repeater - Front - RH (Remove & Replace)	0.5	Model Y
17403122	Trim - Light - Side Repeater - Front - RH (Remove & Replace)	0.15	Model Y
17403502	Reflector - Fascia - Rear - LH (Remove & Replace)	0.55	Model Y
17403602	Reflector - Fascia - Rear - RH (Remove & Replace)	0.55	Model Y
17404000	Lamps - Fog - Front - Adjust	0.1	Model Y
17404002	Light- Turn Signal/Fog - Front - LH (Remove & Replace)	0.25	Model Y
17404011	Cover - Fog Light - Front - LH (Remove and Install)	0.25	Model Y
17404012	Cover - Fog Light - Front - LH (Remove and Replace)	0.25	Model Y
17404102	Light- Turn Signal/Fog - Front - RH (Remove & Replace)	0.25	Model Y
17404111	Cover - Fog Light - Front - RH (Remove and Install)	0.25	Model Y
17404112	Cover - Fog Light - Front - RH (Remove and Replace)	0.25	Model Y
17404502	reflex lens - rear - RH (remove and replace)	0.05	Model Y
17407002	Switch - Hazard Warning (Remove & Replace)	1.25	Model Y
17409100	Headlight - Adjust - Europe	0.1	Model Y
17409150	Headlights - Adjust - EMEA (Tool Method)	0.3	Model Y
17450306	Replacement Keys - Program (No Keys Present)	0.05	Model Y
17450406	Additional Key - Program (Existing Key Present)	0.05	Model Y
17450802	Casing - Key Fob (Remove & Replace)	0.05	Model Y
17450902	Battery - Key Fob (Remove & Replace)	0.05	Model Y
17451002	Siren - Battery Backed (Remove & Replace)	0.1	Model Y
17451102	Antenna - Bluetooth Passive Entry - Front (Remove & Replace)	0.6	Model Y
17451802	Antenna - Bluetooth Passive Entry - Rear (Remove & Replace)	0.65	Model Y
17454002	Module - Body Controller - Security (Remove & Replace)	0.35	Model Y
17500302	Wiper Arm - LH (Remove & Replace)	0.1	Model Y
17500352	Wiper Arm - RH (Remove & Replace)	0.1	Model Y
17500402	Wiper Blade - LH (Remove & Replace)	0.05	Model Y
17500502	Wiper Blade - RH (Remove & Replace)	0.05	Model Y
17500805	Windshield Washer Fluid - Top Off	0	Model Y
17501002	Pump - Windshield Washer Reservoir (Remove & Replace)	0.3	Model Y
17501102	Reservoir - Windshield Washer (Remove & Replace)	0.35	Model Y
17501152	System - Windshield Washer (Remove & Replace)	0.3	Model Y
17501202	Cap - Reservoir - Windshield Washer (Remove and Replace)	0.05	Model Y
17501300	Nozzle Aim - Windshield Washer Jets	0.2	Model Y
17501352	Reservoir Assembly - Windshield Washer (RHD) (Remove & Replace)	0.3	Model Y
17501512	Hose - Washer - Reservoir (Remove & Replace)	0.3	Model Y
17501700	Wiper Blades (Adjust)	0.15	Model Y
17501702	Wiper Blades (Remove & Replace)	0.05	Model Y
17501802	Wiper Arms - Pair (Remove & Replace)	0.1	Model Y
17501902	Sensor - Level - Windshield Washer Reservoir (Remove & Replace)	0.3	Model Y
17502502	Wiper Module (Remove & Replace)	0.25	Model Y
17503002	Filler Neck - Reservoir - Windshield Washer (Remove & Replace)	0.05	Model Y
17503102	Filler Neck - Reservoir - Windshield Washer (RHD) (Remove and Replace)	0.05	Model Y
17504002	O-ring - Filler Neck - Reservoir - Windshield Washer (Remove & Replace)	0.05	Model Y
17504102	O-ring - Filler Neck - Reservoir - Windshield Washer (RHD) (Remove and Replace)	0.05	Model Y
17531202	Horn Assembly (Remove and Replace)	0.1	Model Y
17541002	Speaker - Pedestrian Warning (Remove & Replace)	0.2	Model Y
17551002	Accelerator (Remove & Replace)	0.4	Model Y
17601107	Hood Latch Ground Overlay	0.95	Model Y
18011965	Inspection Air Conditioning Box Outlet Seal and Water Outlet, Install the HVAC Lengthen Drain Pipe (China Only)	0.5	Model Y
18013731	Inspection Air Conditioning Box Outlet Seal and Water Outlet, No More Action Required (China Only)	0.25	Model Y
18015605	Inspection Air Conditioning Box Water Outlet and Outlet Seal, Adjust the Outlet Seal (China Only)	0.42	Model Y
18015900	Inspection Air Conditioning Box Outlet Seal and Water Outlet, Adjust the Outlet Seal (China Only)	0.42	Model Y
18017011	Inspection Air Conditioning Box Outlet Seal ,Water Outlet, Adjust the Outlet Seal (China Only)	0.42	Model Y

18018163	Inspect the Air Conditioning Box Outlet, No More Action Required (CN Only)	0.35	Model Y
18019057	Inspect the Air Conditioning (CN only)	0.6	Model Y
18019381	Inspect the Air Conditioning Box Outlet, Install Drain Pipe (CN Only)	0.6	Model Y
18019706	Inspect the Air Conditioning Box Outlet, Remove and Install the HVAC Assembly, Install Drain Pipe (CN Only)	3.75	Model Y
18033875	MY - AC Pipe Insulation Rework	0.14	Model Y
18038927	AC Pipe Insulation Rework	0.15	Model Y
18100012	Adapter - Bleeder Duct - Instrument Panel (Remove & Replace)	1.65	Model Y
18100102	Filter - Cabin (Remove & Replace)	0.1	Model Y
18100502	Filter - Carbon (Remove and Replace)	0.2	Model Y
18101002	HVAC Assembly (Remove & Replace)	3.45	Model Y
18101102	Thermistor - Duct - Upper - LH (Remove and Replace)	0.05	Model Y
18101202	Thermistor - Duct - Upper - RH (Remove and Replace)	2.1	Model Y
18102002	Actuator - Intake (Add Refrigerant Part if Needed) (Remove & Replace)	3.1	Model Y
18102202	Actuator - Bleed - LH (Remove & Replace)	2.25	Model Y
18102302	Actuator - Bleed - RH (Remove & Replace)	2.25	Model Y
18102502	Actuator - Lower Mode (Remove & Replace)	0.1	Model Y
18102602	Actuator - Upper Mode (Remove & Replace)	0.4	Model Y
18103202	Blower Motor - HVAC (Remove & Replace)	2.35	Model Y
18103205	Blower Motor - HVAC (Clean)	0.15	Model Y
18103402	Actuator - Vent - LH (Remove & Replace)	0.25	Model Y
18103502	Actuator - Vent - RH (Remove & Replace)	0.25	Model Y
18103802	Duct - HEPA Filter (Remove & Replace)	0.1	Model Y
18104102	Thermistor - Duct - Lower - LH (Remove and Replace)	0.05	Model Y
18104202	Thermistor - Duct - Lower - RH (Remove and Replace)	0.05	Model Y
18105102	Thermistor - Evaporator (Remove and Replace)	0.05	Model Y
18105302	Air Extractor - LH (Remove & Replace)	0.2	Model Y
18105322	Air Extractor - RH (Remove & Replace)	0.2	Model Y
18105401	Assembly - Filter - HEPA (Remove & Install)	0.05	Model Y
18105402	Assembly - Filter - HEPA (Remove & Replace)	0.1	Model Y
18105512	Cover - Filter - HEPA (Remove and Replace)	0.2	Model Y
18105522	Housing - Filter - HEPA (Remove & Replace)	0.2	Model Y
18105532	Filters - HEPA (Remove & Replace)	0.2	Model Y
18106302	Heater - PTC (Remove & Replace)	1.1	Model Y
18107202	Sensor - Ambient Air Temperature (Remove & Replace)	0.1	Model Y
18107502	Sensor - Cabin Temperature (Remove & Replace)	0.1	Model Y
18107602	Sensor - Temperature - Evaporator (Remove & Replace)	0.05	Model Y
18107802	Sensor - Temperature - LH (Remove & Replace)	0.1	Model Y
18107902	Sensor - Temperature - RH (Remove & Replace)	0.1	Model Y
18108002	Duct - Air Wave - LH (Remove & Replace)	1.65	Model Y
18108102	Duct - Air Wave - RH (Remove & Replace)	0.5	Model Y
18108402	Duct - Cabin Intake (Remove & Replace)	0.1	Model Y
18108502	Duct - Fresh Intake (Remove and Replace)	0.1	Model Y
18108602	Duct - Footwell - LH (Remove & Replace)	0.25	Model Y
18108702	Duct - Footwell - RH (Remove & Replace)	0.35	Model Y
18109002	Duct - HVAC Plenum - Inner (Remove & Replace)	0.3	Model Y
18109102	Duct - HVAC Plenum - Outer (Remove & Replace)	0.1	Model Y
18109702	Duct - Floor - 2nd Row - Main (Remove & Replace)	0.6	Model Y
18109722	Duct - Floor - 2nd Row - LH (Structural Pack) (Remove & Replace)	0.2	Model Y
18109802	Duct - Floor - 2nd Row - RH (Remove & Replace)	0.55	Model Y
18109812	Duct - Floor - 2nd Row - RH (Structural Pack) (Remove & Replace)	0.1	Model Y
18200012	Bracket - Ancillary Connector Dash Mount (Remove & Replace)	0.4	Model Y
18200100	A/C Refrigerant - Check and Adjust Pressure (Add Refrigerant Part if Needed)	1	Model Y
18200102	A/C Refrigerant (Recovery & Recharge)	1	Model Y
18200112	A/C Refrigerant (Unknown Oil Quantity) (Recovery, Flush, and Recharge)	1.45	Model Y
18200200	Detecting Refrigerant Leaks (Add Refrigerant Part if Needed)	1.5	Model Y
18200408	Use HVAC Cleaning Machine	0.7	Model Y
18201002	Condenser (Add Refrigerant Part if Needed) (Remove & Replace)	2.25	Model Y
18201018	Use Evaporator Foam Cleaner, Replace Cabin Filters	0.45	Model Y
18201311	Module - Cooling Fan (Remove and Install)	1	Model Y
18201312	Module - Cooling Fan (Remove and Replace)	1.1	Model Y
18201502	Fan - Condenser (Add Refrigerant Part if Needed) (Remove & Replace)	1.05	Model Y
18201702	A/C Line - Supermanifold to HVAC (Remove & Replace)	1.5	Model Y

18201902	A/C Line - Supermanifold to Compressor (Remove & Replace)	1.45	Model Y
18202002	Desiccant (Remove & Replace)	1.3	Model Y
18202012	Receiver Dryer and Desiccant (Heat Pump) (Remove & Replace)	1.4	Model Y
18202202	Module - Condenser Fan Control - LH (Remove & Replace)		Model Y
18202302	Module - Condenser Fan Control - RH (Remove & Replace)		Model Y
18203202	Bracket - Compressor (Remove and Replace)	0.55	Model Y
18203506	Acoustic Blanket - Compressor (Retrofit)	0	Model Y
18203912	A/C Compressor (Heat Pump) (Remove & Replace)	1.85	Model Y
18203932	A/C Compressor (Unknown Oil Quantity) (EMEA) (Remove & Replace)	1.75	Model Y
18204194	Compressor Inspeyton - Abonormal Sound (CN only)	0.4	Model Y
18204202	Pipe - High Pressure - A/C Compressor to Condenser (Add Refrigerant Part if Needed) (Remove & Replace)	1.3	Model Y
18204802	Pipes - Refrigerant - High/Low Pressure (Remove & Replace)	1.4	Model Y
18204902	Pipe - Low Pressure - Charge Port (Remove & Replace)	0.1	Model Y
18205002	TXV Valve- Evaporator (Add Refrigerant Part if Needed) (Remove & Replace)	0.5	Model Y
18205713	A/C Refrigerant Flush (manual) (CN)	0.6	Model Y
18206202	Chiller and EXV Assembly (Remove & Replace)	1.9	Model Y
18207630	Install Tube Protector for A/C Low Pressure Pipe (CN only)	0.15	Model Y
18208306	Compressor Inspeyton - No Abonormal Sound (CN only)	0.4	Model Y
18300000	Cooling System - Partial Refill and Bleed	0.6	Model Y
18300100	Cooling System - Drain and Refill	0.9	Model Y
18300112	Hose - Inverter Inlet - Front Drive Unit (Remove & Replace)	0.6	Model Y
18300132	Hose - Inverter to Heat Exchanger - Front Drive Unit (Includes Alignment Check) (Remove & Replace)	0.55	Model Y
18300200	Coolant System - Check and Fill	0.1	Model Y
18300400	Cooling System - Vacuum Refill (Add Coolant 1029320-00 if Needed)	0.5	Model Y
18300900	Thermal System Test	0.1	Model Y
18301002	Radiator (Remove & Replace)	1.15	Model Y
18301011	5-Way Valve (Remove & Install)		Model Y
18301502	Superbottle (Remove & Replace)	1.4	Model Y
18301702	Hose - Inlet - Inverter - Rear Drive Unit (Remove & Replace)	0.65	Model Y
18302302	Hose - Front Drive Unit Powertrain Bypass (RWD) (Remove & Replace)	0.55	Model Y
18302402	Hose - Chiller to HV Battery (RWD) (Remove & Replace)	0.85	Model Y
18302412	Hose - Chiller to HV Battery (Dual Motor) (Remove & Replace)	0.85	Model Y
18302422	Hose - HV Battery Return to Reservoir (Remove & Replace)	1.35	Model Y
18302432	Hose - Chiller to HV Battery (RHD) (RWD) (Remove & Replace)	0.65	Model Y
18302502	Hose - Outlet - Rear Drive Unit (Remove & Replace)	1.75	Model Y
18302612	Hose - Inlet - Radiator (Remove & Replace)	0.8	Model Y
18302702	Hose - Outlet - Radiator (Remove & Replace)	0.75	Model Y
18303102	Hose - Return - Powertrain (Remove & Replace)	3.45	Model Y
18303122	Hose - Return - Powertrain - Front Drive Unit (Remove & Replace)	0.6	Model Y
18303132	Hose - Return - Powertrain (Structural Pack) (Remove & Replace)	0.8	Model Y
18303302	Hose - Supply - Powertrain (Remove & Replace)	3.45	Model Y
18303310	Insulate A/C Low Pressure Pipe and Install Harness Connector Cover (CN only)	0.35	Model Y
18303322	Hose - Supply - Powertrain (Structural Pack) (Remove & Replace)	1	Model Y
18303702	Hose - Return - HV Battery (Remove & Replace)	3.45	Model Y
18308112	Coolant Pump - Powertrain (Dual Motor) (Remove and Replace)	0.7	Model Y
18308502	Battery Coolant Pump 1 (1st Generation) (Remove & Replace)	0.8	Model Y
18308512	Coolant Pump - HV Battery (Dual Motor) (Remove and Replace)	0.85	Model Y
18309302	Hose - Front Manifold - LH (Remove & Replace)	0.65	Model Y
18309312	Tube - Jumper - Front Manifold - LH (Structural Pack) (Remove & Replace)	1	Model Y
18309345	Install Harness Connector Cover (CN Only)	0.3	Model Y
18309402	Hose - Front Manifold - RH (Remove & Replace)	0.65	Model Y
18400102	Supermanifold (Remove & Replace)	3.05	Model Y
18400106	Supermanifold 1.1 (Retrofit)	3.05	Model Y
18400202	Octovalve (Remove & Replace)	0.7	Model Y
18400302	Sensor - Pressure and Temperature (PT) - High Pressure (Remove & Replace)	1.5	Model Y
18400402	Sensor - Pressure and Temperature (PT) - Low Pressure (Remove & Replace)	1.5	Model Y
18400502	Sensor - Subcool - Pressure and Temperature (PT) - High Pressure (Remove & Replace)	1.5	Model Y
18400602	Valve Body - Octovalve (Remove & Replace)	0.7	Model Y
18400902	Check Valve - Cabin Condenser (Remove & Replace)	1.5	Model Y
18401002	Check Valve - Evaporator (Remove & Replace)	1.45	Model Y
18401102	Check Valve - Liquid Cooled Condenser (Remove & Replace)	1.75	Model Y
18401202	Coil - EXV - Supermanifold (Remove & Replace)	1.75	Model Y

18401302	Valve Body - EXV - Supermanifold (Remove & Replace)	1.55	Model Y
18401402	Liquid Cooled Condenser (Remove & Replace)	1.9	Model Y
18401502	Shut Off Valve - Liquid Cooled Condenser (Remove & Replace)	1.5	Model Y
18401702	Coolant Bottle (Remove & Replace)	0.55	Model Y
18401802	Pump - Coolant - Battery - Supermanifold (Remove & Replace)	0.8	Model Y
18500602	Active Grille Shutter (Remove & Replace)	0.95	Model Y
19010202	Labels - Any (Remove & Replace)	0.2	Model Y
19010303	Labels - Battery Enclosure - Any	0.2	Model Y
19010401	VIN Label - Plate (Remove & Install)	0.05	Model Y
19011002	Replace Marketing Decal - Door - Front - LH (Remove & Replace)	0.5	Model Y
19011006	Install Marketing Decal - Door - Front - LH	0.3	Model Y
19011102	Replace Marketing Decal - Door - Front - RH (Remove & Replace)	0.5	Model Y
19011106	Install Marketing Decal - Door - Front - RH	0.3	Model Y
19011875	Print and Attach QC Compliance Label	0.05	Model Y
20010102	Airbag - Driver (Remove & Replace)	0.1	Model Y
20010201	Knee Airbag - Driver (Remove & Install)	0.3	Model Y
20010202	Knee Airbag - Driver (Remove & Replace)	0.2	Model Y
20010301	Airbag - Front Passenger (Remove & Install)	2	Model Y
20010302	Airbag - Front Passenger (Remove & Replace)	1.8	Model Y
20010402	Knee Airbag - Front Passenger (Remove & Replace)	0.2	Model Y
20010702	Side Airbag - Driver (Remove & Replace)	0.1	Model Y
20010707	Remove the Front Seat Airbag and Discard	0.1	Model Y
20010802	Side Airbag - Front Passenger (Remove & Replace)	0.1	Model Y
20012002	Curtain Airbag - LH (Remove & Replace)	1.25	Model Y
20012102	Curtain Airbag - RH (Remove & Replace)	1.25	Model Y
20013102	Harness - Airbag - Driver (Remove and Replace)	0.1	Model Y
20015002	Module - Restraint Control (Remove & Replace)	0.6	Model Y
20015022	Module - Restraint Control (Structural Pack) (Remove & Replace)	0.4	Model Y
20051001	Height Adjuster - Seat Belt (Remove & Install)	0.1	Model Y
20051102	Box Clip - Seat Belt Reminder - 1st Row - LH (Remove and Replace)	0.15	Model Y
20051202	Box Clip - Seat Belt Reminder - 1st Row - RH (Remove and Replace)	0.15	Model Y
20054102	Retractor - Seatbelt -1st Row - LH (Remove & Replace)	0.3	Model Y
20054202	Retractor - Seatbelt - 1st Row - RH (Remove & Replace)	0.3	Model Y
20054302	Webbing Guide Bar - Seatbelt - 1st Row - LH (Remove & Replace)	0.15	Model Y
20054402	Webbing Guide Bar - Seatbelt - 1st Row - RH (Remove & Replace)	0.15	Model Y
20054702	Buckle - 1st Row - LH (Remove & Replace)	0.35	Model Y
20054802	Buckle - 1st Row - RH (Remove & Replace)	0.35	Model Y
20056102	Seatbelt - 2nd Row - LH (Remove & Replace)	0.3	Model Y
20056202	Seatbelt - 2nd Row - RH (Remove & Replace)	0.3	Model Y
20056302	Seatbelt - 2nd Row - Center (Remove & Replace)	0.5	Model Y
20056402	Escutcheon - Seatbelt - 2nd Row - LH (Remove & Replace)	0.05	Model Y
20056502	Escutcheon - Seatbelt - 2nd Row - RH (Remove & Replace)	0.05	Model Y
20057002	Buckle - 2nd Row - LH (Remove & Replace)	0.2	Model Y
20057102	Buckle - 2nd Row - RH (Remove & Replace)	0.2	Model Y
20057202	Buckle - 2nd Row - Center (Remove & Replace)	0.3	Model Y
20058102	Retractor - Seatbelt - 3rd Row - LH (Remove & Replace)	0.35	Model Y
20058202	Retractor - Seatbelt - 3rd Row - RH (Remove & Replace)	0.3	Model Y
20058702	Buckle - 3rd Row - LH (Remove & Replace)	0.2	Model Y
20058802	Buckle - 3rd Row - RH (Remove & Replace)	0.2	Model Y
20059102	Escutcheon - Seat Belt - 3rd Row - LH (Remove & Replace)	0.05	Model Y
20059202	Escutcheon - Seat Belt - 3rd Row - RH (Remove & Replace)	0.05	Model Y
20101002	Pretensioner - Outboard Lap - 1st Row - LH (Remove & Replace)	0.15	Model Y
20101102	Pretensioner - Outboard Lap - 1st Row - RH (Remove & Replace)	0.15	Model Y
20200102	Sensor - Pressure - Door - Front - LH (Remove and Replace)	0.3	Model Y
20200152	Sensor - Pressure - Door - Rear - LH (Remove and Replace)	0.1	Model Y
20200202	Sensor - Pressure - Door - Front - RH (Remove and Replace)	0.3	Model Y
20200252	Sensor - Pressure - Door - Rear - RH (Remove & Replace)	0.1	Model Y
20200302	Sensor - Airbag - Front - LH (Remove & Replace)	0.1	Model Y
20200402	Sensor - Airbag - Front - RH (Remove & Replace)	0.1	Model Y
20200502	Sensor - Airbag - B-Pillar - LH (Remove & Replace)	0.2	Model Y
20200602	Sensor - Airbag - B-Pillar - RH (Remove & Replace)	0.2	Model Y
20200702	Sensor - Airbag - C-Pillar - LH (Remove & Replace)	0.1	Model Y

20200802	Sensor - Airbag - C-Pillar - RH (Remove & Replace)	0.1	Model Y
20201152	Sensor - Shotgun Accelerometer - LH (Remove & Replace)	0.15	Model Y
20201252	Sensor - Shotgun Accelerometer - RH (Remove & Replace)	0.15	Model Y
20202102	Sensor - Driver Occupancy (Remove and Replace)	0.5	Model Y
20202202	Sensor - Resistive Occupancy - Front Seat - RH (Remove & Replace)	0.55	Model Y
20203102	Sensor - Impact Accelerometer - Front Bumper - LH (Remove & Replace)	0.1	Model Y
20203202	Sensor - Impact Accelerometer - Front Bumper - RH (Remove and Replace)	0.1	Model Y
21051000	Update Display Avatar	0.1	Model Y
21051202	Touchscreen (Remove & Replace)	0.3	Model Y
21051212	Service Panel - Instrument Panel (Remove & Replace)	0.05	Model Y
21062412	Non Tesla SIM Card (Install)	0	Model Y
21151002	Car Computer (Remove & Replace)	1	Model Y
21151011	Car Computer (Info-Ryzen) (Remove & Install)	1.15	Model Y
21151012	Car Computer (Info-Ryzen) (Remove & Replace)	1.15	Model Y
21152002	SIM Card - Car Computer (Remove & Replace)	1	Model Y
21152402	SD Card - Car Computer (Remove & Replace)	0.1	Model Y
21152802	Connectivity Board - Car Computer (Remove & Replace)	0.4	Model Y
21152902	Connectivity Board - Car Computer (HW3) (Remove & Replace)	1	Model Y
21210102	Speaker - Front Door - LH (Remove & Replace)	0.2	Model Y
21210202	Speaker - Front Door - RH (Remove & Replace)	0.2	Model Y
21211002	Speaker - Rear Door - LH (Remove & Replace)	0.2	Model Y
21211102	Speaker - Rear Door - RH (Remove & Replace)	0.2	Model Y
21211502	Speaker - Dash - LH (Remove & Replace)	0.15	Model Y
21211602	Speaker - Dash - Center (Remove & Replace)	0.2	Model Y
21211702	Speaker - Dash - RH (Remove & Replace)	0.2	Model Y
21211802	Tweeter - Dash (Remove & Replace)	0.2	Model Y
21212002	Subwoofer (Remove & Replace)	0.35	Model Y
21212702	Tweeter - Front Door - LH (Remove & Replace)	0.05	Model Y
21212802	Tweeter - Front Door - RH (Remove & Replace)	0.05	Model Y
21213502	Amplifier - Audio - External (Remove & Replace)	0.25	Model Y
21213602	Speaker - Front Door - Upper - LH (Remove & Replace)	0.1	Model Y
21213702	Speaker - Front Door - Upper - RH (Remove & Replace)	0.1	Model Y
21213802	Speaker - Parcel Shelf - LH (Remove & Replace)	0.4	Model Y
21213902	Speaker - Parcel Shelf - RH (Remove & Replace)	0.4	Model Y
21214002	Speaker - Emergency (Remove & Replace)	0.1	Model Y
21220102	Tuner - FM / HD (Remove & Replace)	0.1	Model Y
21250102	Microphone - Bluetooth (Remove & Replace)	0.1	Model Y
21260402	USB Hub - Center Console - Front (Remove & Replace)	0.15	Model Y
21260602	USB Hub - Center Console - Rear (Remove & Replace)	0.15	Model Y
21261002	USB-A Cable - Center Console (Remove & Replace)	0.1	Model Y
21300012	Antenna - Ground Noise Filter (Remove & Replace)	0.1	Model Y
21300102	Antenna - AM/FM/RKE (Remove & Replace)	0.1	Model Y
21300502	Noise Filter - 12V (Remove & Replace)	0.05	Model Y
21300702	Antenna Amplifier - FM2 (Remove & Replace)	0.05	Model Y
21300802	Antenna Amplifier - FM2/Satellite/DAB (Remove & Replace)	0.1	Model Y
21320102	Antenna - GPS (Remove & Replace)	0.2	Model Y
21330102	Antenna - Wi-Fi (Remove & Replace)	0.3	Model Y
21331102	Antenna - MIMO - LH (Remove and Replace)	0.35	Model Y
21331202	Antenna - MIMO - RH (Remove and Replace)	0.35	Model Y
21341012	Antenna - eCall (RHD) (Remove and Replace)	1.45	Model Y
30010201	Subframe Assembly - Rear (Includes Alignment Check) (Remove & Install)	4.05	Model Y
30010202	Subframe Assembly - Rear (Remove & Replace)	4.05	Model Y
30010301	Subframe Assembly - Front (RWD) (Includes Alignment Check) (Remove & Install)	1.55	Model Y
30010302	Subframe Assembly - Front (RWD) (Includes Alignment Check) (Remove & Replace)	1.8	Model Y
30010311	Subframe Assembly - Front (Dual Motor) (Includes Alignment Check) (Remove & Install)	2.55	Model Y
30010312	Subframe Assembly - Front (Dual Motor) (Includes Alignment Check) (Remove & Replace)	3.5	Model Y
30011001	Subframe Assembly - Front (Dual Motor) (Includes Alignment) (Remove & Install)		Model Y
30011012	Subframe Assembly - Front (Dual Motor) (Includes Alignment) (Remove & Replace)		Model Y
30011022	Isolator - Motor Mount - Front - LH (Remove and Replace)	3.7	Model Y
30011502	Shear Plate - Rear Subframe - Front - LH (Remove & Replace)	0.3	Model Y
30011602	Shear Plate - Rear Subframe - Front - RH (Remove & Replace)	0.3	Model Y
30012423	M10 Bolt Torque Check	0.1	Model Y

30014102	Insert - Subframe - Rear (Remove & Replace)	2.6	Model Y
31000010	Mobile Inspection of SB-21-31-003 Performed; Bulletin Work To Be Performed At Service Center	0.2	Model Y
31000200	Four Wheel Alignment (Check And Adjust Camber Caster Toe) (Ballast Bags)	1.4	Model Y
31002100	Four Wheel Alignment (Check)	0.15	Model Y
31002200	Four Wheel Alignment (Adjust Toe)	0.65	Model Y
31010102	Knuckle - Suspension - Front - LH (Includes Alignment Check) (Remove & Replace)	0.65	Model Y
31010112	Knuckle - Suspension - Front - LH (Dual Motor) (Remove and Replace)	0.75	Model Y
31010202	Knuckle - Suspension - Front - RH (Includes Alignment Check) (Remove & Replace)	0.65	Model Y
31010212	Knuckle - Suspension - Front - RH (Dual Motor) (Remove & Replace)	0.75	Model Y
31010602	Hub - Front - LH (RWD) (Remove & Replace)	0.2	Model Y
31010702	Hub - Front - RH (RWD) (Remove & Replace)	0.2	Model Y
31010802	Hub - Front - LH (Dual Motor) (Remove & Replace)	0.35	Model Y
31010902	Hub - Front - RH (Dual Motor) (Remove & Replace)	0.35	Model Y
31011757	Inspect and Fasten Bolts in the Link X4 (China Only)	0.1	Model Y
31012002	Link - Stabilizer Bar - Front - LH (Remove & Replace)	0.15	Model Y
31012003	Inspect the Gap between Front Suspension Knuckle and Upper Control Arm, Inspection OK	0.05	Model Y
31012102	Link - Stabilizer Bar - Front - RH (Remove & Replace)	0.3	Model Y
31012202	Stabilizer Bar - Front (Remove & Replace)	0.6	Model Y
31012902	Link - Stabilizer Bar - Front - Pair (Remove & Replace)	0.5	Model Y
31013402	Link - Lateral - Lower - Front - LH (Remove & Replace)	0.55	Model Y
31013412	Links - Lateral - Lower - Front - LH/RH (Remove & Replace)	0.55	Model Y
31013502	Link - Lateral - Lower - Front - RH (Remove & Replace)	0.55	Model Y
31013602	Link - Compliance - Lower - Front - LH (Remove and Replace)	0.35	Model Y
31013642	Replace Bolts in the Lateral Link (China Only)	0.05	Model Y
31013702	Link - Compliance - Lower - Front - RH (Remove and Replace)	0.35	Model Y
31013802	Links - Compliance - Lower - Front - RH/LH (Remove and Replace)	0.5	Model Y
31014002	Control Arm - Upper - Front - LH (Includes Alignment Check) (Remove & Replace)	0.65	Model Y
31014022	Control Arm - Upper - Front - LH (Structural Pack) (Remove & Replace)	0.6	Model Y
31014032	Control Arm - Upper - Front - LH (Mobile Service) (Remove & Replace)	0.65	Model Y
31014042	Control Arm - Upper - Front - RH (Mobile Service) (Remove & Replace)	0.65	Model Y
31014052	Control Arm - Upper - Front - Pair (Includes Alignment Check) (Remove & Replace)	2.25	Model Y
31014102	Control Arm - Upper - Front - RH (Includes Alignment Check) (Remove & Replace)	0.65	Model Y
31014122	Control Arm - Upper - Front - RH (Structural Pack) (Remove & Replace)	0.6	Model Y
31015002	Front Upper Control Arm (FUCA) Mount - LH (Includes Alignment Check) (Remove & Replace)	0.65	Model Y
31015102	Front Upper Control Arm (FUCA) Mount - RH (Remove & Replace)	0.65	Model Y
31016102	Bushing Bracket - Stabilizer Bar - Front - LH (Remove and Replace)	0.55	Model Y
31016302	Bushing Bracket - Stabilizer Bar - Front - RH (Remove and Replace)	0.55	Model Y
31016862	Inspect Front Stabilizer Bar (CN Only)	0.05	Model Y
31017890	Inspect Bolts in the Lateral Link (China Only)	0.3	Model Y
31018097	Inspect Front Stabilizer Bar, Replace Front Stabilizer Bar (CN Only)	0.6	Model Y
31019000	Suspension - Front - Check Torque (Includes Alignment Check)	0.5	Model Y
31019016	Replace Bolts in the Link X4	0.05	Model Y
31019967	Inspect the Gap between Front Suspension Knuckle and Upper Control Arm, Inspection NOK	0.05	Model Y
31030012	Isolator - Upper Spring - Rear - LH (Remove & Replace)	0.8	Model Y
31030022	Isolator - Upper Spring - Rear - RH (Remove & Replace)	0.8	Model Y
31030032	Isolator - Lower Spring - Rear - LH (Remove & Replace)	0.8	Model Y
31030042	Isolator - Lower Spring - Rear - RH (Remove & Replace)	0.8	Model Y
31030102	Knuckle - Suspension - Rear - LH (Includes Alignment Check) (Remove & Replace)	1.1	Model Y
31030202	Knuckle - Suspension - Rear - RH (Includes Alignment Check) (Remove & Replace)	1.1	Model Y
31030602	Hub - Rear - RH (Remove & Replace)	0.4	Model Y
31030702	Hub - Rear - LH (Includes Alignment Check) (Remove & Replace)	0.4	Model Y
31031102	Control Arm Assembly - Rear - Lower - LH (Remove & Replace)	0.8	Model Y
31031202	Control Arm Assembly - Rear - Lower - RH (Remove & Replace)	1.25	Model Y
31031402	Link - Fore - Upper - Rear - LH (Includes Alignment Check) (Remove & Replace)	2.65	Model Y
31031502	Link - Fore - Upper - Rear - RH (Remove & Replace)	2.65	Model Y
31032001	Link - Fore Lower - Rear - LH (Includes Alignment Check) (Remove & Install)	1.2	Model Y
31032002	Toe Link Assembly - Rear - LH (Includes Alignment Check) (Remove & Replace)	1.2	Model Y
31032011	Cover - Rear Suspension - LH (Remove & Install)	0.05	Model Y
31032012	Cover - Rear Suspension - LH (Remove & Replace)	0.1	Model Y
31032021	Cover - Rear Suspension - RH (Remove & Install)	0.05	Model Y
31032022	Cover - Rear Suspension - RH (Remove & Replace)	0.05	Model Y
31032101	Link - Fore Lower - Rear - RH (Includes Alignment Check) (Remove & Install)	1.2	Model Y

31033102	Stabilizer Bar - Rear (Includes Alignment Check) (Remove & Replace)	0.45	Model Y
31033402	Drop Link - Stabilizer Bar - Rear - LH (Remove & Replace)	0.35	Model Y
31033602	Drop Link - Stabilizer Bar - Rear - RH (Remove & Replace)	0.3	Model Y
31033702	Toe Link Assembly - Rear - RH (Includes Alignment Check) (Remove & Replace)	1.2	Model Y
31035102	Link - Aft - Upper - Rear - LH (Remove & Replace)	0.5	Model Y
31035202	Link - Aft - Upper - Rear - RH (Remove & Replace)	0.5	Model Y
31039000	Suspension - Rear (Check Torque)	0.3	Model Y
31102802	Sensor - Ride Height - Front - LH (Remove & Replace)	0.2	Model Y
31102902	Sensor - Ride Height - Front - RH (Remove & Replace)	0	Model Y
31151002	Spring and Damper Assembly - Front - LH (Includes Alignment Check) (Remove & Replace)	0.35	Model Y
31151102	Spring and Damper Assembly - Front - RH (Remove & Replace)	0.35	Model Y
31153002	Spring - Rear Suspension - LH (Includes Alignment Check) (Remove & Replace)	0.85	Model Y
31153102	Spring - Rear Suspension - RH (Remove & Replace)	0.85	Model Y
31153602	Damper - Rear - LH (Remove & Replace)	0.4	Model Y
31153702	Damper - Rear - RH (Remove & Replace)	0.4	Model Y
31154102	Isolator - Front Upper Control Arm (FUCA) Mount - LH (Remove and Replace)	0.3	Model Y
31154202	Isolator - Front Upper Control Arm (FUCA) Mount - RH (Remove and Replace)	0.3	Model Y
32010102	Steering Rack (RWD) (Includes Alignment Check) (Remove & Replace)	1.75	Model Y
32010103	Steering Rack - Calibration	0.2	Model Y
32010302	Tie Rod End - LH (Includes Alignment Check) (Remove & Replace)	1	Model Y
32010402	Tie Rod End - RH (Includes Alignment Check) (Remove & Replace)	1	Model Y
32010802	Seal - Steering - Intermediate Shaft - Dash (Remove & Replace)	0.1	Model Y
32011002	Module - Steering Column Control (Remove & Replace)	0.3	Model Y
32012202	Steering Rack (Dual Motor) (Includes Alignment Check) (Remove & Replace)	1.85	Model Y
32017990	EMEA - Check Steering Wheel Vibration [NO TROUBLE FOUND]	0.05	Model Y
32050012	Horn - Steering Wheel (Remove & Replace)	0.15	Model Y
32051202	Shroud - Lower - Steering Column (Remove & Replace)	0.15	Model Y
32051801	Steering Wheel (Remove & Install)	0.2	Model Y
32051802	Steering Wheel (Remove & Replace)	0.3	Model Y
32051812	Surround - Steering Wheel (Remove & Replace)	0.3	Model Y
32051822	Spoke Cover - Steering Wheel - Lower (Remove & Replace)	0.2	Model Y
32051902	Steering Column (Remove & Replace)	0.8	Model Y
33010100	Brake Rotor - Front - LH (Measure Runout)	0.3	Model Y
33010102	Brake Rotor - Front - LH (Remove & Replace)	0.4	Model Y
33010200	Brake Rotor - Rear - LH (Measure Runout)	0.35	Model Y
33010202	Brake Rotor - Rear - LH (Remove & Replace)	0.2	Model Y
33010302	Brake Caliper - Front - LH (Remove & Replace)	0.75	Model Y
33010402	Brake Caliper - Front - RH (Remove & Replace)	0.75	Model Y
33010502	Brake Caliper - Rear - LH (Remove & Replace)	0.75	Model Y
33010532	Bracket - Brake Caliper - Rear - LH (Remove & Replace)	0.6	Model Y
33010542	Bracket - Brake Caliper - Rear - RH (Remove & Replace)	0.6	Model Y
33010602	Brake Caliper - Rear - RH (Remove & Replace)	0.75	Model Y
33010702	Brake Pad Kit - Front (Remove & Replace)	0.8	Model Y
33010712	Brake Pad Kit - Front (Sport Brakes) (Remove & Replace)	0.8	Model Y
33010802	Brake Pads - Rear - Set(Base Brakes)(Remove & Replace)	0.7	Model Y
33010812	Brake Pad Kit - Rear (Sport Brakes) (Remove & Replace)	0.75	Model Y
33010905	Brake Pads and Rotors - Front - Set	0.75	Model Y
33011005	Brake Pads and Rotors - Rear - Set	0.85	Model Y
33011100	Brake Rotor - Front - RH (Measure Runout)	0.3	Model Y
33011102	Brake Rotor - Front - RH (Remove & Replace)	0.2	Model Y
33011200	Brake Rotor - Rear - RH (Measure Runout)	0.35	Model Y
33011202	Brake Rotor - Rear - RH (Remove & Replace)	0.5	Model Y
33011302	Brake Rotors - Front - Set (Remove & Replace)	0.6	Model Y
33011402	Brake Rotors - Rear - Set (Remove & Replace)	0.7	Model Y
33011505	Brake Pads and Rotors - Vehicle - Set	1.65	Model Y
33011602	Shield - Dust - Brake - Front - LH (Remove & Replace)	0.3	Model Y
33011612	Shield - Dust - Brake - Front - LH (Dual Motor) (Remove & Replace)	0.4	Model Y
33011702	Shield - Dust - Brake - Front - RH (Remove & Replace)	0.3	Model Y
33011712	Shield - Dust - Brake - Front - RH (Dual Motor) (Remove & Replace)	0.4	Model Y
33011801	Shield - Dust - Brake - Rear - LH (Remove & Install)	0.45	Model Y
33011802	Shield - Dust - Brake - Rear - LH (Remove & Replace)	0.45	Model Y
33011902	Shield - Dust - Brake - Rear - RH (Remove & Replace)	0.45	Model Y

33013000	Brake Pads - Burnishing	0.3	Model Y
33013345	Clean And Lubricate Brake Calipers (Non-Performance Brakes) (Requires Code 34012501)	0.35	Model Y
33013365	Clean And Lubricate Brake Calipers (Performance Brakes) (Requires Code 34012501)	0.3	Model Y
33014999	Brake Pad NVH Film Installation - Front (Set) (CN)	0.3	Model Y
33016750	Brake Pad NVH Film Installation - Rear (Set) (CN)	0.3	Model Y
33030032	Pipe - Brake - Rear - LH (Remove & Replace)	0.7	Model Y
33030202	Brake Hose - Flexible - Front - RH (Remove & Replace)	0.7	Model Y
33030302	Brake Hose - Flexible - Front - LH (Remove & Replace)	0.7	Model Y
33030402	Brake Hose - Flexible - Rear - RH (Remove & Replace)	0.6	Model Y
33030502	Brake Hose - Flexible - Rear - LH (Remove & Replace) (Add Brake Fluid 1060099-00A if Needed)	0.6	Model Y
33030702	Brake Lines - 2 Tube Bundle - Rear (Remove & Replace)	0.85	Model Y
33031102	Brake Fluid Bleed - One Caliper (Remove & Replace)	0.6	Model Y
33031200	Brake Fluid Check	0.1	Model Y
33031202	Brake Fluid Bleed/Flush (Remove & Replace) (Add Brake Fluid 1060099-00A if Needed)	0.65	Model Y
33033902	Brake Lines - 4 Tube Bundle - ABS to Wheels (Remove & Replace)	2.5	Model Y
33034002	Brake Lines - Master Cylinder to ABS (Remove & Replace)	1.65	Model Y
33034012	Brake Lines - Master Cylinder to ABS (Structural Pack) (Remove & Replace)	1.5	Model Y
33034202	Brake Lines - Master Cylinder to ABS (RHD) (Remove & Replace)	1.7	Model Y
33035002	Brake Lines - Front Bundle (Remove & Replace)	4.35	Model Y
33035012	Brake Lines - Front Bundle (Structural Pack) (Remove & Replace)	3	Model Y
33035102	Brake Lines - LH Sill (Remove & Replace)	4.7	Model Y
33035112	Brake Lines - LH Sill (Structural Pack) (Remove & Replace)	1.55	Model Y
33035202	Brake Lines - Rear - LH to Sill (Remove & Replace)	0.8	Model Y
33035302	Brake Lines - Rear - RH to Sill (Includes Alignment Check) (Remove & Replace)	2.8	Model Y
33035312	Brake Lines - Rear - RH to Sill (Structural Pack) (Remove & Replace)	2.3	Model Y
33051005	Rear Park Brake Caliper - Caliper Seized/Motor Failure - Release	0.1	Model Y
33052302	Motor - Brake Caliper - Rear - LH (Remove & Replace)	0.5	Model Y
33052402	Motor - Brake Caliper - Rear - RH (Remove & Replace)	0.5	Model Y
33100102	ABS Modulator Assembly (Remove & Replace)	2.2	Model Y
33100212	ECU - ABS (Dual Motor) (Remove & Replace)	0.75	Model Y
33100222	ECU - ABS (Structural Pack) (Dual Motor) (Remove & Replace)	1.05	Model Y
33100502	Sensor - Wheel Speed - ABS - Front - LH (Remove & Replace)	0.2	Model Y
33100602	Sensor - Wheel Speed - ABS - Front - RH (Remove & Replace)	0.3	Model Y
33100702	Sensor - Wheel Speed - ABS - Rear - LH (Remove & Replace)	0.15	Model Y
33100802	Sensor - Wheel Speed - ABS - Rear - RH (Remove & Replace)	0.15	Model Y
33109522	Hydraulic Control Unit (HCU) - Brake (Remove & Replace)	2	Model Y
33109532	Hydraulic Control Unit (HCU) - Brake (Structural Pack) (Remove & Replace)	2.15	Model Y
33200012	Sensor - Brake Reservoir Fluid Level (Remove & Replace)	0.05	Model Y
33201002	Electromechanical Brake Booster Assembly (Remove & Replace) (Add Brake Fluid 1060099-00A if Needed)	1.85	Model Y
33201012	Master Cylinder and Reservoir Assembly (Remove & Replace)	1.2	Model Y
33201022	Electromechanical Brake Booster Assembly (Structural Pack) (Remove & Replace)	1.7	Model Y
33201102	Electromechanical Brake Booster Assembly (RHD) (Remove & Replace)	1.5	Model Y
33251002	Brake Pedal (Remove & Replace)	0.45	Model Y
33251022	Brake Pedal (Structural Pack) (Remove & Replace)	0.55	Model Y
33251202	Pedal Pad - Brake (Remove & Replace)	0.1	Model Y
33252002	Switch - Brake Light (Remove & Replace)	0.25	Model Y
34011000	Inspect Wheel (Cosmetic Inspection)	0.1	Model Y
34011106	Wheel Lock Set - Install	0.45	Model Y
34011302	Lug Nuts - Vehicle Set (Remove & Replace)	0.4	Model Y
34011402	Lug Nut Covers - Vehicle Set (Remove & Replace)	0.1	Model Y
34012121	Tire Package - Added Services - MY 19"	1	Model Y
34012401	Wheels - Axle Set (Remove & Install)	0.2	Model Y
34012501	Wheels - Vehicle - Set (Remove & Install)	0.2	Model Y
34012508	Wheels - Vehicle - Set (Cosmetic Refinish)	2	Model Y
34013000	Check Tire Tread Depth	0.05	Model Y
34013120	Tire & Wheel - Winter Wheels - MY 21"	1	Model Y
34013374	Inspect And Tighten Halfshaft Torque - Dual Motor (CN Only)	0.4	Model Y
34014005	Seasonal Wheel and Tire Set Swap	0.4	Model Y
34014105	Seasonal Tire Swap on Existing Wheels	1	Model Y
34014135	Tire Package - Added Services - MY 21"	1	Model Y
34014505	Accessory Wheel/Tire Package Assembly	1.1	Model Y
34015001	Wheel - Front - LH (Remove & Install)	0.1	Model Y



34015002	Wheel - Front - LH (Remove & Replace)	0.25	Model Y
34015008	Wheel – Front – LH (Cosmetic Refinish)	0.5	Model Y
34015011	Center Cap - Wheel (Remove and Replace)	0.05	Model Y
34015012	Cap - Wheel - 19 Inch Stiletto - Front - LH (Remove & Replace)	0.05	Model Y
34015021	Cover, Wheel, Front, LH (Remove & Install)	0.05	Model Y
34015022	Cap - Wheel - Front - LH (Remove & Replace)	0.05	Model Y
34015101	Wheel - Front - RH (Remove & Install)	0.1	Model Y
34015102	Wheel - Front - RH (Remove & Replace)	0.25	Model Y
34015108	Wheel – Front – RH (Cosmetic Refinish)	0.5	Model Y
34015112	Cap - Wheel - 19 Inch Stiletto - Front - RH (Remove & Replace)	0.05	Model Y
34015121	Cover, Wheel, Front, RH (Remove & Install)	0.05	Model Y
34015122	Cap - Wheel - Front - RH (Remove & Replace)	0.05	Model Y
34015201	Wheel - Rear - LH (Remove & Install)	0.1	Model Y
34015202	Wheel - Rear - LH (Remove & Replace)	0.25	Model Y
34015208	Wheel – Rear – LH (Cosmetic Refinish)	0.5	Model Y
34015212	Cap - Wheel - 19 Inch Stiletto - Rear - LH (Remove & Replace)	0.05	Model Y
34015221	Cover, Wheel, Rear, LH (Remove & Install)	0.05	Model Y
34015222	Cap - Wheel - Rear - LH (Remove & Replace)	0.05	Model Y
34015301	Wheel - Rear - RH (Remove & Install)	0.1	Model Y
34015302	Wheel - Rear - RH (Remove & Replace)	0.25	Model Y
34015308	Wheel – Rear – RH (Cosmetic Refinish)	0.5	Model Y
34015312	Cap - Wheel - 19 Inch Stiletto - Rear - RH (Remove & Replace)	0.05	Model Y
34015321	Cover, Wheel, Rear, RH (Remove & Install)	0.05	Model Y
34015322	Cap - Wheel - Rear - RH (Remove & Replace)	0.05	Model Y
34015401	Install Wheel Caps - Set	0.05	Model Y
34016000	Lug Nut - Check and Torque (All Wheels)	0.05	Model Y
34016007	Tire & Wheel - Winter Wheels - MY 19"	1	Model Y
34016999	Tire Package - Added Services - MY 20"	1	Model Y
34018176	Inspect And Tighten Halfshaft Torque - RWD (CN Only)	0.2	Model Y
34020010	Mobile Tire Service Performed	0	Model Y
34020020	Mobile Tire Service Performed – Roadside	0	Model Y
34020030	Mobile Tire Service Performed – Logistics	0	Model Y
34020105	Tire Rotation With Automatic TPMS Learn	0.2	Model Y
34020115	Tire Rotation With Manual TPMS Learn	0.4	Model Y
34020305	Rebalance 4 Tires	0.9	Model Y
34020505	Tire Rotation and Rebalance With Automatic TPMS Learn	0.6	Model Y
34020700	Set Tire Pressure	0.05	Model Y
34020800	Automated Tire Pressure Check	0	Model Y
34020900	Check and Adjust Tire Pressure	0.05	Model Y
34021002	Tire - Front - LH (Remove & Replace)	0.25	Model Y
34021102	Tire - Front - RH (Remove & Replace)	0.25	Model Y
34021202	Tire - Rear - LH (Remove & Replace)	0.25	Model Y
34021302	Tire - Rear - RH (Remove & Replace)	0.25	Model Y
34021405	Tires - Front - Set	0.5	Model Y
34021605	Tires - Rear - Set	0.5	Model Y
34021805	Tires - Vehicle - Set	1	Model Y
34021905	Wheel And New Tire Swap - Vehicle - Set	1	Model Y
34022005	Tire - Front - LH (Road Force) (Balance)	0.15	Model Y
34022015	Tire - Supplemental (Rebalance)	0.15	Model Y
34022025	Tire - Front - LH (Balance)	0.05	Model Y
34022105	Tire - Front - RH (Road Force) (Balance)	0.15	Model Y
34022125	Tire - Front - RH (Balance)	0.05	Model Y
34022205	Tire - Rear - LH (Road Force) (Balance)	0.15	Model Y
34022225	Tire - Rear - LH (Balance)	0.05	Model Y
34022305	Tire - Rear - RH (Road Force) (Balance)	0.15	Model Y
34022325	Tire - Rear - RH (Balance)	0.05	Model Y
34023008	Tire - Front - LH (Repair)	0.55	Model Y
34023108	Tire - Front - RH (Repair)	0.55	Model Y
34023208	Tire - Rear - LH (Repair)	0.55	Model Y
34023308	Tire - Rear - RH (Repair)	0.55	Model Y
34040202	Sensor - TPMS - Front - LH (Remove & Replace)	0.35	Model Y
34040302	Sensor - TPMS - Front - RH (Remove & Replace)	0.35	Model Y

34040402	Sensor - TPMS - Rear - LH (Remove & Replace)	0.35	Model Y
34040502	Sensor - TPMS - Rear - RH (Remove & Replace)	0.35	Model Y
34040602	Wheel Sensors - TPMS - Vehicle Set (Remove & Replace)	0.8	Model Y
34041100	TPMS (Sensor ID Tool Learn)	0.35	Model Y
34041150	TPMS (Sensor ID Drive Learn)	0.05	Model Y
34041300	TPMS - Set Thresholds	0.3	Model Y
34043002	Module - TPMS (Remove & Replace)	1.5	Model Y
34572735	Inspect Halfshaft Torque - Dual Motor (CN Only)	0.4	Model Y
34573181	Inspect Halfshaft Torque - RWD (CN Only)	0.2	Model Y
39011001	Ground Strap - Front Drive Unit (Remove & Install)	0.55	Model Y
39011002	Ground Strap - Front Drive Unit (Remove & Replace)	0.55	Model Y
39011102	Bushing – Front Drive Unit – RH (Includes Alignment Check) (Remove & Replace)	4.35	Model Y
39011202	Bushing - Gearbox - Front Drive Unit (Includes Alignment Check) (Remove & Replace)	3.35	Model Y
39012101	Drive Unit - Front (1st Generation) (Includes Alignment Check) (Remove & Install)	4.65	Model Y
39012102	Drive Unit - Front (1st Generation) (Includes Alignment Check) (Remove & Replace)	3.4	Model Y
39012600	Mount - Front Drive Unit - LH (Includes Alignment Check)	2.55	Model Y
39014012	Fluid Coupling (90 Degrees) - Front Drive Unit (Remove & Replace)	0.9	Model Y
39014202	Fluid Coupling (Straight) - Front Drive Unit (Remove & Replace)	0.45	Model Y
39019175	Replace Motor Oil (DM)	2.9	Model Y
39200602	Inverter - Front Drive Unit (Remove & Replace)	3.35	Model Y
39206302	HV Header - Inverter - Front Drive Unit (Remove & Replace)	0.65	Model Y
39300100	Gearbox Fluid - Front Drive Unit (Check and Fill)	0.2	Model Y
39300102	Gearbox Fluid - Front Drive Unit (1st Generation) (Drain and Refill)	0.5	Model Y
39301001	Heat Exchanger - Front Drive Unit (Remove & Install)	0.65	Model Y
39301002	Heat Exchanger - Front Drive Unit (Remove & Replace)	0.65	Model Y
39301022	Seal - Oil - Differential to Halfshaft Assembly - Front Drive Unit - LH (Remove & Replace)	0.55	Model Y
39301032	Seal - Oil - Differential to Halfshaft Assembly - Front Drive Unit - RH (Remove & Replace)	0.55	Model Y
39301602	Oil Pump - Front Drive Unit (Remove & Replace)	0.5	Model Y
39302011	Halfshaft Assembly - Front - LH (Remove & Install)	0.4	Model Y
39302012	Halfshaft Assembly - Front - LH (Remove & Replace)	0.4	Model Y
39302111	Halfshaft Assembly - Front - RH (Remove & Install)	0.7	Model Y
39302112	Halfshaft Assembly - Front - RH (Remove & Replace)	0.7	Model Y
39302405	Halfshaft - Front Drive Unit - LH (Lubricate at Hub)	0.2	Model Y
39302415	Halfshaft - Front Drive Unit - RH (Lubricate at Hub)	0.2	Model Y
39304802	Oil Filter - Front Drive Unit (Remove & Replace)	0.5	Model Y
39305402	Breather - Front Drive Unit (Remove & Replace)	0.15	Model Y
40011001	Drive Unit - Rear (Includes Alignment Check) (Remove & Install)	3.45	Model Y
40011002	Drive Unit - Rear (Includes Alignment Check) (Remove & Replace)	3.35	Model Y
40012002	Mount - Rear Drive Unit - LH (Includes Alignment Check) (Remove & Replace)	2.25	Model Y
40012201	Mount - Rear Drive Unit - LH (Includes Alignment Check) (Remove & Install)	2.7	Model Y
40012202	Ground Strap - Rear Drive Unit (Remove & Replace)	1.45	Model Y
40012301	Ground Strap - Rear Drive Unit (Remove & Install)	2.25	Model Y
40012402	Bushing - Rear Drive Unit - RH (Includes Alignment Check) (Remove & Replace)	3.8	Model Y
40012537	Replace Motor Oil (RWD)	1.45	Model Y
40012602	Bushing - Rear Drive Unit - Rear (Includes Alignment Check) (Remove & Replace)	3.7	Model Y
40013000	Drive Unit - Create Imprint of Side Serial Number	0.2	Model Y
40013100	Drive Unit - Create Imprint of Lower Serial Number	0.6	Model Y
40014002	Fluid Coupling (55 Degrees) - Rear Drive Unit (Remove & Replace)	0.6	Model Y
40014202	Fluid Coupling (Straight) - Rear Drive Unit (Includes Alignment Check) (Remove & Replace)	2.45	Model Y
40200602	Inverter - Rear Drive Unit (Includes Alignment Check) (Remove & Replace)	2.8	Model Y
40202000	Powertrain Coolant (Drain and Refill) (Add Coolant 1029320-00 if Needed)	0.1	Model Y
40202010	Inverter Coolant Leak Test (Add Coolant 1029320-00 if Needed)	0.1	Model Y
40202020	Inverter Air Leak Test	0.1	Model Y
40206302	HV Header - Inverter - Rear Drive Unit (Remove & Replace)	0.8	Model Y
40300102	Gearbox Fluid - Rear Drive Unit (Drain and Refill)	0.45	Model Y
40301002	Seal - Oil - Differential to Halfshaft Assembly - Rear Drive Unit - LH (Includes Alignment Check) (Remove & Replace)	1.25	Model Y
40301102	Seal - Axle - Rear Drive Unit - RH (Remove & Replace)	1.6	Model Y
40302001	Halfshaft - Rear Drive Unit - LH (Includes Alignment Check) (Remove & Install)	1.2	Model Y
40302002	Halfshaft Assembly - Rear - LH (Includes Alignment Check) (Remove & Replace)	1.2	Model Y
40302101	Halfshaft - Rear Drive Unit - RH (Includes Alignment Check) (Remove & Install)	1.5	Model Y
40302102	Halfshaft - Rear Drive Unit - RH (Remove & Replace)	1.5	Model Y
40302405	Halfshaft - Rear Drive Unit - LH (Lubricate at Hub)	0.2	Model Y

40302415	Halfshaft - Rear Drive Unit - RH (Lubricate at Hub)	0.2	Model Y
40304602	Oil Pump - Rear Drive Unit (Remove & Replace)	0.45	Model Y
40304802	Oil Filter - Rear Drive Unit (Remove & Replace)	0.35	Model Y
40305002	Oil Screen - Rear Drive Unit (Remove & Replace)	0.65	Model Y
40305201	Heat Exchanger - Rear Drive Unit (Includes Alignment Check) (Remove & Install)	1.45	Model Y
40305202	Heat Exchanger - Rear Drive Unit (Includes Alignment Check) (Remove & Replace)	1.45	Model Y
40305402	Breather - Rear Drive Unit (Includes Alignment Check) (Remove & Replace)	1.75	Model Y
44010102	Sensor Target - Door - Charge Port (Remove & Replace)	0.2	Model Y
44011502	Door - Charge Port (Remove & Replace)	0.65	Model Y
44011602	Charge Port (Remove & Replace)	0.5	Model Y
44011652	Charge Port (3-Phase) (Remove & Replace)	0.65	Model Y
44011795	Deadfronts - Pin - Charge Port		Model Y
44011902	Bracket - Busbar - Charge Port to HV Battery (3-Phase) (Remove & Replace)	0.55	Model Y
44012112	Deadfronts - Pin - Charge Port (Remove & Replace)	0.2	Model Y
44013102	Busbars - Charge Port to HV Battery (Remove and Replace)	0.6	Model Y
44013152	Busbars - Charge Port to HV Battery (3-Phase) (Remove & Replace)	0.7	Model Y
44013202	Release Cable - Charge Port (Remove & Replace)	0.6	Model Y
44013205	Charge Port - Manual Release of Cable	0.15	Model Y
44013502	Release Cable - Charge Port (3-Phase) (Remove & Replace)	0.2	Model Y
44014002	Latch Actuator - Charge Port (Remove & Replace)	0.7	Model Y
44014012	Latch Actuator - Charge Port (3 Phase) (Remove & Replace)	0.65	Model Y
44015002	ECU - Charge Port (Remove & Replace)	0.3	Model Y
44015102	Safety Cap - Charge Port (Remove and Replace)	0.3	Model Y
44015112	Safety Cap - Busbar - Charge Port to HV Battery (3-Phase) (Remove & Replace)	0.45	Model Y
44015302	Door Assembly - Charge Port (EMEA) (Remove & Replace)	0.7	Model Y
44018102	Connector - DC Input - Busbar - Charge Port to HV Battery (Remove & Replace)	0.75	Model Y
44019566	Charge Port Lubrication	0.75	Model Y
44500502	Harness - HV Battery to Charge Port (Remove & Replace)	0.65	Model Y
44501302	HV Harness - Center Ski to A/C Compressor (Remove & Replace)	0.6	Model Y
44501402	AC Cable - Charge Port to HV Battery (3-Phase) (Remove & Replace)	0.5	Model Y
44502102	HV Harness - HV Battery To Front Drive Unit (Remove & Replace)	1.7	Model Y
44502112	HV Harness - HV Battery to Front Drive Unit (Structural Pack) (Remove & Replace)	1.25	Model Y
44502202	Harness - HV Battery to Rear Drive Unit (Remove & Replace)	0.75	Model Y
44502212	HV Harness - HV Battery to Rear Drive Unit (Structural Pack) (Remove & Replace)	0.75	Model Y
44503002	Harness - HV Battery to PTC Heater and A/C Compressor (RWD) (Remove & Replace)	1.25	Model Y
44503012	HV Harness - HV Battery to PTC Heater and A/C Compressor (Dual Motor) (Remove and Replace)	1.7	Model Y
44504212	HV Harness - HV Battery To A/C Compressor (Structural Pack) (Remove & Replace)	1.2	Model Y
44509100	High Voltage Circuit Integrity Check	2	Model Y
45001100	NVH Adjustment - 0.25	0.25	Model Y
45001200	NVH Adjustment - 0.5	0.5	Model Y
45001400	Noise/Vibration: Verify And Inspect On-Site	0.3	Model Y
45001409	NVH Inspection - No Trouble Found	0.3	Model Y
45001500	NVH Inspection - Vehicle Familiarization	0.3	Model Y
46016297	Perform Coolant Air Purge Inspection, Need Further Repair (China Only)	0.5	Model Y
46017105	Perform Coolant Air Purge Inspection, No More Action Required (China Only)	0.5	Model Y
50010102	Mobile Connector - UMC (Remove & Replace)	0.1	Model Y
50010202	Remove Stuck Deadfront - Charge Handle	0.05	Model Y
50010206	Provide Mobile Connector Adapter	0.1	Model Y
50011003	Firmware Update - CHAdeMO Charging Adapter	0.1	Model Y
50011102	CHAdeMO Charging Adapter (Remove & Replace)	0.05	Model Y
50011106	Provide CHAdeMO Charging Adapter	0.05	Model Y
50020102	Fuses - Wall Connector (Remove & Replace)	0.5	Model Y
50020402	Cover - Wall Connector (Remove & Replace)	0.1	Model Y
50020702	Wall Connector (Remove & Replace)	0.7	Model Y
50020705	Wall Connector - Sublet	0	Model Y
50020706	Wall Connector Installation	0.9	Model Y
50022002	Handle and Cable Assembly - 80A Wall Connector (Remove & Replace)	0.4	Model Y
50023002	Replace Wall Connector and Reimburse Installation Cost (Remove & Replace)	0	Model Y
50024002	Handle and Cable Assembly - 40A Wall Connector (Remove & Replace)	0.4	Model Y
50030102	Supercharging Cable - Connector (Remove & Replace)	0.4	Model Y
50040102	Check House Current, Provide Mennekes Cable (Remove & Replace)	0.2	Model Y
50040406	Provide J1772 Adapter	0.1	Model Y

50041003	Firmware Update - GB DC Charging Adapter	0.1	Model Y
61010007	Tesla Body Repair - Paint Labor	0	Model Y
61011442	Tesla Body Painting--Car Wash	1	Model Y
61013828	EMEA - Vehicle Region Conversion	0.5	Model Y
61014373	Tesla Body Painting--Paint Polishing (China)		Model Y
61015612	Tesla Body Painting--Polishing	1	Model Y
61015962	Tesla Body Painting--Undercoat Polishing	1	Model Y
61016264	Tesla Body Painting--Painting	1	Model Y
61017157	Tesla Body Painting--Painting Preparation	1	Model Y
61019175	Tesla Body Painting--Spraying Undercoat	1	Model Y
70000105	Third Party Transport	1	Model Y
70000305	Miscellaneous Labor	0	Model Y
70000505	Tire Disposal	1	Model Y
70001405	Valet Service (Tech)	0	Model Y
70001605	Valet Service Declined	0	Model Y
70001805	Courtesy Inspection Declined	0	Model Y
70002005	Non-Tesla (Rental)	0	Model Y
70002405	Rental Car Declined	0	Model Y
70003005	Third-party shuttle service provided (+)	0	Model Y
70003105	Third-party shuttle service provided (-)	0	Model Y
70003205	Third-party shuttle service declined	0	Model Y
70003605	Airport/Train Station Shuttle Provided	0	Model Y
70003805	Tesla Airport Service	1	Model Y
70004105	No Labor Performed - Customer Did Not Authorize Repairs	0	Model Y
70004505	No Labor Performed - Part Replaced	0	Model Y
70004807	Window Tint Removal	2.15	Model Y
70004817	Window Tint Install (Charlotte Only)	1.45	Model Y
70004907	Window Tint Removal (Front Windows Only)	0.4	Model Y
70005005	Rebuilt Vehicle Inspection Complete and Rebuild Approved	0	Model Y
70005505	Car Wash Declined	0	Model Y
70005600	Parts Counter Sales Outside of Network (Over the Counter Sales)	0	Model Y
70005700	Scrap Part Sale Over the Counter	0	Model Y
70005805	Payment Collection Required	1	Model Y
70006005	Body Repair Concierge Service (Japan)	0	Model Y
70007005	Extended Service Agreement (ESA) Plan Purchase	0	Model Y
70010200	Exterior Component/Panel/Glass Adjustment - 0.2	0.2	Model Y
70010400	Exterior Component/Panel/Glass Adjustment - 0.4	0.4	Model Y
70010600	Exterior Component/Panel/Glass Adjustment - 0.6	0.6	Model Y
70011050	Interior Component/Trim/Seal Adjustment - 0.05	0.05	Model Y
70011150	Interior Component/Trim/Seal Adjustment - 0.15	0.15	Model Y
70011300	Interior Component/Trim/Seal Adjustment - 0.3	0.3	Model Y
70012110	General Closures System Calibration	0.1	Model Y
70012180	General HVAC/Thermal System Calibration	0.1	Model Y
70014255	Additional Work Required - Corrosion Present - 0.25	0.25	Model Y
70014505	Additional Work Required - Corrosion Present - 0.5	0.5	Model Y
70014995	Additional Work Required - Corrosion Present - 1	1	Model Y
70015000	Test To Confirm Water Ingress No Longer Present	0.25	Model Y
70020105	Paint - Sublet	0	Model Y
70020205	Wheel Alignment - Sublet	0	Model Y
70020305	Upholstery - Sublet	0	Model Y
70020315	Seat Upholstery Repair (Internal)	1	Model Y
70020325	Seat Upholstery Steaming	0.25	Model Y
70020405	Accessory Installation - Sublet	0	Model Y
70020505	Wheel Refinish - Sublet	0	Model Y
70020805	Glass Repair / Replacement - Sublet	0	Model Y
70021005	Welding - Sublet	0	Model Y
70021105	Dent Repair - Sublet	0	Model Y
70021205	Hood Alignment - Sublet	0	Model Y
70021305	Liftgate Alignment - Sublet	0	Model Y
70021405	Door Alignment - Sublet	0	Model Y
70021505	Exterior Trim - Sublet	0	Model Y
70021605	Window Adjustment -Sublet	0	Model Y

70021705	Exterior Lighting - Sublet	0	Model Y
70021905	Windshield Wipers - Sublet	0	Model Y
70022005	Unsupported Vehicle Body Shop Inspection - Primary	1	Model Y
70022105	High Mounted Brake Lamp - Sublet	0	Model Y
70022205	Unsupported Vehicle Body Shop Inspection - Secondary	1	Model Y
70022305	Vehicle Detailing - Sublet	0	Model Y
70023005	RIV Inspection - Sublet	0	Model Y
70023105	Israel Ordinance 309 Inspection - Sublet	1.79	Model Y
70060005	Thread Repair	0	Model Y
70506139	Factory Mode Reset	0.05	Model Y
72000005	Vehicle Loaner Late Return Fee	1	Model Y
73010008	Remarketing - Photos	0	Model Y
73020008	Remarketing - Detail	0	Model Y
90001006	Level 1 Mobile Service Vehicle Conversion (Retrofit)		Model Y
91000004	Vehicle Familiarization	0.5	Model Y
91001005	Print And Attach Used Car Buyers Guide	0.05	Model Y
91020105	Car Wash (Hand Wash)	0.4	Model Y
91020115	Car Wash (Mechanical Wash)	0.2	Model Y
91020205	Detail I	0.9	Model Y
91020305	Detail II	1.4	Model Y
91020405	Detail III	3	Model Y
91020908	Vehicle Cleaning - General	0	Model Y
91021005	Seasonal Tires - Place in Trunk	0	Model Y
91021105	Seasonal Tires - Ship to Customer	0	Model Y
91021507	Replace Price Information Label	0.05	Model Y
91021517	Install Used Vehicle Label	0.2	Model Y
91022005	Charge Vehicle	0	Model Y
91022407	Vehicle Configuration Update	0.05	Model Y
91029006	Mobile Service Hub Repair	0	Model Y
91040105	Loaner Battery Installation	0	Model Y
91040205	Loaner Battery Removed/Returned	0	Model Y
91041002	Loaner Tire/Wheel (Remove & Replace)	0.2	Model Y
91041108	Loaner Wheel Reunite	0	Model Y
91041605	Loaner Drive Unit Installation	0	Model Y
91041705	Loaner Drive Unit Removed/Returned	0	Model Y
92030010	Factory Body - Fremont	0	Model Y
92050010	Factory Paint - Fremont	0	Model Y
92090010	Factory End Of Line (EOL) - Fremont	0	Model Y
97051766	NVH Package --Headliner Cotton	0.6	Model Y
BD000001	China Vehicle Inspection - Tesla Green Service Day	0.2	Model Y
BD000002	Customer Follow-up Inspection (CN Only)	0.3	Model Y
manualline	Manual Line	1	Model Y
O82001	Rear Performance Caliper Slide Bolt Torque Check	0.35	Model Y
O90001	MY EXTERIOR FITTINGS - Undertray and Diffuser - Rear Undertray and Diffuser - Rear Fascia Diffuser Debris (Inspection)	0.5	Model Y
O91001	1st Row Seat Inspection - No Issues Found	0.1	Model Y
O91002	1st Row Seat Inspection - Scratch/Stain Found	0.1	Model Y
T010915007	FLOOR MAT INSPECTION	0.05	Model Y
TCC-CC-MFA4	Reset Multi Factor Authentication / Passcode		Model Y
VRI-Automation-CC-1	PDI (Without Test Drive)	0.3	Model Y