**DBD** 106885312 **K** 

MERLIN LEGEND † Communications System

Copyright © 1992 AT&T Release 2.0, Issue 1, 10/92

† Trademark of AT&T

To order additional copies of these cards, call the AT&T Customer Information Center at 1-800-432-6600. Ask for Select Code 555-620-150.

# To program a feature onto a button:

- 1. Press Feature and dial 00.
- 2. Press the button you labeled.
- 3. Dial the programming code.
- 4. If additional information is required (e.g., phone no.), dial the digits, then select **Enter** the display. For mistakes, select **Bcksp** from display.
- 5. Press Feature and dial \*00.

Feature	Programming Code		
Account Code Entry Auto Dial - Outside No Inside No. Callback-Selective Camp On	* 82 * 21 + phone no. + Enter * 22+ ext. no. + Enter * 55 * 57		
Coverage - Primary	* 40 + ext. no. + Enter * 41 + ext. no. + Enter * 42+ group no. + Enter * 49 * 47 * 33 * 88		
Last Number Dial Park Pickup Privacy Recall Saved Number Dial	* 8 4  * 86  * 9 + ext. no. or line no. + Enter  * 31  * 775  * 85		

# **Button Programming**

DBD	106885312	K
-----	-----------	---

To order additional copies of these cards, call the AT&T Customer Information Center at 1-800-432-6600. Ask for Select Code 555-620-150.

Follow these instructions when using features that you have not programmed onto buttons on your telephone.

# 1. Press Feature .

#### 2. Dial the code.

Feature	Feature Code	
Account Code Entry	82+ account code + #	
Call Waiting Pickup	87	
Callback-Selective	55	
To cancel:	<b>Drop</b> + line button	
Camp On	57	
Forward/Follow Me	From your phone: 33 + other ext. no.	
	From other phone: 34 + your ext. no.	
To cancel from your phone:	33 + your ext. no.	
To cancel from other phone:	*34 + your ext. no.	
To cancel All:	*34 *(Cancels <i>all</i> forward/follow calls	
	to your phone)	
Group Pickup	88	
Last Number Dial	84	
Language - English	790	
- French	791	
- Spanish	792	
Pickup	9 + ext. no. or line no.	
Privacy	31	
To cancel:	*31	
Recall	775	

To order additional copies of these cards, call the AT&T Customer Information Center at 1-800-432-6600. Ask for Select Code 555-620-150.

### To Use:

Lift handset or press **Speaker**. Press **Feature** and dial a 3-digit system speed dial code. See your System Manager for these codes.

Name	Code	Name	Code
-			

System Speed Dial List

To order additional copies of these cards, call the AT&T Customer Information Center at 1-800-432-6600. Ask for Select Code 555-620-150.

Name	Ext.	Name	Ext.
	<del>-  </del>	+	
	1	1	
		1	

**Extension List** 

## DBD 106885312 K

MERLIN LEGEND † Communications System

Copyright © 1992 AT&T Release 2.0, Issue 1, 10/92

† Trademark of AT&T

To order additional copies of these cards, call the AT&T Customer Information Center at 1-800-432-6600. Ask for Select Code 555-620-150.

#### **Conference Calls**

- 1. Dial first extension or number
- 2. Press **Conf**
- 3. For phones with **ICOM** buttons, press **line** or **ICOM** button
- 4. Dial next extension or number
- 5. Announce call and press Conf
- 6. Repeat steps 2-5 for each participant
- 7. Hang up to end conference
- Press **Drop** and line button to . drop single participant
- Press Hold to temporarily leave conference
- Press any participant's line button to rejoin conference

#### **Transfer Calls**

#### **Unannounced Transfer**

- 1. Press Transfer
- 2. Press **line** or **SA** button
- 3. Dial extension or number
- 4. Press **Transferor** hangup

#### **Announced Transfer**

- 1. Press Transfer
- 2. Press line or SA button
- 3. Dial extension or number
- 4. Announce call
- 5. Press **Transfer** or hang up

## **One-Touch Manual Transfer**

- 1. Press **Auto Dial** button
- 2. Announce call
- 3. Press **Transfer** or hangup

#### **One-Touch Auto Transfer**

1. Press **Auto Dial** 

## Camp-On

 Press programmed Camp-On button or press Feature and dial 57

# To order additional copies of these cards, call the AT&T Customer Information Center at 1-800-432-6600. Ask for Select Code 555-620-150.

### To Program:

- 1. Press Feature then dial 00.
- 2. Press Feature. Do *not* select a button as display instructs.
- 3. Dial a speed dial code (01-24).
- 4. Dial the telephone number. For mistakes, select Bcksp from display.
- 5. Select Enter from display.
- 6. Repeat steps 2 5 to program additional numbers.
- 7. Press Feature then dial \*00.

# To Use: Press and dial a speed dial code (01-24).

Name	Code	Name	Code
	01		13
	02		14
	03		15
	04		16
	05		17
	06		18
	07		19
	08		20
	09		21
	10		22
	11		23
	12		24

(For use only with MLX-10D† telephones)

Personal Speed Dial List