


Overview of Printer Menus

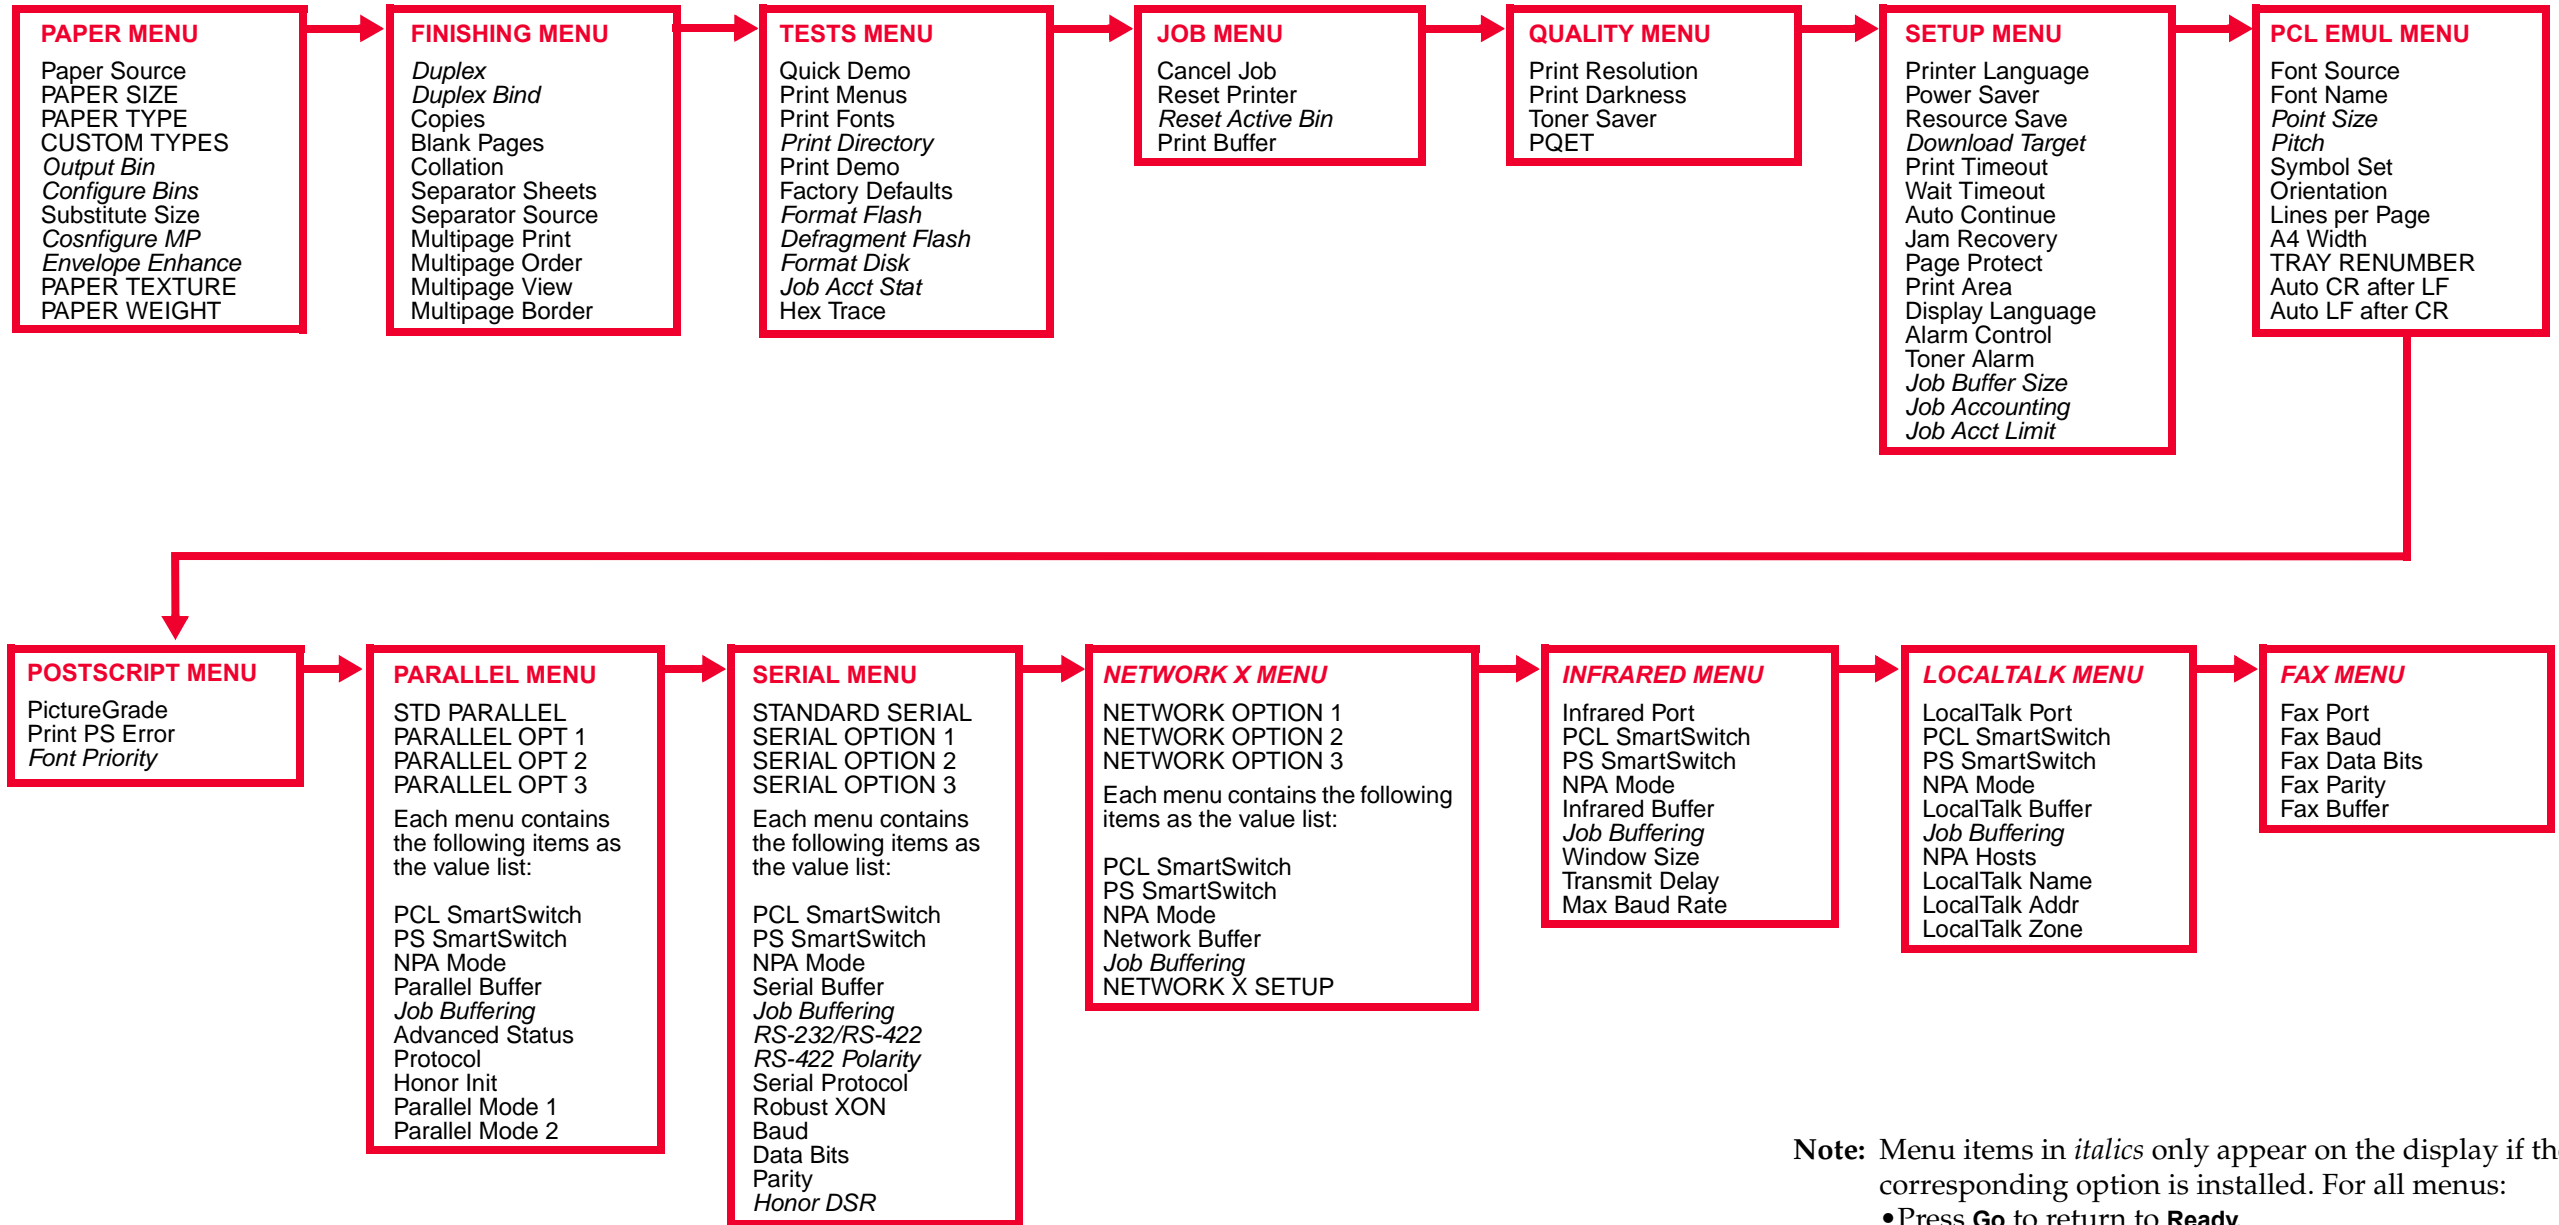


Note: Menu items in *italics* only appear on the display if the corresponding option is installed. For all menus:
 • Press **Go** to return to **Ready**.
 • Press **Return** to back up to the previous menu level.

Quick Reference for the Lexmark Optra S Family

Loading Paper


Paper is loaded into **all** trays in the same manner.

- 1 Remove tray from printer.
- 2 Adjust length guide to correct size.
- 3 Load paper into tray making sure that it lies flat.
Note: Do not load paper above paper capacity mark.
- 4 Adjust width guide to touch edge of paper stack.
- 5 Re-insert paper tray.

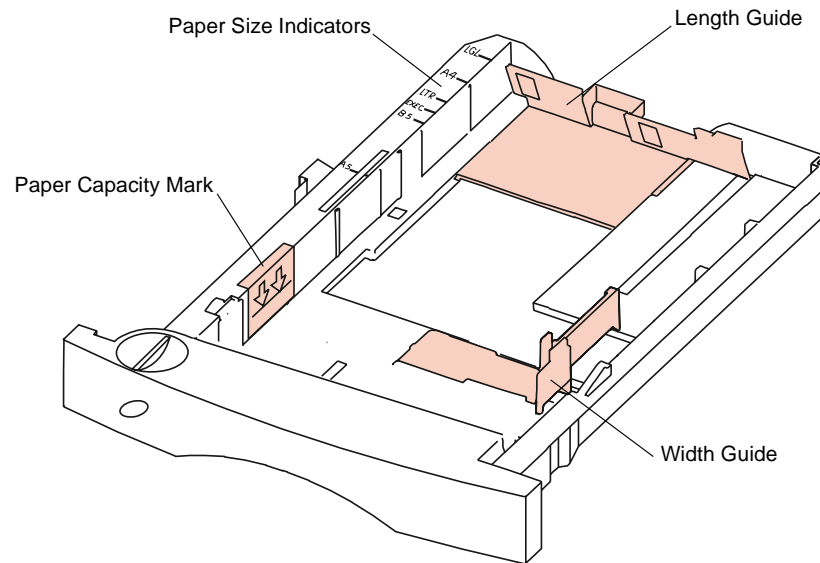


Accessing Paper Jam Areas

If a paper jam should occur, you may be required to open doors and covers, remove paper trays or remove options.

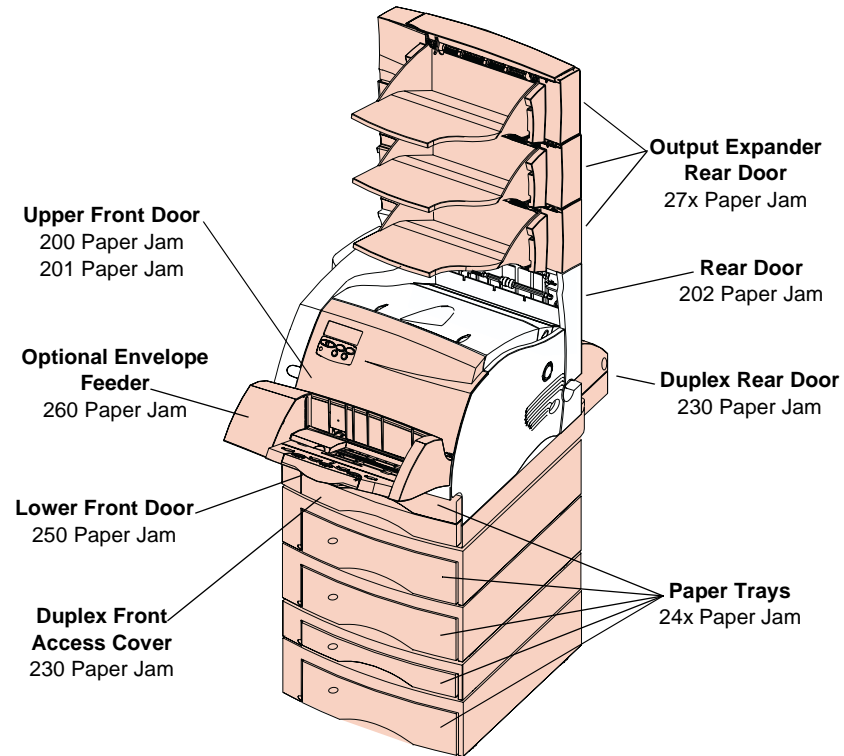

Operator Panel

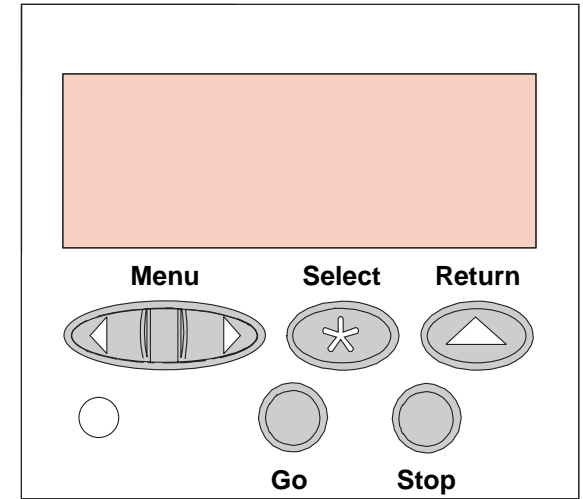

<Menu>

- At the **Ready** message, takes the printer out of the Ready state, and enters the menus.
- At the **Busy** message, takes the printer to the **JOB MENU**.
- When the printer is not ready, goes to the next item in the menus.
- Press and hold the **Menu>** button to scroll forward or the **<Menu** button to scroll backward in numerical value menus.

Select

- Selects the menu item shown on the second line of the display.
- Saves the selection as a new default setting.

Return

- Returns to the previous menu level.

Stop

- Stops all print activity. (No data is lost.)

Go

- Returns the printer to **Ready**. The printer must display **Ready** for jobs to print.
- Exits printer menus.
- Clears messages.

© Copyright Lexmark International, Inc. 1998. All rights reserved. Printed in U.S.A.
This document is printed on recycled paper. 2/98

