


2008
SENTRA

QUICK REFERENCE GUIDE



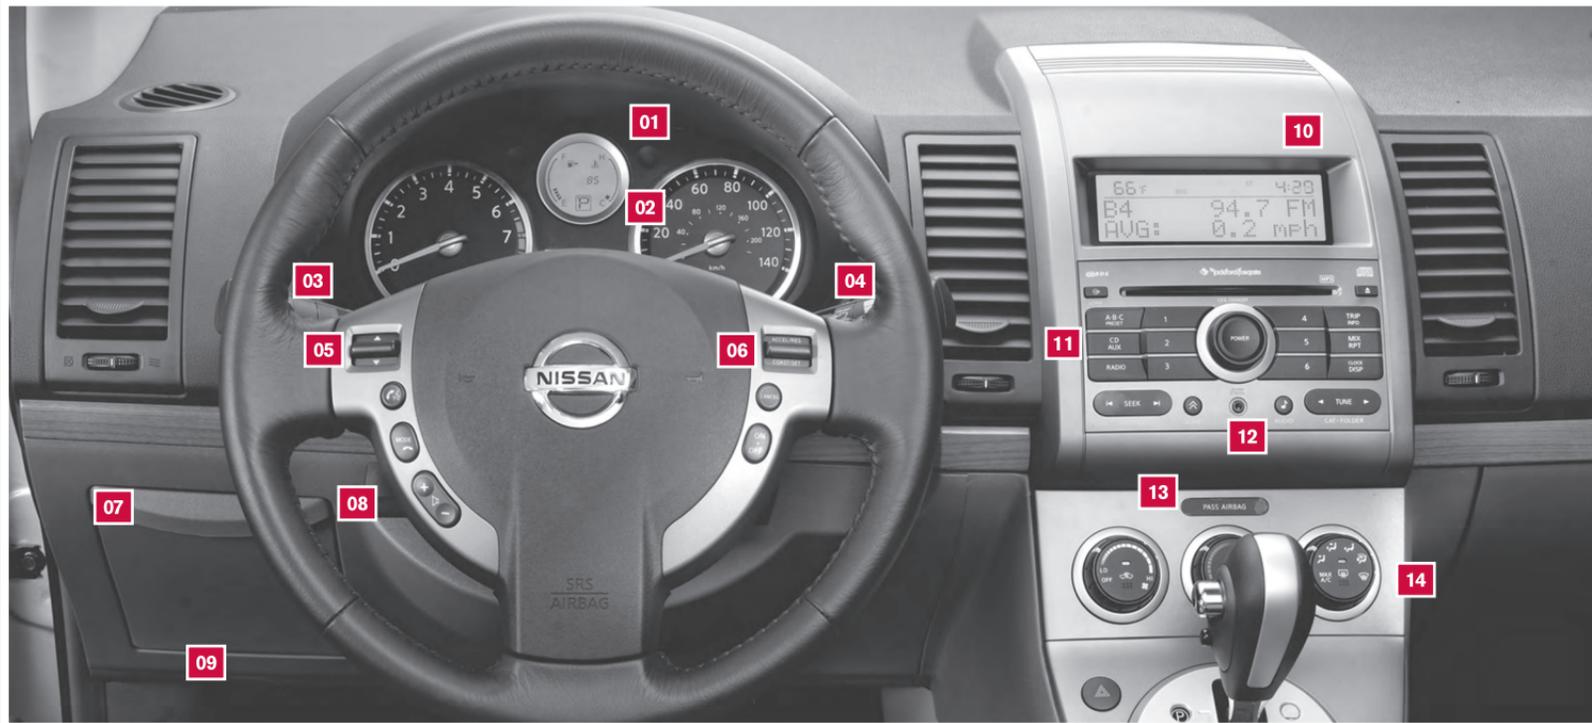

- | | | | | | | | |
|-----------|-----------------------------------|-----------|---|-----------|-----------------------------|-----------|--------------------------------------|
| 01 | LOW TIRE PRESSURE WARNING LIGHT | 05 | STEERING WHEEL SWITCH FOR AUDIO CONTROL/BLUETOOTH® CRUISE CONTROL | 09 | HOOD RELEASE* | 13 | FRONT-PASSENGER AIR BAG STATUS LIGHT |
| 02 | INSTRUMENT BRIGHTNESS CONTROL* | 06 | STEERING WHEEL TILT ADJUSTMENT* | 10 | TRIP COMPUTER | 14 | CLIMATE CONTROLS |
| 03 | HEADLIGHT AND TURN SIGNAL CONTROL | 07 | STORAGE SPACE* | 11 | AUDIO SYSTEM | | |
| 04 | WINDSHIELD WIPER/WASHER SWITCH | 08 | STEERING WHEEL TILT ADJUSTMENT* | 12 | AUXILIARY AUDIO INPUT JACK* | | |

*See your Owner's Manual for more information.

TABLE OF CONTENTS

Remote Keyless Entry System (if so equipped)2
Intelligent Key System (if so equipped)2
Windshield Wiper/Washer Switch3
Headlight and Turn Signal Control3
Steering Wheel Switches for Audio Control/Bluetooth® (if so equipped)4
Cruise Control (if so equipped)5
Manual Climate Control.5
FM/AM/XM®* Radio with CD Changer (if so equipped)7
Clock Set/Adjustment.8
Trip Computer (if so equipped)9
Front-Passenger Air Bag Status Light9
Tire Pressure Monitoring System (TPMS)10
Seat Belt Warning Light and Chime.10
Child Safety Rear Door Lock10
Front Cup Holders.10
Trunk Divider (if so equipped)11
Fuel-Filler Door and Trunk Lid Release Switches11
Moonroof Controls (if so equipped)11
Front Seat Adjustments12
Rear Folding Seat System (if so equipped)12
Xtronic Continuously Variable Transmission (CVT) (if so equipped)13
6-Speed Manual Transmission (if so equipped)13
Bluetooth® Hands-Free Phone System (if so equipped)13

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle.

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)



LOCK DOORS

Press the  button to lock all doors.



UNLOCK DOORS

Press the  button once to unlock the driver's door only. Press the button again within 5 seconds to unlock all doors.



RELEASING TRUNK LID (if so equipped)

Press and hold the trunk release button for longer than 0.5 seconds to open the trunk lid.



USING THE PANIC ALARM

Press and hold the  button for longer than 0.5 seconds. The panic alarm will sound and the headlights will stay on for 25 seconds. The panic alarm stops when it has run for 25 seconds or when any button is pressed on the keyfob.



SILENCING THE HORN BEEP FEATURE

- To deactivate: Press and hold the  and  buttons for at least 2 seconds.
- To activate: Press and hold the  and  buttons for at least 2 seconds.

INTELLIGENT KEY SYSTEM (if so equipped)

The Intelligent Key System allows you to lock or unlock your vehicle, open your trunk and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the door and trunk lock/unlock function is approximately 31 in (0.8 m).
- Locking the vehicle - Push any door handle Request Switch **01** once.
- Unlocking the vehicle - Push any door handle Request Switch **01** once. The corresponding door will unlock. Push the door handle Request Switch **01** again within 1 minute; all other doors will unlock.



STARTING THE ENGINE

- Push the ignition knob in.
- Confirm the Intelligent Key warning light is illuminated green.
- Turn the ignition knob to start the engine.



TURNING THE ENGINE OFF

- Shift the transmission into P (Park).
- Turn the ignition knob to the LOCK position.
- An audible warning chime will sound when exiting the vehicle if the ignition knob is not completely turned to the OFF position.

OPENING THE TRUNK

- Push the request/release switch **02** under the trunk handle.
- Pull up and out on the handle to open the trunk.



WINDSHIELD WIPER/WASHER SWITCH

- The ignition switch must be in the ON position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:


1A Intermittent (**INT**) – Front wipers operate intermittently and can be further adjusted by twisting the time control ring **1B**.

02 Low Speed (**LO**) – Continuous low-speed operation of front wipers.

03 High Speed (**HI**) – Continuous high-speed operation of front wipers.

04 Mist (**MIST**) – Lift the lever up for one sweep of the front wipers.


- Pull the lever toward you to activate front washer fluid and several sweeps of the wipers.

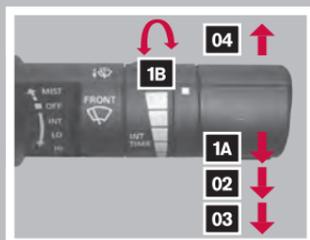

HEADLIGHT AND TURN SIGNAL CONTROL

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the headlight control switch **01** to the  position to turn on the headlights. All other lights remain on.

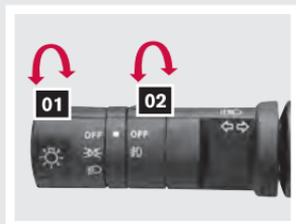


FOG LIGHT OPERATION (if so equipped)

NOTE: The headlights must be on and the low beams selected for the fog lights to operate.

- Turn the switch (inside collar) **02** to the  position to turn on the fog lights.
- Turn the switch (inside collar) **02** to the **OFF** position to turn off the fog lights.


TURN SIGNAL SWITCH

- Move the headlight control switch up or down **A** to signal a turning direction. When the turn is completed, the turn signals cancel automatically.
- To signal a lane change, move the headlight control switch up or down **B** to the point where the indicator light begins to flash, but the headlight control switch does not latch.

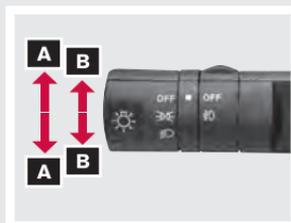

HIGH BEAM

- Push the headlight control switch forward **C** to select the high beam function. The blue  indicator light illuminates. Pull the headlight switch back to the original position to select the low beam. The blue  indicator light goes off.
- Pull and release the headlight control switch **D** to flash the headlight high beams on and off.

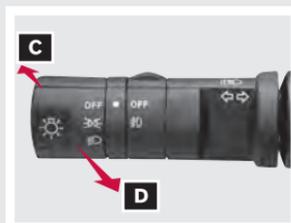

STEERING WHEEL SWITCHES FOR AUDIO CONTROL/ BLUETOOTH® (if so equipped)

- Press the **MODE** button to turn the audio system on.
- To choose Preset A, B, C, CD or AUX press **MODE** repeatedly.
- The tuning up or down  switch can be used to perform the following:
 - Push the  switch for less than 1.5 seconds to change to a preset station.
 - Push and hold the  switch for more than 1.5 seconds to seek the next or previous broadcasting radio station.
 - Push the  switch while playing a CD (if so equipped) for less than 1.5 seconds to change tracks on the CD.
 - If the vehicle is equipped with a CD changer, push and hold the  switch for more than 1.5 seconds to change between CDs.
- Push the **+** or **-** control switch to increase or decrease the volume.



CRUISE CONTROL (if so equipped)

- To activate the cruise control, push the **ON-OFF** switch. The indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch and release it. The SET indicator light in the instrument panel will illuminate.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch. When the vehicle attains the speed you desire, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel cruise control, push the **CANCEL** switch or tap the brake pedal. The SET indicator light in the instrument panel will go out.
- To resume a preset speed, push and release the **ACCEL/RES** switch. The vehicle returns to the last set cruising speed when the vehicle speed is over 24 MPH (38 km/h).
- To turn off cruise control, push the **ON-OFF** switch. Both the CRUISE indicator light and the SET indicator light in the instrument panel will go out.



MANUAL CLIMATE CONTROL

01 FAN SPEED CONTROL BUTTONS

Turn the fan speed control dial  to the left (slow) or right (fast) to control fan speed.

02 TEMPERATURE CONTROL DIAL

Turn the temperature control dial for the desired temperature. Turn the control dial to the left for cold air or right for hot air.

03 AIR FLOW CONTROL DIAL

Turn the dial to select the following air flow outlets:

 Air flows from center and side vents with maximum cooling (air conditioning).

 Air flows from the center and side vents.

 Air flows from the center, side, and foot vents.

 Air flows mainly from the foot vent.

 Air flows from the defroster and foot vents.

 Air flows mainly from the defroster vents.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Turn the air flow control dial to the front window defroster mode . The A/C automatically turns on when the defroster mode is selected.
- Turn the temperature control dial left or right to set the desired temperature.
- To set the defroster on high, turn both the fan speed dial **01** and the temperature control **02** all the way to the right.

05 DEFROSTING/DEFOGGING REAR WINDOW

Push the rear window defroster switch  on. Push the switch again to manually turn the defroster off. This function automatically turns off in approximately 15 minutes.

06 A/C ON/OFF BUTTON (if so equipped)

Press the **A/C** button to manually turn the A/C on or off.

07 AIR RECIRCULATION BUTTON (if so equipped)

- Press the air recirculation button  to recirculate air inside the vehicle.
- Press the air recirculation button  again to turn air recirculation off.
- The air recirculation mode is only functional when the air flow control dial is in the following positions:  and .



FM/AM/XM®* RADIO WITH CD CHANGER (if so equipped)

01 LOAD BUTTON

- **LOAD A SINGLE DISC** - Press the  button for less than 1.5 seconds. Select the loading slot by pressing one of the CD insert select buttons (1 - 6), then insert the CD.
- **LOAD UP TO 6 DISCS** - Press and hold the  button for more than 1.5 seconds. The slot numbers (1-6) will illuminate on the display when CDs are loaded into the changer.

02 PRESET A-B-C BUTTON

Press the **PRESET A-B-C** button until you reach the desired setting. The radio is equipped with three separate banks, each with six station presets. You may store any combination of FM, AM or XM® radio presets on each bank.

03 CD/AUX BUTTON

- Press the **CD/AUX** button to play a CD loaded into the CD changer.
- Press the **CD/AUX** button again to play a compatible device such as an MP3 player when it is plugged into the **AUX** (auxiliary) jack.

NOTE: You may need to adjust the volume on any compatible device plugged into the auxiliary jack to find the most desired sound level of the audio system.

04 RADIO BUTTON

Pressing the **RADIO** select button will change the band to either FM, AM or XM® radio stations.

05 SEEK BUTTON

To scan quickly through each broadcasting station, press the **SEEK** button. To skip from one track to another on a CD, press the **SEEK** button.

06 SCAN BUTTON

Press the  (**SCAN**) button to stop at each broadcasting station (FM, AM or XM®) for 5 seconds. Pressing the button again during this 5-second period will stop scan tuning and the radio will remain tuned to that station.

07 AUDIO BUTTON

To adjust the Bass, Midrange, Treble, Fade, Balance, Speed Sensitive Volume (SSV) (if so equipped), Beep ON/OFF and Language, press the  (**AUDIO**) button until the desired mode is displayed, then press the **TUNE (CAT-FOLDER)** button to adjust the settings.

08 TUNE (CAT-FOLDER) BUTTON

- To manually tune the radio, press the **TUNE (CAT-FOLDER)** button. When the **TUNE (CAT-FOLDER)** button is pressed while a CD is playing, it will fast forward or rewind. When the button is released, the CD will play at normal speed.

■ MP3 PLAYBACK (if so equipped)

In addition to playing audio CDs, the audio system can play MP3 files recorded on CD-ROM, CD-R, and CD-RW discs. Each disc can have a maximum of 8 folder levels and 255 folders. A total of 512 MP3 files can be played back. During MP3 playback, some recorded ID3 tag information can be displayed by pressing the **CLOCK DISP** button. Use the **TUNE (CAT-FOLDER)** button to navigate the MP3 folders. Press and hold the **TUNE (CAT-FOLDER)** button to fast forward or rewind.

09 MIX/RPT BUTTON

Press the **MIX/RPT** button to change the play pattern while listening to a CD or an MP3 CD.

10 EJECT BUTTON

- **EJECT A SINGLE DISC** - Press the  button for less than 1.5 seconds. Select the eject slot by pressing one of the CD insert select buttons (**1 - 6**). The CD will then eject.
- **EJECT ALL DISCS** - Press and hold the  button for more than 1.5 seconds. The CDs will be ejected one after another.

*XM® Satellite Radio is only available on vehicles equipped with optional XM® satellite subscription service.

CLOCK SET/ADJUSTMENT

CD CHANGER (if so equipped)

- To adjust the time, press and hold the **CLOCK DISP** button for more than approximately 1.5 seconds.
- Hour Adjust will appear on the screen; press the **SEEK** or **TUNE** button to adjust the hour.

- Press the **CLOCK DISP** button again.
- Minute Adjust will appear on the screen; press the **SEEK** or **TUNE** button to adjust the minutes.
- Press the **CLOCK DISP** button again. "Clock Is Set" will appear on the screen.

TRIP COMPUTER (if so equipped)

TRIP INFO BUTTON

When the **TRIP INFO** button is pressed, the following modes will display on the screen:



- **DISTANCE TO EMPTY (DTE)** – Estimates the distance that can be driven before refueling.
- **AVERAGE SPEED (MPH or km/h)** – Shows the average speed since the last reset.
- **FUEL ECONOMY (MPG or L/100 km)** – Shows the average fuel consumption since the last reset.
- **TRIP TIME** – Shows the time since the last reset.
- **RESET** – Press and hold the **TRIP INFO** button for more than 1.5 seconds to reset the trip items.

FRONT-PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the Nissan Advanced Air Bag System. Under some conditions, depending on the type of occupant or object detected in the front passenger seat by the occupant classification sensor, the front-passenger air bag is designed to automatically turn **OFF**. When the front-passenger air bag is **OFF**, the front-passenger air bag status light will illuminate*. For example:



- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, **OFF will illuminate** to indicate that the front-passenger **air bag is OFF and will not inflate in a crash**.
- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the **OFF will not illuminate** to indicate that the front-passenger **air bag is operational**.

***When the system detects that the front-passenger's seat is unoccupied, the passenger air bag status light will not illuminate even though the front-passenger air bag is OFF.**

TIRE PRESSURE MONITORING SYSTEM (TPMS)

This system monitors tire pressure. If the low tire pressure warning light illuminates, check the tire pressure in all four tires.

Adjust the low tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver's door opening. After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25 km/h) to activate the TPMS and turn off the low tire pressure warning light.



SEAT BELT WARNING LIGHT AND CHIME

- The light and chime remind you to fasten your seat belts. The light illuminates whenever the ignition key is turned to the ON or START position and remains illuminated until the driver's seat belt is fastened. At the same time, the chime sounds for approximately 6 seconds unless the driver's seat belt is securely fastened.
- The seat belt warning light may also illuminate if the front passenger's seat belt is not fastened when the front passenger's seat is occupied. For 7 seconds after the ignition switch is in the ON position, the system does not activate the warning light for the front passenger.




CHILD SAFETY REAR DOOR LOCK

Child safety locks help prevent the rear doors from being opened accidentally, especially when small children are in the vehicle. The child safety lock levers are located on the edge of the rear doors. When the lever is in the LOCK position, the door can only be opened from the outside.



FRONT CUP HOLDERS

Adjust the front cup holder size by turning the adjustment knob and sliding the cup holder divider to the desired position.

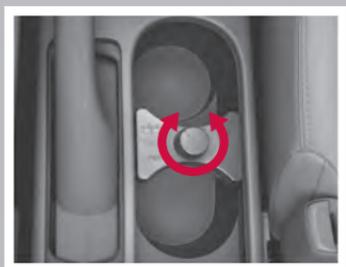

TRUNK DIVIDER (if so equipped)

Access the trunk divider by opening the trunk. To remove the trunk divider, press down on the securing latch **01** and lower the trunk divider. Pull and lift the divider out of the holding brackets **02** to remove it from the trunk.



FUEL-FILLER DOOR AND TRUNK LID RELEASE SWITCHES

FUEL-FILLER DOOR RELEASE SWITCH

The fuel-filler door release is located on the floor to the left of the driver's seat.

- To open the fuel-filler door, push down on the switch **01**.
- To lock, close the fuel-filler door securely.



TRUNK LID RELEASE SWITCH

The trunk lid release switch is located on the floor to the left of the driver's seat.

- To open the trunk lid, pull the lid release switch up **02**.
- To close the trunk lid, lower and push the trunk lid down securely.

MOONROOF CONTROLS (if so equipped)

The ignition switch must be in the ON position to operate the moonroof controls.

TILTING THE MOONROOF

- To tilt the moonroof up, first close the moonroof by pushing the switch toward **UP/CLOSE** **01**. Release the switch, then push the **UP/CLOSE** switch again to tilt the moonroof up.
- To tilt the moonroof down, push the switch toward **DOWN/OPEN** **02**.



SLIDING THE MOONROOF

- To fully open the moonroof, push the switch toward **DOWN/OPEN** **02**. To open the moonroof part way, push the switch in any direction while the moonroof is sliding to stop it in the desired position.
- To fully close the moonroof, push the switch toward **UP/CLOSE** **01**. To close the moonroof part way, push the switch in any direction while the moonroof is sliding to stop it in the desired position.

FRONT SEAT ADJUSTMENTS

- Pull up on the lever **01** under the front of the seat and slide backward or forward; release.
- Lift the lever **02** on the side of the seat to adjust your seatback backward or forward; release the lever when you have found a comfortable angle and the seat belt fits properly.
- Pull up or push down the adjusting lever **03** repeatedly to adjust the seat height.



REAR FOLDING SEAT SYSTEM (if so equipped)





INTERIOR TRUNK ACCESS (if so equipped)

Either side of the seatback (or both) can be folded and has its own release.

- Pull the release **01** on the top of the seatback to fold the rear seat down.

FOLDING THE REAR SEAT CUSHIONS AND SEATBACKS (if so equipped)

1. Lift up on the front edge of the seat cushion **02** and fold the cushion **03** toward the front of the vehicle.
2. Pull forward on the head restraint **04** and rotate it to the lowered position until locked.
3. Fold down the seatbacks **05**.
4. Reverse the process to return the seat to a seating position. Return the head restraint to the upright position by pushing down and releasing it.

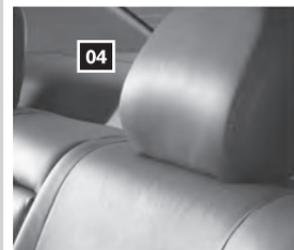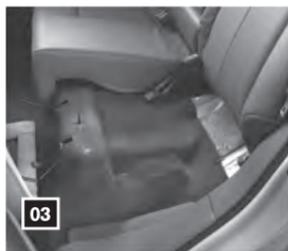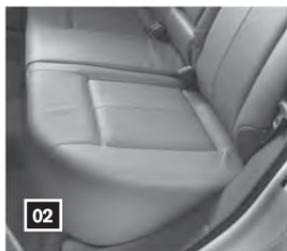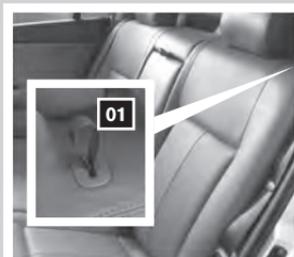


XTRONIC CONTINUOUSLY VARIABLE TRANSMISSION (CVT) (if so equipped)

- The Xtronic CVT does not produce a gear change sensation like traditional automatic transmissions.
- R (Reverse) speed for CVT vehicles is limited to 25 MPH (40 km/h).
- The transmission in your vehicle requires a special fluid available only at your NISSAN dealer. No other fluid will meet the exact requirements of the Xtronic CVT.

OVERDRIVE (O/D) OFF SWITCH

- Each time your vehicle is started, the transmission is automatically “reset” to Overdrive on.
- To turn Overdrive mode off, push the O/D OFF switch **01** . The O/D OFF light in the instrument panel will illuminate.
- Use the Overdrive off mode when you need improved engine braking.

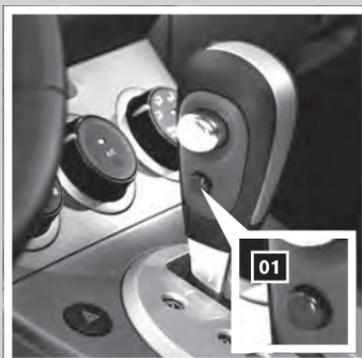

6-SPEED MANUAL TRANSMISSION (if so equipped)

LOCK OUT

- In 6-speed manual transmission equipped vehicles, the shift lever is equipped with a Reverse lock-out feature that prevents accidental selection of Reverse (instead of 1st gear).

SHIFTING TO REVERSE

- Lift up on the collar just below the shift lever, then move the shift lever left and up into Reverse.




BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

With an overhead microphone and sound transmitted through the audio system speaker, the Bluetooth® Hands-Free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.

Bluetooth®
controls location

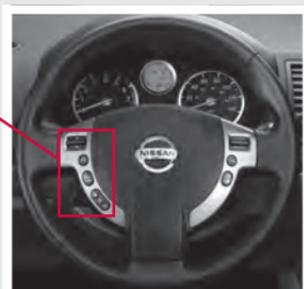

- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- To go back to the previous command, say “Go back” or “Correction.”
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit,” or press the ^{MODE} button.
- To increase or decrease the volume of the voice prompts, push the + or – (volume) control buttons on the steering wheel or turn the volume knob on the audio system while the system is responding.
- Speak in a clear and natural voice without pausing between words.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode.
- Some commands are not available while the vehicle is in motion.
- The “Help” command can be used in any menu to hear a list of available commands.
- Please refer to the cellular phone manufacturer Owner’s Manual for detailed information regarding your Bluetooth® phone.
- **For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth.**

PAIRING YOUR PHONE

To use the hands-free feature, you need to set-up, or pair, the system to recognize your compatible cellular phone(s). 5 Bluetooth®-enabled phones can be paired. After set-up, the system automatically connects with a paired phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.

PAIRING PROCEDURE

NOTE: The vehicle must be stationary when pairing the phone.

1. Press the  button on the steering wheel and wait for the tone.
 2. Say “Setup.”
 3. Wait for the tone, then say “Pair phone.”
 4. Wait for the tone, then say “New phone.”
 5. Initiate pairing from the phone.
- The pairing procedure varies according to each cellular phone model. For detailed pairing instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PASSKEY code, enter “1234” from the handset. (The PASSKEY code is assigned by NISSAN and cannot be changed.)
6. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.
 7. Say a number between 1 and 5 when the system asks you for a priority level. The priority level determines which phone interacts with the system when two or more paired phones are active in the vehicle at the same time. Choose 1 if this is the only phone or the primary phone.
 8. Say “Yes” or “No” when the system asks if you would like to select a custom ring tone. Follow the instructions provided by the system to choose a ring tone.

SETTING UP YOUR PHONEBOOK – ADDING NEW ENTRIES

Each paired phone has its own dedicated phone book. Each phone book can store up to 40 names. Each name can have up to 4 locations/numbers: Home, Office, Mobile, and Other.

NOTE: The vehicle must be stationary when adding new entries.

1. Press the  button and wait for the tone.
2. Say "Phone book."
3. Wait for the tone, then say "New entry."
4. When prompted, say the name for the new entry. For example, say "Michelle." If the name is too short or too long, or if it sounds too much like a name that is already stored in the phone book, the system tells you and prompts you to say a name again. Choose a new name.
5. Say "Yes" or "No" when the system asks you to confirm the name is correct.
6. Say a location ("Home," "Office," "Mobile" or "Other") when the system asks you to provide one. The system acknowledges the location.
 - By Voice command - When prompted, say a phone number for the location. For example, say "five five five one two one two." The system repeats the number and prompts you for the next command.
 - By Bluetooth® transfer - Say "Transfer entry." The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone via the Bluetooth® communication link. The transfer procedure varies according to each cellular phone. See the cellular phone owner's manual for details.
7. Say "Store" when you are finished entering numbers. The system confirms the name, location, and number.
8. Say "Yes" or "No" when the system asks if you would like to store another location for the same name. If you do not respond to the system prompt, the system ends the New Entry session.

MAKING A PHONE CALL

1. Press the  button.
2. After the tone, do one of the following:
 - Say "Call [name] [location]." For example, say "Call Michelle Home."
 - Say "Call [number]." For example, say "Call 123-456-7891."
 - Say "Redial" to redial the previous phone number called by the system.
 - Say "Call International" to dial more than 10 digits or any special characters.

RECEIVING/ENDING A PHONE CALL

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

HOW TO SAY NUMBER

NISSAN voice recognition permits numbers to be spoken in a variety of ways.

- Say “zero” or “oh” for “0.” Example: 1-800-662-6200 – Say “one eight zero zero six six two six two oh oh.”
- Say “pound” for “#”. Say “star” for “*” (available when using the “Call International” command, and the “Send” command during a call).
- Say “plus” for “+” (available only when using the “Call International” command).
- Say “pause” for a 2 second pause (available only when storing a phone book number).

MEMO



Nissan, the Nissan Brand Symbol, "SHIFT_" tagline, Z and Nissan model names are Nissan trademarks.

© 2007 Nissan North America, Inc.

QR8E-0B16U1

Printing: October 2007 (05)