 


2008 **XTERRA**

QUICK REFERENCE GUIDE



SHIFT_your limits

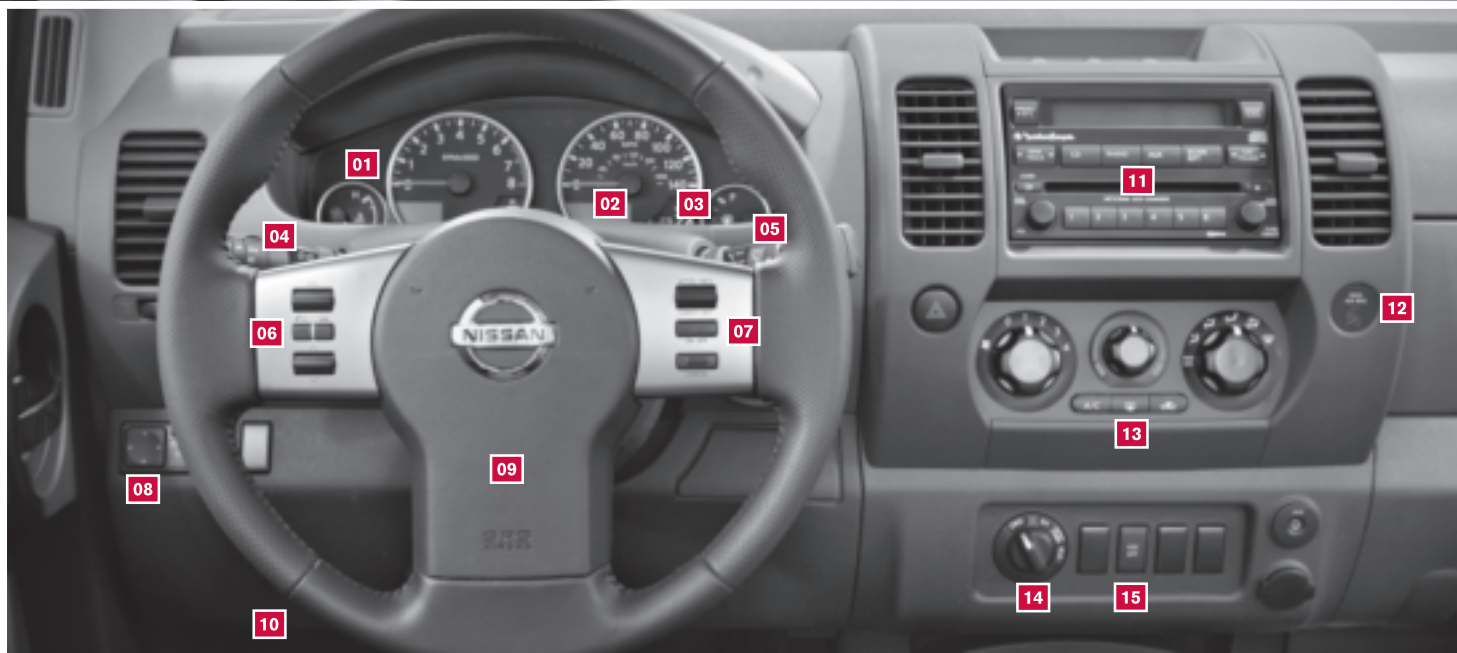

- | | | | | | | | |
|-----------|---|-----------|--|-----------|--------------------------------------|-----------|--|
| 01 | LOW TIRE PRESSURE WARNING LIGHT | 05 | WINDSHIELD WIPER/WASHER SWITCH | 09 | STEERING WHEEL TILT ADJUSTMENT* | 13 | CLIMATE CONTROLS |
| 02 | TRIP COMPUTER | 06 | STEERING WHEEL SWITCH FOR AUDIO CONTROL/BLUETOOTH® | 10 | HOOD RELEASE* | 14 | FOUR-WHEEL DRIVE (4WD) SHIFT SWITCH |
| 03 | INSTRUMENT BRIGHTNESS CONTROL/ TRIP CHANGE BUTTON | 07 | CRUISE CONTROL | 11 | AUDIO SYSTEM | 15 | VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH |
| 04 | HEADLIGHT AND TURN SIGNAL CONTROL | 08 | MIRROR CONTROL SWITCH* | 12 | FRONT-PASSENGER AIR BAG STATUS LIGHT | | |

*See your Owner's Manual for more information.

TABLE OF CONTENTS

Remote Keyless Entry System (if so equipped)	2
Windshield Wiper/Washer Switch	2
Headlight and Turn Signal Control	3
Steering Wheel Switches for Audio Control/Bluetooth® (if so equipped)	3
Cruise Control (if so equipped)	4
Climate Control	5
FM/AM/XM®* Radio with CD Changer (if so equipped)	6
Clock Set/Adjustment.	8
Trip Computer (if so equipped)	8
Instrument Brightness Control/Trip Change Button	8
Four-Wheel Drive (4WD) Shift Switch (if so equipped)	9
Vehicle Dynamic Control (VDC) Off Switch (if so equipped)	9
E-Lock Switch (if so equipped)	9
Hill Descent Control Switch (if so equipped)	10
Hill Start Assist (if so equipped)	10
Front-Passenger Air Bag Status Light	10
Tire Pressure Monitoring System (TPMS)	11
Seat Belt Warning Light and Chime.	11
Child Safety Rear Door Lock.	11
Front Seat Adjustments	11
Fold Flat Front Passenger Seat (if so equipped)	12
Folding the Second Row Bench Seat.	13
Channel Tie Down Hooks (if so equipped).	13
Bluetooth® Hands-Free Phone System (if so equipped)	13

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle.

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)



LOCK DOORS

Press the button to lock all doors.



UNLOCK DOORS

Press the button once to unlock the driver's door only. Press the button again within 5 seconds to unlock all doors.



USING THE PANIC ALARM

Press and hold the button for longer than 0.5 seconds. The panic alarm will sound and the headlights will stay on for 25 seconds. The panic alarm stops when it has run for 25 seconds or when any button is pressed on the keyfob.

SILENCING THE HORN BEEP FEATURE

- To deactivate: Press and hold the and buttons for at least 2 seconds.
- To activate: Press and hold the and buttons for at least 2 seconds.

WINDSHIELD WIPER/WASHER SWITCH

- The ignition switch must be in the ON position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:

1A Intermittent (**INT**) – Front wipers operate intermittently and can be further adjusted by twisting the time control ring **1B**.

 
02 Low Speed (**LO**) – Continuous low-speed operation of front wipers.

03 High Speed (**HI**) – Continuous high-speed operation of front wipers.

04 Mist (**MIST**) – Lift the lever up for one sweep of the front wipers.



05 Rear Wipers (**REAR**) – Twist the end section to operate the first (**INT**) or second (**ON**) speed settings for the rear wipers.

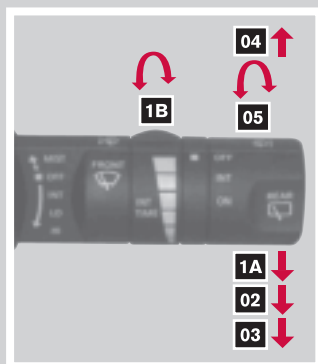 
- The washer function activates the washer fluid and several sweeps of the wipers:
 - For FRONT WASHER, pull lever toward you.
 - For REAR WIPER, push lever away from you.



 
HEADLIGHT AND TURN SIGNAL CONTROL

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the headlight control switch **01** to the  position to turn on the headlights. All other lights remain on.

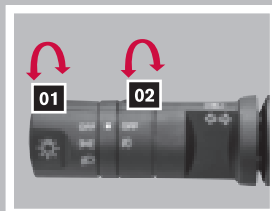 


FOG LIGHT OPERATION (if so equipped)



- Turn the switch (inside collar) **02** to the  position to turn on the fog lights.
- Turn the switch (inside collar) **02** to the **OFF** position to turn off the fog lights.

 
TURN SIGNAL SWITCH

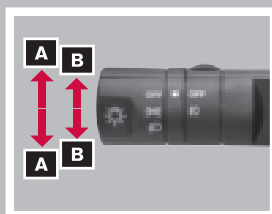- Move the headlight control switch up or down **A** to signal a turning direction. When the turn is completed, the turn signals cancel automatically.
- To signal a lane change, move the headlight control switch up or down **B** to the point where the indicator light begins to flash, but the headlight control switch does not latch.





HIGH BEAM

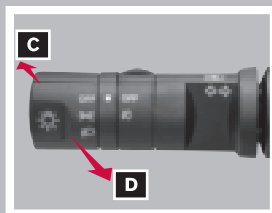- Push the headlight control switch forward **C** to select the high beam function. The blue  indicator light illuminates. Pull the headlight switch back to the original position to select the low beam. The blue  indicator light goes off.
- Pull and release the headlight control switch **D** to flash the headlight high beams on and off.



STEERING WHEEL SWITCHES FOR AUDIO CONTROL/ BLUETOOTH® (if so equipped)

- Press the **MODE** button to turn the radio system on.
- To choose Preset A, B, C, CD, AUX or XM® (if so equipped) press **MODE** repeatedly.
- The tuning up or down  switch can be used to perform the following:
 - Push the  switch for less than 1.5 seconds to change to a preset station.



- Push and hold the \wedge / ∇ switch for more than 1.5 seconds to seek the next or previous broadcasting radio station.
- Push the \wedge / ∇ switch while playing a CD (if so equipped) for less than 1.5 seconds to change tracks on the CD.
- If the vehicle is equipped with a CD changer, push and hold the \wedge / ∇ switch for more than 1.5 seconds to change between CDs.
- Push the **VOL** control switch up or down to increase or decrease the volume.

CRUISE CONTROL (if so equipped)


- To activate the cruise control, push the **ON-OFF** switch. The indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch and release it. The SET indicator light in the instrument panel will illuminate.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch. When the vehicle attains the speed you desire, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel cruise control, push the **CANCEL** switch or tap the brake pedal. The SET indicator light in the instrument panel will go out.
- To resume a preset speed, push and release the **ACCEL/RES** switch. The vehicle returns to the last set cruising speed when the vehicle speed is over 25 MPH (40 km/h).
- To turn off cruise control, push the **ON-OFF** switch. Both the CRUISE indicator light and the SET indicator light in the instrument panel will go out.





CLIMATE CONTROL

01 FAN SPEED CONTROL DIAL

 
Turn the fan speed control dial  to the left (slow) or right (fast) to control fan speed.


02 TEMPERATURE CONTROL DIAL


Turn the temperature control dial for the desired temperature. Turn the control dial to the left for cold air or right for hot air.


03 AIR FLOW CONTROL DIAL

Turn the dial to select the following air flow outlets:


 Air flows from the center and side vents with maximum cooling (air conditioning).

 Air flows from the center and side vents.


 Air flows from the center and side vents and the front and rear floor outlets.

 Air flows mainly from the front and rear floor outlets.


 Air flows from the defroster outlets and the front and rear floor outlets.

 Air flows mainly from the defroster vents.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Turn the air flow control dial to the front window defroster mode . The A/C automatically turns on when the defroster mode is selected.
- Turn the temperature control dial left or right to set the desired temperature.
- To set the defroster on high, turn the fan speed dial all the way to the right.






05 DEFROSTING/DEFOGGING REAR WINDOW

Press the rear window defroster button  on. Press the button again to manually turn the defroster off. This function automatically turns off in approximately 15 minutes.

06 A/C ON/OFF BUTTON (if so equipped)

Press the **A/C** button to manually turn the A/C on or off.

07 AIR RECIRCULATION BUTTON (if so equipped)

- Press the air recirculation button  to recirculate air inside the vehicle.
- Press the air recirculation button  again to turn air recirculation off.
- The air recirculation mode cannot be selected if the air flow control mode is in the following positions: ,  or .



FM/AM/XM®* RADIO WITH CD CHANGER (if so equipped)

01 PRESET A-B-C BUTTON

Press the **PRESET A-B-C** button until you reach the desired setting. The radio is equipped with three separate banks, each with six station presets. You may store any combination of FM, AM or XM® radio presets on each bank.

02 SEEK/TRACK BUTTON

- To scan quickly through each broadcasting station, press the **SEEK/TRACK** button.
- To skip from one track to another on a CD, press the **SEEK/TRACK** button. Each time the button is pressed, the CD will advance or skip back one track.

03 AUX BUTTON

Press the **AUX** button to play a compatible device such as an MP3 player when it is plugged into the auxiliary jack.



04 SCAN/RPT BUTTON

Press the **SCAN/RPT** button to stop at each broadcasting station (FM, AM or XM®) for 5 seconds. Pressing the button again during this 5-second period will stop scan tuning and the radio will remain tuned to that station. If the **SCAN/RPT** button is not pressed within 5 seconds, scan tuning moves to the next station.

05 CAT/FOLDER BUTTON

- To manually tune the radio, press the **CAT/FOLDER** button.
- When the **CAT/FOLDER** button is pressed while a CD is playing, it will fast forward or rewind. When the button is released, the CD will play at normal speed.
- **MP3 PLAYBACK (if so equipped)**
In addition to playing audio CDs, the audio system can play MP3 files recorded on CD-ROM, CD-R, and CD-RW discs. Each disc can have a maximum of 8 folder levels and 255 folders. A total of 512 MP3 files can be played back. During MP3 playback, some recorded ID3 tag information can be displayed by pressing the **DISP CLOCK** button. Use the **CAT/FOLDER** button to navigate the MP3 folders.

06 EJECT BUTTON

- **EJECT A SINGLE DISC** - Press the  button for less than 1.5 seconds. Select the eject slot by pressing the CD insert select button (1 - 6). The CD will then eject.
- **EJECT ALL DISCS** - Press and hold the  button for more than 1.5 seconds. The CDs will be ejected one after another.



07 TUNING AND AUDIO CONTROL KNOB

To manually tune the radio, turn the **TUNE** knob. To adjust the Bass, Midrange, Treble, Fade, Balance, and Speed Sensitive Volume (SSV) (if so equipped), press the **AUDIO** knob until the desired mode appears in the display. Then turn the **TUNE** knob to adjust to the desired level.

08 STATION AND CD SELECT BUTTONS

- To store a station in a preset you must first select A, B, or C memory bank by pressing the **PRESET A-B-C** button and tune to the desired FM, AM or XM® station. Then press and hold the desired station select button for at least 2 seconds. When the preset indicator illuminates, a beep will sound, indicating memorization is complete. To retrieve a previously set station, select the memory bank where the preset was set, then press the corresponding station select button.
- While playing a CD, to select a different CD loaded into the CD changer; press one of the CD select buttons (1 - 6).

09 LOAD BUTTON

- **LOAD A SINGLE DISC** - Press the  button for less than 1.5 seconds. Select the loading slot by pressing one of the CD insert select button (1 - 6), then insert the CD.
- **LOAD UP TO 6 DISCS** - Press and hold the  button for more than 1.5 seconds. The slot numbers (1-6) will illuminate on the display when CDs are loaded into the changer.

*XM® Satellite Radio is only available on vehicles equipped with optional XM® satellite subscription service.

CLOCK SET/ADJUSTMENT

- Press and hold the **DISP CLOCK** button until it beeps. The hours will start flashing.
- Press the **CAT/FOLDER** or **SEEK/TRACK** button to adjust the hours.
- Press the **DISP CLOCK** button to switch to the minute adjustment.
- Press the **CAT/FOLDER** or **SEEK/TRACK** button to adjust the minutes.
- Press the **DISP CLOCK** button to store the time and exit clock set mode.



TRIP COMPUTER (if so equipped)

The trip computer readout is in the speedometer display. With the ignition key in the ON position or the vehicle running, you can select an item by pressing the CHANGE button on the instrument panel. It can show the following items:

- TRIP "A" – Measures the distance of one specific trip.
- TRIP "B" – Measures the distance of a second specific trip.
- DISTANCE TO EMPTY (dte) – Estimates the distance that can be driven before refueling.
- AVERAGE SPEED (km/h or mph) – Shows the average speed since the last reset.
- AVERAGE FUEL CONSUMPTION (l/100km or mpg) – Shows the average fuel consumption since the last reset.
- JOURNEY TIME – Shows the time since the last reset.
- RESET – Press the CHANGE button on the instrument panel for more than 1 second to reset the trip odometer to zero.



INSTRUMENT BRIGHTNESS CONTROL/TRIP CHANGE BUTTON

- The instrument brightness control operates when the headlight control switch is in the  or  position.
- Turn the control to adjust the brightness of the instrument panel lights.
- Press the change button to select trip computer features.



FOUR-WHEEL DRIVE (4WD) SHIFT SWITCH (if so equipped)



- This system provides three positions so the driver can select the desired drive mode according to driving conditions.
- **2WD** – Dry, paved roads.
- **4H** – Rocky, sandy or snow-covered roads. (Before placing 4WD shift switch in 4H position from 2WD, ensure vehicle speed is less than 62.5 MPH [100 km/h]).
- **4LO** – When maximum power and traction are required (steep grades, rocky, sandy or muddy roads).



NOTE: The vehicle must be stopped and in N (Neutral) with the brake pedal depressed when shifting into and out of 4LO.

VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH (if so equipped)

The Vehicle Dynamic Control (VDC) system is designed to help improve driving stability. VDC detects wheel spin and controls braking and engine output. VDC may need to be temporarily shut off if you are trying to free a vehicle stuck in snow or mud.

- Push the Vehicle Dynamic Control (VDC) off switch to deactivate the VDC system. The  light will illuminate in the instrument panel gauge area.
- Push the Vehicle Dynamic Control (VDC) off switch again to activate the VDC system. The  light in the instrument panel gauge area will turn off.
- The VDC system is active while the vehicle is running until the switch is pressed to turn it off.



E-LOCK SWITCH (if so equipped)

The Electronic Locking Rear Differential (E-Lock) system can help provide added traction if the vehicle is stuck or becoming stuck.

To activate the system:

- The 4WD switch must be in the 4LO position (4-wheel drive vehicles),
- The vehicle must be stopped or moving at 4 mph or less, and
- The E-Lock system switch must be turned on.

Once the vehicle is free, the system should be turned off.



HILL DESCENT CONTROL SWITCH (if so equipped)

The hill descent control system is designed to reduce driver workload when going down steep hills. The hill descent control system helps to control vehicle speed so the driver can concentrate on steering the vehicle.

To activate the hill descent control system:

- The automatic transmission selector lever must be in forward or reverse gear,
- The 4WD switch must be in the 4L position and the vehicle speed must be under 15 MPH (25 km/h), or
- The 4WD switch must be in the 4H position and the vehicle speed must be under 21 MPH (35 km/h), and
- The hill descent control system switch must be on.
- The hill descent control indicator light will come on when the system is activated. Also, the stop/tail lights illuminate while the hill descent control system applies the brakes to control vehicle speed. To turn off the hill descent control system, push the switch to the off position. The hill descent control system is temporarily disabled when the brake or accelerator pedal is depressed.



HILL START ASSIST (if so equipped)

The hill start assist system automatically keeps the brakes applied to help prevent the vehicle from rolling backwards in the time it takes the driver to release the brake pedal and apply the accelerator when the vehicle is stopped on a hill.


Hill start assist will operate automatically under the following conditions:

- The selector lever is shifted to a forward or reverse gear.
- The vehicle is stopped completely on a hill by applying the brake.


The maximum holding time is 2 seconds.

FRONT-PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the Nissan Advanced Air Bag System. Under some conditions, depending on the type of occupant or object detected in the front passenger seat by the occupant classification sensor, the front-passenger air bag is designed to automatically turn **OFF**. When the front-passenger air bag is **OFF**, the front-passenger air bag status light will illuminate*. For example:

- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the  **will illuminate** to indicate that the front-passenger **air bag is OFF and will not inflate in a crash.**



- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the  **will not illuminate** to indicate that the front-passenger **air bag is operational**.

***When the system detects that the front-passenger's seat is unoccupied, the passenger air bag status light will not illuminate even though the front-passenger air bag is OFF.**

TIRE PRESSURE MONITORING SYSTEM (TPMS)

This system monitors tire pressure. If the low tire pressure warning light illuminates, check the tire pressure in all four tires.

Adjust the low tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver's door opening. After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25 km/h) to activate the TPMS and turn off the low tire pressure warning light.



 
SEAT BELT WARNING LIGHT AND CHIME

- The light and chime remind you to fasten your seat belts. The light illuminates whenever the ignition key is turned to the ON or START position and remains illuminated until the driver's seat belt is fastened. At the same time, the chime sounds for approximately 6 seconds unless the driver's seat belt is securely fastened.
- The seat belt warning light may also illuminate if the front passenger's seat belt is not fastened when the front passenger's seat is occupied (if so equipped). For 7 seconds after the ignition switch is in the ON position, the system does not activate the warning light for the front passenger.



CHILD SAFETY REAR DOOR LOCK

Child safety locks help prevent the rear doors from being opened accidentally, especially when small children are in the vehicle. The child safety lock levers are located on the edge of the rear doors. When the lever is in the LOCK position, the door can only be opened from the outside.

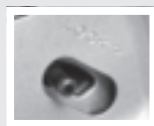

FRONT SEAT ADJUSTMENTS

- Pull up on the lever under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- Lift the lever **01** on the side of the seat to adjust your seatback forward or backward; release when you have found a comfortable angle and the seat belt fits properly.

 


SEAT LIFTER (if so equipped)

- Turn either dial **02** to adjust the angle and height of the seat cushion to the desired position.

LUMBAR SUPPORT

Your driver's seat has a lumbar support **03** ; adjust it by moving the lever up or down.

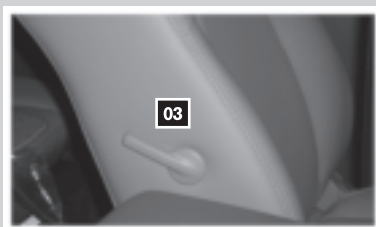

FOLD FLAT FRONT PASSENGER SEAT (if so equipped)

To fold the front passenger's seatback flat for extra storage length when transporting long items:

 
 
- Slide the seat to the rearmost position. Lift up on the recline lever **01** , located on the outside edge of the seat, and fold the seatback forward as far as it will go.
- Lift up on the latch **02** located on the upper corner of the seatback to release the back of the seat.
- Once the seatback is released, it will enable you to fold the front passenger seatback flat over the seat cushion.



FOLDING THE SECOND ROW BENCH SEAT

 
To fold the 2nd row bench seat flat for maximum cargo hauling:

- Lower the head restraints to the full “down” position. Pull the strap **01** located in the center of each seat cushion forward, and fold each seat cushion toward the front of the vehicle.
- Then pull the straps **02** located on the outside edge of each seatback to fold the seatbacks forward.

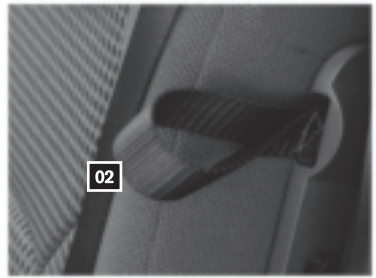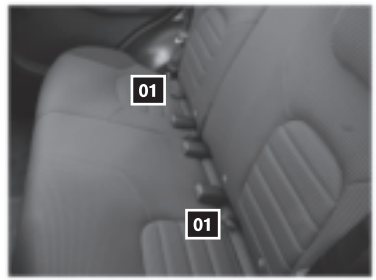

CHANNEL TIE DOWN HOOKS (if so equipped)

The adjustable channel tie-down hook system allows you to move the tie-down hooks in the cargo area to the best location to secure a load.

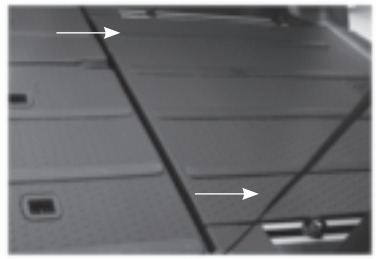

 
BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)



With an overhead microphone and sound transmitted through the audio system speaker, the Bluetooth® Hands-Free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.

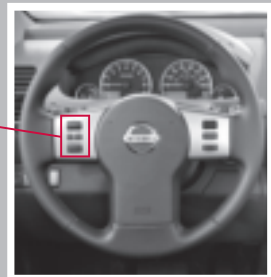Bluetooth® controls location




- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- To go back to the previous command, say "Go back" or "Correction."
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit," or press the  button.
- To increase or decrease the volume of the voice prompts, push the VOL (volume) control switch up or down on the steering wheel or turn the **VOL** knob on the audio system while the system is responding.
- Speak in a clear and natural voice without pausing between words.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used in any menu to hear a list of available commands.
- **For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth.**

PAIRING YOUR PHONE

To use the hands-free feature, you need to set-up, or pair, the system to recognize your cellular phone(s). 5 Bluetooth®-enabled phones can be paired. After set-up, the system automatically connects with a paired phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.

PAIRING PROCEDURE


NOTE: The vehicle must be stationary when pairing the phone.

1. Press the  button on the steering wheel and wait for the tone.
2. Say "Setup."
3. Wait for the tone, then say "Pair phone."
4. Wait for the tone, then say "New phone."
5. Initiate pairing from the phone.
 - The pairing procedure varies according to each cellular phone model. For detailed pairing instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PASSKEY code, enter "1234" from the handset. (The PASSKEY code is assigned by NISSAN and cannot be changed.)
6. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.
7. Say a number between 1 and 5 when the system asks you for a priority level. The priority level determines which phone interacts with the system when two or more paired phones are active in the vehicle at the same time. Choose 1 if this is the only phone or the primary phone.
8. Say "Yes" or "No" when the system asks if you would like to select a custom ring tone. Follow the instructions provided by the system to choose a ring tone.


SETTING UP YOUR PHONEBOOK – ADDING NEW ENTRIES

Each paired phone has its own dedicated phone book. Each phone book can store up to 40 names. Each name can have up to 4 locations/numbers: Home, Office, Mobile, and Other.

NOTE: The vehicle must be stationary when adding new entries.




1. Press the  button and wait for the tone.
2. Say "Phone book."
3. Wait for the tone, then say "New entry."
4. When prompted, say the name for the new entry. For example, say "Michelle." If the name is too short or too long, or if it sounds too much like a name that is already stored in the phone book, the system tells you and prompts you to say a name again. Choose a new name.
5. Say "Yes" or "No" when the system asks you to confirm the name is correct.
6. Say a location ("Home," "Office," "Mobile" or "Other") when the system asks you to provide one. The system acknowledges the location.
 - By Voice command - When prompted, say a phone number for the location. For example, say "five five five one two one two." The system repeats the number and prompts you for the next command.
 - By Bluetooth® transfer - Say "Transfer entry." The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone via the Bluetooth® communication link. The transfer procedure varies according to each cellular phone. See the cellular phone owner's manual for details.
7. Say "Store" when you are finished entering numbers. The system confirms the name, location, and number.
8. Say "Yes" or "No" when the system asks if you would like to store another location for the same name. If you do not respond to the system prompt, the system ends the New Entry session.

MAKING A PHONE CALL

1. Press the  button.
2. After the tone, do one of the following:
 - Say "Call [name] [location]." For example, say "Call Michelle Home."
 - Say "Call [number]." For example, say "Call 123-456-7891."
 - Say "Redial" to redial the previous phone number called by the system.

RECEIVING/ENDING A PHONE CALL

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

HOW TO SAY NUMBER

NISSAN voice recognition permits numbers to be spoken in a variety of ways.

- Say “zero” or “oh” for “0.” Example: 1-800-662-6200 – Say “one eight zero zero six six two six two oh oh.”
- Say “pound” for “#”. Say “star” for “*”. Example: 1-555-1212*123 – Say “one five five five one two one two star one two three.”

MEMO



Nissan, the Nissan Brand Symbol, "SHIFT_" tagline, Z and Nissan model names are Nissan trademarks.

© 2007 Nissan North America, Inc.

QR8E-0N50U0

August 2007 (07)