


STATION USER GUIDE

The KX-T30830, KX-T30820 and/or KX-T30850 can be connected to the KX-T61610.

Additional features will be provided with the KX-T30830, KX-T30820 and/or KX-T30850 by this connection.


Use this Station User Guide with the Operating Instructions of the KX-T30830, KX-T30820 and/or KX-T30850.

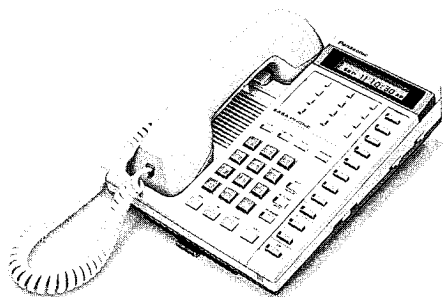

KX-T30830



KX-T61610

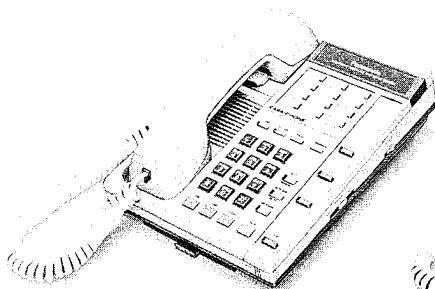

KX-T30820



KX-T30850

Panasonic
EASA-PHONE

Paging Group

Allows paging to one of four groups.

 
The page can only be heard from a KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850.

■ To Access


For Pickup Group 1



LIFT THE HANDSET
OR PRESS
"SP-PHONE"



DIAL "35"

 

CONFIRMATION
TONE OF 1~
BEEP WILL
BE HEARD



PAGE



WAIT FOR AN
ANSWER
AND TALK

- Page will be heard from built-in speaker.



- For Pickup Group 2: At step 2 above, dial 36 instead of 35.
- For Pickup Group 3: At step 2 above, dial 37 instead of 35.
- For Pickup Group 4: At step 2 above, dial 38 instead of 35.

 
Call Park Retrieve

Allows extension user to retrieve a call (intercom or outside) on hold at any extension.


■ To Retrieve a Parked Call at Any Extension



LIFT THE HANDSET
OR PRESS
"SP-PHONE"



DIAL "5"

 


DIAL PARKED
EXTENSION
NUMBER


- Even when several outside calls are placed on hold simultaneously, you can retrieve the desired outside call from another extension as following.



 LIFT THE HANDSET
OR PRESS
"SP-PHONE"



DIAL "58"

 


DIAL PARKED
CO NUMBER
(1 through 6)

Flexible CO Button


Allows each CO button to change into CO number which is different from printed CO number.

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T30830, KX-T30820 or KX-T30850 to “PROGRAM”.

 
■ Setting



 PRESS “CO” WHICH IS CHANGED INTO DIFFERENT CO NUMBER



 DIAL THE CO NUMBER WHICH IS SET NEWLY (1 through 6)



PRESS “MEMORY”

 
- After programming all CO buttons, return the MEMORY switch to “SET”.
- If a call reaches through the CO line that is not assigned in the CO button, the ICM indicator will be flashing quickly, just lift the handset or press the SP-PHONE button, even in the “MAN ANSWER” mode.
- If you make a call with the CO line of which number is not assigned, the ICM indicator will light.
- If a call on CO line of which number is not assigned, is placed on hold, the ICM indicator will flash. To retrieve on hold, press the ICM button.

Flexible DSS Button (KX-T30830 only)


Allows each DSS button to change into extension number which is different from printed extension number.

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T30830 to “PROGRAM”.


■ Setting



 PRESS “DSS” WHICH IS CHANGED INTO DIFFERENT EXTENSION NUMBER



 DIAL THE EXTENSION NUMBER WHICH IS SET NEWLY (11 through 26)



PRESS “MEMORY”

- After programming all CO buttons, return the MEMORY switch to “SET”.

 
Auto CO Hunting

Can access any CO line which is not in use directly by picking up the handset or the speakerphone on and tell an extension user which line is accessing by lighting the CO line indicator.

■ Setting



LIFT THE HANDSET
OR PRESS
"SP-PHONE"



DIAL "721#"

 


HANG UP OR
PRESS
"SP-PHONE"


■ To Cancel



LIFT THE HANDSET
OR PRESS
"SP-PHONE"



PRESS
"ICM"

 

DIAL "720#"



HANG UP OR
PRESS
"SP-PHONE"

 
■ Dialing through CO Line



LIFT THE HANDSET
OR PRESS
"SP-PHONE"



WAIT FOR THE
C.O. DIAL TONE



DIAL THE PHONE
NUMBER

- When you access an extension in the Auto CO Hunting Mode, press the ICM button after lifting the handset or pressing the SP-PHONE button.

Account Code

This feature gives each message of the SMDR an account code of the called or calling party.

(Station Message Detail Recording—SMDR is cost saving feature that records all incoming and outgoing calls through CO line.) This feature has two modes—"Forced" and "Option". In the "Forced" mode, the account code must be entered every time the extension user dials. In the "Option" mode, the account code may be entered when a record of the account code is needed. When setting to the "Forced" mode, see page 3-34 in INSTALLATION MANUAL of the KX-T61610.

 
For use of this feature by using KX-T30850, the PROGRAMMABLE FEATURE (F3 only) button must be programmed beforehand as the Account Code button in the KX-T61610. For programming, see page 3-54 in INSTALLATION MANUAL.

Forced Mode


■ Making a Call




LIFT THE HANDSET OR PRESS "SP-PHONE"



 
PRESS "CO"
(The FWD/DND indicator flashes.)



 
PRESS "FWD/DND" OR "F3"
(The FWD/DND indicator lights. And an intermittent tone is heard.)



 DIAL THE ACCOUNT CODE
(Account code is 4 digits.)




WAIT FOR THE C.O. DIAL TONE

 

DIAL THE PHONE NUMBER

 - You may dial 9 or 81 through 86 instead of pressing the CO button.
- Account code must be required 4 numerical digits except for the and .
- If the account codes are programmed with the telephone numbers for one touch dialing or system speed dialing, you need not dial the account code when making a call. Program as follows.




Account code
(4 digits)


Telephone
number

■ Receiving a Call

 If you want to record a calling party's account code in the SMDR, follow the below-mentioned procedure.



PRESS
"FWD/DND"
OR "F3"

 


DIAL THE
ACCOUNT CODE

- The FWD/DND or F3 button must be pressed before you hang up. If the distant party hangs up first, you must press the FWD/DND or F3 button within 30 seconds.


Option Mode

■ Making or Receiving a Call

 If you want to record a calling or called party's account code in the SMDR, follow the below-mentioned procedure.



PRESS
"FWD/DND"
OR "F3"

 

DIAL THE
ACCOUNT
CODE
(Account
code is
4 digits.)

- If you enter the wrong account code, press the FWD/DND or F3 button and enter the correct code.
- The FWD/DND or F3 button must be pressed before you hang up. If the distant party hangs up first, you must press the FWD/DND or F3 button within 30 seconds.



PANUG-005 -