



**DO NOT RETURN
THIS PRODUCT TO THE STORE!**

Please read the following important information.

**For Siemens Customer Care, product operation
information, or for problem resolution, call toll-free**

1-888-777-0211

7 a.m. to 10 p.m. Central Standard Time EVERY DAY

SIEMENS

www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.

SIEMENS

Gigaset 4215

Quick Start Guide



Basic Steps for Getting Started

For optimal performance of your system, please follow all of these steps.

For full details, see the User Manual.

Customer Care: 1-888-777-0211

Or visit our Website: www.icm.siemens.com


Visite nuestro sitio Web para obtener instrucciones en español.

PB4215QSG

STEP 1 Base Station Setup

At the Base Station:

- 1 Insert small plug on cord into phone jack. Place cord in base cable channel. Insert power supply unit into wall outlet.
- 2 Insert plug on telephone cord into telephone jack on base unit (clicks into place). Place cord in cable channel on bottom of base. Insert other end of plug into telephone jack on wall.

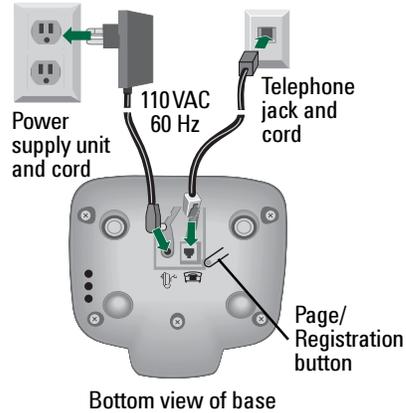

IMPORTANT: For best reception, place the base in a high central location, away from other electrical devices. The installation of the base unit should allow at least 8-inches between the base and persons to be in compliance with FCC RF exposure guidelines.

STEP 2 Handset Setup / Registration

At the Handset:



- 1 Remove protective plastic film from display.
- 2 Insert batteries as shown.
- 3 Place battery cover on back of handset and push gently upward until it clicks into place.
- 4 Be sure power supply is plugged into wall outlet.
- 5 For auto registration to base, press and hold the END key to turn handset off and place in base station with display facing out for 1 minute.



IMPORTANT: Charge batteries 12 to 14 hours before using the handset for the first time.

Customer Care: 1-888-777-0211 or visit our Website: www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.

STEP 3 Area Codes

If you subscribe to Caller ID from your local telephone company, complete the steps below. If you do not subscribe to Caller ID, skip this section. To call back from the Call Log, you must enter and store the Local Area Code for the area where your phone is installed. If your phone is installed in an area with multiple area codes, you will also have to enter and store the Extra Codes for that area.

Storing Local Area Code

- 1 Open the Menu.
- 2 Scroll to "**Base Settings**" and press OK.
- 3 Scroll to "**Area Codes**" and press OK.
- 4 Scroll to "**Local Area Code**" and press OK.
- 5 Enter your area code and press OK.

Storing Extra Area Codes

- 1 Repeat steps 1 through 3 at left.
- 2 Scroll to "**Extra Codes**" and press OK.
- 3 To enter an extra area code, press Menu.
- 4 Enter an extra area code and press OK. (Repeat steps 3 and 4 to enter additional area codes.)

VOICE-OPERATED CONTROLS

Siemen's GigaVoice™ voice-operated controls for the 4200 series allow users to place calls or hear who's calling. The system recognizes up to 20 names and numbers from the directory and up to four users may record the same name or number. Subscription to Caller ID from your local telephone company is required.

Recording a Voice Entry

- 1 Open the Directory by pressing Navi key on bottom .
- 2 Press **Speech**.
- 3 Select user 1-4 and press OK.
- 4 Scroll to "**New Entry**" and press OK.
- 5 Enter the telephone number.
- 6 Scroll to the name field and enter the name.
- 7 Press **Record**.
- 8 Press **Begin** to start recording and speak the name of the desired entry (for example "Anne") to record a voice pattern.
- 9 Repeat the name.
- 10 Press **Save**.

Dialing With Your Voice

- 1 Press Navi key on top .
- 2 At the prompt, speak the recorded voice pattern (for example "Anne").
- 3 When the voice pattern is recognized, the name is played back from the handset and the number is dialed.

Voice-Announced Caller ID

The voice pattern is played for incoming calls if you have recorded the number as a voice entry.

- 1 Press Menu.
- 2 Scroll to "**Base Settings**" and press OK.
- 3 Scroll to "**Spec. Functions**" and press OK.
- 4 Scroll to "**Caller ID**" and press OK (check mark indicates feature is on).

Customer Care: 1-888-777-0211 or visit our Website: www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.

BASIC PHONE OPERATION

- Making a Call**
- 1 Dial desired number.
 - 2 Press  or  speakerphone key.
 - 3 Press  or place handset in base (or charger) to hang up.

See Gigaset 4210 or 4215 User Manual for voice dialing instructions.

 
Answering Call Press  or  speakerphone key.

- Intercom Call**
- 1 Lift handset and select the handset's intercom number  and press .
 - 2 Or, press the handset number, such as , .
 - 3 Or, select **"Intercom Call"** and press .
 - 4 Or, select ,  to call all handsets.

- Setting Volume**
- 1 Open the Menu .
 - 2 Scroll to **"Sound Settings"**  and press OK.
 - 3 Select **"Handset Volume"** and press OK.
You will hear the current volume of the speakerphone and its level is displayed. Scroll to the desired volume and press **"Save."** You will hear and see in the display the confirmation of the change.
 - 4 To set earpiece volume, scroll down , select desired earpiece volume , and press **"Save."**

- Language Setting**
- 1 Open the Menu .
 - 2 Scroll to **"H/Set Settings"**  and press OK.
 - 3 Scroll to **"Language"** and press OK.
 - 4 Select the desired language and press OK.
A check mark appears next to the selected language.

Paging Handset Press the page button on the base bottom.



Customer Care: 1-888-777-0211 or visit our Website: www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.

HANDSET NAVIGATIONAL OPERATION

Press the navigational (Navi) key  to navigate through the handset options.



Navi Control	Telephone Idle Action	Lists and Menus	Entry Field
	Hold down for Voice Dialing	Upward	Cursor up
	Open Directory	Downward	Cursor down
	Open Menu	Select entry (OK)	Cursor right
	List of internal/intercom users	One menu level back (cancel)	Cursor left

Display and Soft Keys

Answering Machine On

Signal strength:
 ■■■ strong
 ■■■ medium
 ■■■ weak

Charging status:
 ○○○ battery empty
 ○○○ battery low when flashing
 ○○○ battery fully charged

Date: 05.20.01

Time: 10:30

RDL **MENU**

Navigational (Navi) key

Talk key

In the Display: Current functions

Soft keys: Press the corresponding side of the left or right soft key to activate the function shown in the display.

End call and On/Off key

Navigation Display Symbols

 	
Scroll to the left and right when entering numbers or messages.	Delete key (backspace): Delete input from right to left.

Customer Care: 1-888-777-0211 or visit our Website: www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.

DIRECTORY AND MEMORY DIALING

The handset Directory will store up to 200 telephone numbers.

STORING DIRECTORY ENTRIES

- 1 Open the Directory by pressing the Navi key on bottom .
- 2 Scroll to **"New Entry"** and press OK.
- 3 Enter the telephone number and press OK.
- 4 Scroll and enter the name and press OK.
- 5 Press Menu .
- 6 Save entry by pressing OK.

DIALING FROM DIRECTORY

- 1 Open the Directory by pressing the Navi key on bottom .
- 2 Enter the first letter of the name as entered
(for example, press  2 x for E, Eric).
- 3 Press the Talk  or Speakerphone  key and the number is dialed.

The Memory dial list will store up to 9 telephone numbers. It is recommended that the "1" key be used for the answering machine or telephone company voice mail access.

STORING MEMORY ENTRIES

- 1 Press the Memory  key.
- 2 Scroll to **"New Entry"** and press OK.
- 3 Enter the telephone number and press OK.
- 4 Using handset keypad, select a quick access key. Press the desired key (2-9) and then enter the name (for example, to use quick access key "3" for "Eric" press  4 x for "3," press  2 x for "E," press  3 x for "R," press  3 x for "I," press  3 x for "C").
- 5 Press OK.
- 6 Press Menu .
- 7 Save entry by pressing OK.



Memory key

DIALING FROM MEMORY

- 1 Press and hold the quick access key.
- 2 Press the Talk  or Speakerphone  key and the number is dialed.

Customer Care: 1-888-777-0211 or visit our Website: www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.

ANSWERING MACHINE OPERATION

The answering machine is on and ready for use once your base station has been installed. You may leave the factory defaults or change for personalized use.

Turning Answering Machine On and Off

- 1 Press Menu.
- 2 Scroll to "Ans Machine" and press OK.
- 3 Scroll to "Answering M." and a check mark indicates the answering machine is On.
- 4 Press OK to toggle between the On and Off settings.

Setting Instant Access to Answering Machine*

- 1 Press Menu.
- 2 Scroll to "Ans Machine" and press OK.
- 3 Scroll to "Set Key 1" and press OK.
- 4 Scroll to "Answering M." and press OK. Press and hold the "1"  key for instant access to the answering machine.

Recording Announcements

A default announcement is preset and played to callers until you record your own announcement.

- 1 Press Menu.
- 2 Scroll to "Ans Machine" and press OK.
- 3 Scroll to "Announcements" and press OK.
- 4 Scroll to "Record Annc" and press OK.
- 5 Place handset to ear and listen for recording notification and short beep.
- 6 Speak your personal greeting clearly into the handset.

*See user manual to set telco voice mail access.

- 7 Press the End  key to stop the recording. Your greeting is automatically played back.

Playing Back Messages

- 1 Press the Mailbox  key.
- 2 Scroll to "Ans Msg" and press OK. Playback begins with the first new message. After the last new message, old messages are played. When all messages have been played, an end tone will sound.

Pausing During Playback

- 1 Press Navi key on bottom to pause .
- 2 Press Navi key on bottom again to continue .

Skipping Forward or Backward During Playback

- 1 Press Navi key on left once to return to start of current message .
- 2 Press Navi key on left twice to skip back to previous message  .
- 3 Press Navi key on right once to skip forward to next message .

Operating the Answering Machine Remotely

The answering machine may be accessed away from home from any other telephone (such as a cell phone or pay phone). See user manual for complete instructions.

Customer Care: 1-888-777-0211 or visit our Website: www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.