



SIEMENS

2.4GHz
digital
technology

Gigaset 8800 Quick Start Guide

This guide will help you get started using your Gigaset handset. For additional information related to your Gigaset 8825 system, please refer to the User Manual.

Connecting the Charger

A charger is included with handsets. This charger does not require connection to a telephone line for operation. Use only the power supply (110 VAC/60 Hz with cord) included with the charger. (Do not use other power supplies.)

 
Before using your charger, follow these steps:

- 1 Insert small plug on cord into back of charger.




- 2 Turn small plug to the left and place cord in cable channel on bottom of charger.

May be wall mounted using two small screws (not provided)

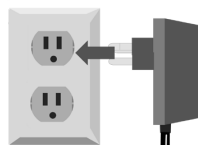

 - 3 Insert power supply into wall outlet.

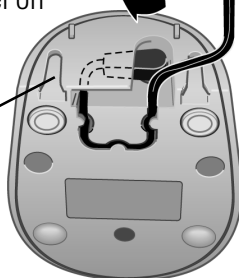

Bottom of Charger



IMPORTANT: Do not use a wall outlet controlled by a wall switch.



Customer Care: 1-888-777-0211

Or visit our Website: www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.

 
Gigaset 8800 Handset

The Gigaset 8800 handset is used exclusively on the Gigaset 8825 system. Up to a total of eight handsets may be added.

Handset Setup

Before using your handset, follow these steps:

- 2** Insert batteries as shown.



- 3** Place cover on back of handset and push gently upward until it clicks into place.

- 1** Remove protective plastic film from display.



- 4** Place handset in charger with display facing out.



IMPORTANT: Charge batteries 12 to 14 hours before using the handset for the first time. WARNING: Use only NiCd or NiMh "AA" rechargeable batteries. DO NOT USE ALKALINE, LITHIUM, OR NON-RECHARGEABLE BATTERIES.

Cordless Handset Registration

The cordless handset that comes with the system is preregistered to the base station. Additional cordless handsets need to be registered to the base station.

- 1** If the handset is not already on, press PWR key in the lower right corner of handset.
- 2** When "**Please Register**" is displayed, press OK.
- 3** Enter System PIN and press OK (default is 0000).
- 4** At base station, press MENU.
- 5** Scroll to "**System Settings**" by pressing >FWD key and then press SELECT.
- 6** Enter System PIN and press SELECT (default is 0000).
- 7** Scroll to "**Mobile Registration**" by pressing >FWD key and then press SELECT.
- 8** When "**Select Intercom Number**" is displayed on handset, scroll to number you want to assign, and press OK.
- 9** When completed, you will hear a confirmation beep.



Power key

See User Manual for additional options.



Customer Care: 1-888-777-0211


Or visit our Website: www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.

**Your handset is now registered
and ready for use.**



 
Handset Soft Key Operation

Press the soft keys above the  key to navigate through the handset options. The screen in this example is one of many screens you will see on your handset. Always press the corresponding side of the left or right soft key to activate the function shown in the display.

At the Handset:

Press the LEFT side of the LEFT soft key to scroll up.

Press the RIGHT side of the RIGHT soft key to select (OK).

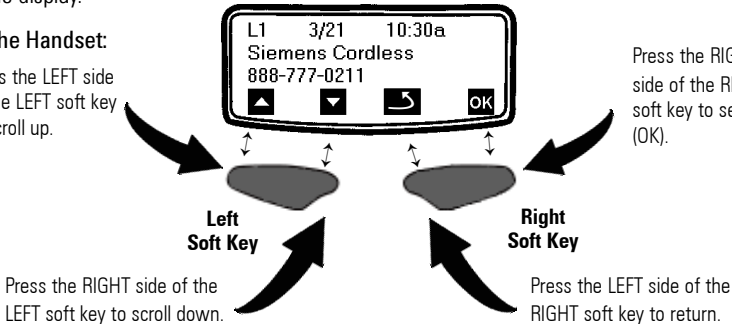




Customer Care: 1-888-777-0211

Or visit our Website: www.icm.siemens.com



Visite nuestro sitio Web para obtener instrucciones en español.



BASIC HANDSET OPERATION

- Making a Call**
- 1 Dial desired number.
 - 2 Press  or  speakerphone key.
 - 3 Press  or place handset in base or charger to hang up.
-

- Answering Call**
- 1 Lift handset from charger.
 - 2 Or, press  or  speakerphone key.
-

- Intercom Call**
- 1 Press INT and select handset's intercom number or "0" for (desk) base station.
 - 2 Or, select DSK for (desk) base station in display.
 - 3 Or, select ALL to call base and all handsets.
-

- Setting Volume**
- (Handset Earpiece)
- 1 Press MENU.
 - 2 Scroll to "MOBILE SETTINGS" and press OK.
 - 3 Select "HANDSET VOLUME" and press OK.
 - 4 Select volume level by pressing  or  on left soft key and press OK.
-

- Setting Volume**
- (Handset Speakerphone)
- 1 Press MENU.
 - 2 Scroll to "MOBILE SETTINGS" and press OK.
 - 3 Select "HANDSFREE VOL" and press OK.
 - 4 Select volume level by pressing  or  on left soft key and press OK.
-

- Setting Language**
- 1 Press MENU.
 - 2 Scroll to "MOBILE SETTINGS" and press OK.
 - 3 Scroll to "LOCAL SETTINGS" and press OK.
 - 4 Scroll to "LANGUAGE" and press OK.
 - 5 Select the desired language and press OK. A check mark appears next to the selected language.

FCC Information

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the system base should NOT be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (1) Increase the separation between the base station and receiver;
- (2) Connect the base station to an outlet on a circuit different from that to which the receiver is connected;
- (3) Consult the dealer or an experienced radio TV technician for help.

Notice to Hearing Aid Wearers: This phone system is compatible with inductively coupled hearing aids.

Power Outage: In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Safety Precautions: Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Contains Nickel-Metal Hydride Batteries. Battery must be recycled or disposed of properly. Do not dispose in municipal waste. Only use type AA Nickel-Cadmium (NiCd) or type AA Nickel-Metal Hydride (NiMH) rechargeable batteries in the cordless handset. Do not use Alkaline or lithium batteries in the cordless handset or charger. Do not mix old and new batteries. Use the same rechargeable battery type. Do not combine rechargeable battery types. Exercise care in handling batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conduction materials may overheat and cause burns or fire. Do not dispose batteries in fire. For additional instructions, see the user's manual included with your Gigaset 8825 system.

The installation of the base unit should allow at least 8-inches between the base and persons to be in compliance with FCC RF exposure guidelines.

Warranty: The product warranty is contained in the user's manual. Please refer to the manual for complete product warranty details.

Information subject to change as Siemens reserves the right, without notice, to make changes in equipment design or components. Siemens is a registered trademark and Gigaset is a trademark of Siemens AG.
Made in Germany. © Siemens Information and Communication Mobile, LLC 2001 Copyright. All rights reserved.

A31008-G4035-U102-1-7619



Customer Care: 1-888-777-0211

Or visit our Website: www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.



**DO NOT RETURN
THIS PRODUCT TO THE STORE!**

Please read the following important information.

**For Siemens Customer Care, product operation information, or
for technical information, call our experts toll-free**

1-888-777-0211

7 a.m. to 10 p.m. Central Standard Time EVERY DAY

SIEMENS

www.icm.siemens.com

Visite nuestro sitio Web para obtener instrucciones en español.