

## **ADDENDUM**

### **FS 800 OWNER'S MANUAL**

**THE FOLLOWING MODIFICATIONS HAVE BEEN MADE:**

1. SEE PAGE 14, "OUTSIDE LINES", SECTION "A", NUMBER 2:
  - a. Because you can now dial as many numbers as you wish, the following no longer applies: (up to 64 digits)
  - b. You are able to make mixed dialing, regardless of procedures-manual, station speed dial or system speed dial in succession. While you dial, wait for the last number to completely dial out before you continue dialing.

## **ADDENDUM**

### **FS 900 OWNER'S MANUAL**

**THE FOLLOWING MODIFICATIONS HAVE BEEN MADE:**

1. SEE PAGE 16, "OUTSIDE LINES", SECTION "A", NUMBER 2:
  - a. Because you can now dial as many numbers as you wish, the following no longer applies: (up to 64 digits)
  - b. You are able to make mixed dialing, regardless of procedures-manual, station speed dial or system speed dial in succession. While you dial, wait for the last number to completely dial out before you continue dialing.

# **ADDENDUM TO FS 800 OWNER'S MANUAL**

## **FEATURES AND OPERATIONS**

### **OFF-HOOK SIGNALLING (INTERCOM MODE)**

WHEN YOUR STATION HAS BEEN PROGRAMMED TO RECEIVE OFF-HOOK SIGNALLING WHILE YOU ARE ON A CALL YOU WILL BE ALERTED THAT THERE IS ANOTHER CALL FOR YOU. THESE ARE THE TYPES OF SIGNALS YOU WILL SEE AND/OR HEAR:

**NOTE:** IF THE DND FUNCTION HAS BEEN ACTIVATED, OFF-HOOK SIGNALLING WILL NOT OPERATE IN INTERCOM.

YOU ARE THE PARTY THAT INITIATED THE CALL. YOU ARE "A".  
THE PARTY YOU ARE SPEAKING TO ON THE INTERCOM IS "B".  
THE PARTY TRYING TO REACH YOUR BUSY STATION ON THE INTERCOM IS "C".  
THE PARTY TRYING TO REACH YOUR BUSY STATION FROM AN OUTSIDE LINE IS "D".

#### **A, B AND C ONLY: (NO AUDIBLE SIGNAL)**

IF you are "A": Your INTERCOM LED will change from an INTERMITTENT to a RAPID flash.  
IF you are "B": Your INTERCOM LED will change from an INTERMITTENT to a RAPID flash.

#### **A, B AND D ONLY:**

IF you are "A": The CO Line LED that "D" is on will flash slowly and a muted tone will be heard.  
IF you are "B": The CO Line LED that "D" is on will flash slowly and a muted tone will be heard.

**NOTE 1:** While you are conversing with (B) an OUTSIDE call is being transferred to you:

A. There will be 4 beep tones interrupting your conversation.

B. The CALL TRANS./NRS LED will show a RAPID Flash and the CO Line LED the transferred call is on, will show an INTERMITTENT RAPID flash.

**NOTE 2:** If there is a call waiting for (A) or (B), the CALL WAITING LED will show a RAPID flash and there will be an interruption to the conversation by 4 BEEP TONES.

#### **REGARDING ITEM 3 OF CONFERENCE ON PAGE 12:**

Please be aware that if you get a busy signal when you try to contact the second party after 3 busy tones, you will automatically be reverted to the first party.

#### **ON PAGE 13, CALL WAITING:**

If, while you are conversing, you hear 4 beeps tones, then you know there is a call waiting.

## **OFF-HOOK SIGNALLING (OUTSIDE LINE)**

YOUR STATION IS "A" ON AN OUTSIDE CALL  
THE PARTY TRYING TO REACH YOU ON THE INTERCOM IS "B"  
THE PARTY TRYING TO REACH YOU ON AN OUTSIDE LINE IS "C"

### **A and B only: (NO AUDIBLE SIGNAL)**

If you are "A": You will have no indication that (B) is trying to reach you.

### **A and C only:**

If you are "A": The CO Line LED that (C) is on will show a SLOW flash and a MUTED TONE will be heard.

**NOTE 1:** While you are conversing, if an OUTSIDE call is being transferred to you:

- A. There will be 4 beep tones interrupting your conversation.
- B. The CALL TRANS./NRS LED will show a RAPID flash and the CO Line LED the transferred call is on, will show an INTERMITTENT RAPID flash.

**NOTE 2:** If there is a CALL WAITING for you, the CALL WAITING LED will show a RAPID flash and there will be an interruption to the conversation by 4 beep tones

**ON PAGE 14, TO MAKE AN OUTSIDE CALL**—When making an OUTSIDE CALL and you dial a number, you can dial any number up to 64 digits.

**TONE/PAUSE, TO STORE A PHONE NUMBER USING A PAUSE, ETC., ON PAGE 15, FOLLOW THESE INSTRUCTIONS INSTEAD:**

1. Press the SPEED/STORE key.
2. Press the SPEED/DIAL key (1, 2 or 3) or 2-digit code for System Speed Dial number.
3. Dial the numbers before the PAUSE.
4. Press PAUSE. This inserts a tone detection pause and changes dialing to TONE from PULSE (or continues in TONE).
5. Dial the remaining number.
6. Press SPEED/ STORE key.
7. Repeat steps 1 to 5 for any remaining SPEED DIAL numbers requiring PAUSE.
8. Be sure to record the number you stored and the location it is stored in.

**TO INSERT A PAUSE WITHOUT CHANGING FROM PULSE TO TONE:**

1. Press the TONE/PAUSE key.
2. Press the \* key.
3. Repeat steps 5 and 6 above.

**NOTE THE FEATURE CONCERNING TIMED HOLD RELEASE:**

You can now retain a party on Hold indefinitely when you are OFF-HOOK. When you have a party on HOLD, 2 short beep tones will sound every minute.

**ON PAGE 16, REGARDING REDIAL,** you can redial up to 64 digits.

**REGARDING THE OPTIONAL DOOR ANNOUNCER:**

Since the ring signal is the same from the DOOR ANNOUNCER and from an INTERCOM call, to be sure of which is signalling, look at the INTERCOM LED. If the LED flashes, it is the INTERCOM, but if it is not lit, the signal is from the DOOR ANNOUNCER.

# ADDENDUM TO FS 900 OWNER'S MANUAL

## FEATURES AND OPERATIONS

### **OFF-HOOK SIGNALLING (INTERCOM MODE)**

IF YOUR STATION HAS BEEN PROGRAMMED TO RECEIVE AN OFF-HOOK SIGNAL WHILE YOU ARE CONVERSING, YOU WILL BE ALERTED THAT THERE IS ANOTHER CALL FOR YOU. THESE ARE THE TYPES OF SIGNALS YOU WILL SEE AND/OR HEAR:

**NOTE:** IF THE DND FUNCTION HAS BEEN ACTIVATED, OFF-HOOK SIGNALLING WILL NOT OPERATE IN INTERCOM CALLS.

YOU ARE THE PARTY THAT INITIATED THE CALL. YOU ARE "A".

THE PARTY YOU ARE SPEAKING TO ON THE INTERCOM IS "B"

THE PARTY TRYING TO REACH YOUR BUSY STATION ON THE INTERCOM IS "C"

THE PARTY TRYING TO REACH YOUR BUSY STATION FROM AN OUTSIDE LINE IS "D"

**A, B and C only: (NO AUDIBLE SIGNAL)**

If you are "A" : Your INTERCOM LED will change to a RAPID flash. The display will show the number of the INTERCOM station (C) that is trying to reach you and the number of the station (B) that you are speaking to.

C	B
---	---

If you are "B": Your INTERCOM LED will show a RAPID flash. The display will show the number of the station (C) and the number of the station (A) that you are speaking to.

C	CALL	A
---	------	---

**A, B and D only: (THE CO LINE LED THAT (D) IS ON WILL FLASH SLOWLY AND A MUTED TONE WILL BE HEARD.)**

If you are "A": The CO Line LED that "D" is on will flash slowly and a muted tone will be heard. The display will show the OUTSIDE Line number (D) is calling on and the number of the station (B) that you are speaking to.

L-X	B
-----	---

If you are "B": The CO Line LED that "D" is on will flash slowly and a muted tone will be heard. The display will show the OUTSIDE Line number (D) is calling on, and the number of the station (A) that you are speaking to.

L-X	CALL	A
-----	------	---

**NOTE 1:** If an unrestricted station answers (D) the display of both (A) and (B) will no longer show the CO Line number (L-X).

**NOTE 2:** If you are using the SPEAKERPHONE instead of the handset, no audible signal will be heard.

**NOTE 3:** While you are conversing with (B) if an OUTSIDE call is being transferred to you:

A. There will be 4 beep tones interrupting your conversation.

B. The CALL TRANS./NRS LED will show a RAPID flash and the CO Line LED the transferred call is on, will show an INTERMITTENT RAPID flash.

When the call has been transferred, the display will show the station number transferring the call, the transfer symbol and the CO Line number the transferred call is on.

STA	#	TrSF	L-X
-----	---	------	-----

**NOTE 4:** If there is a CALL WAITING for (A) or (B), the CALL WAITING LED will show a RAPID flash and there will be an interruption to the conversation by 4 beep tones.

**REGARDING ITEM 4 OF CONFERENCE ON PAGE 14:**

Please be aware that if you get a busy signal when you try to contact the second party, that after 3 busy tones, you will automatically be reverted to the first party.

## OFF-HOOK SIGNALLING (OUTSIDE LINE)

YOUR STATION IS "A" ON AN OUTSIDE CALL

THE PARTY TRYING TO REACH YOU ON THE INTERCOM IS "B"

THE PARTY TRYING TO REACH YOU ON AN OUTSIDE LINE IS "C"

**A and B only: (NO AUDIBLE SIGNAL)**

If you are "A": You will have no indication that (B) is trying to reach you.

A and C only: The CO Line LED that (C) is on will flash slowly and a muted tone will be heard.

If you are "A": The display will show the CO Line number that (C) is on (L-X) and the CO Line number you are speaking on (L-Y).

L-X	L-Y
-----	-----

**NOTE 1:** If a non-restricted station answers (C) the display will no longer show the CO Line number (L-X).

**NOTE 2:** If you are using the SPEAKERPHONE instead of the handset, no audible signal will be heard.

**NOTE 3:** While you are conversing, if an OUTSIDE call is being transferred to you:

A. There will be 4 beep tones interrupting your conversation.

B. The CALL TRANS./NRS LED will show a RAPID flash and the CO Line LED the transferred call is on, will show an INTERMITTENT RAPID flash.

When the call has been transferred, the display will show the station number transferring the call, the transfer symbol and the CO Line number the transferred call is on.

STA	#	TrSF	L-X
-----	---	------	-----

**NOTE 4:** If there is a CALL WAITING for you, the CALL WAITING LED will show a RAPID flash and there will be an interruption to the conversation by 4 beep tones.

**REGARDING A. TO MAKE AN OUTSIDE LINE CALL, ON PAGE 16:**

When making an OUTSIDE CALL and you dial a number, you can dial any number, up to 64 digits.

**REFER TO TONE/PAUSE, TO STORE A PHONE NUMBER USING A PAUSE, ETC., ON PAGE 17—FOLLOW THESE INSTRUCTIONS INSTEAD:**

1. Press SPEED/STORE key. Display will show "S DIAL".
2. Press the SPEED DIAL key (1 thru 16) or 2-digit code for System Speed Dial number.
3. Dial the number before the PAUSE.
4. Press PAUSE. This inserts a tone detection pause and changes dialing to TONE from PULSE (or continues in tone).
5. Dial the remaining numbers.
6. Press SPEED/STORE key.
7. Repeat steps 1 to 5 for any remaining SPEED DIAL numbers requiring PAUSE.
8. Be sure to record the number you stored and the location it is stored in.

**TO INSERT A PAUSE WITHOUT CHANGING FROM PULSE TO TONE:**

1. Press the TONE/PAUSE key.
2. Press the \* key.
3. Repeat steps 5 and 6 above.

**ON PAGE 18, REGARDING LAST NUMBER REDIAL:** you can redial up to 64 digits.

**NOTE THE FEATURE CONCERNING TIMED HOLD RELEASE:** you can now retain a party on Hold indefinitely when you are OFF-HOOK. When you have a party on HOLD, 2 short beeps will sound every minute.

# Consumer "HELP" Hot Line

## Installation or Operation Problems?

Before returning the unit,  
Call the Freedom Phone toll-free "HELP" number.

**1-800-255-8480**

Listen as the experts "talk you through" the problem.  
Please review the trouble check list in your owner's manual.



Southwestern Bell  
Freedom Phone