

## IMPORTANT SAFETY INSTRUCTIONS

WHEN USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

1. READ AND UNDERSTAND ALL INSTRUCTIONS.
2. FOLLOW ALL WARNINGS AND INSTRUCTIONS MARKED ON THE PRODUCT.
3. UNPLUG THE PRODUCT FROM THE WALL OUTLET BEFORE CLEANING. DO NOT USE LIQUID CLEANER OR AEROSOL CLEANERS. USE A DAMP CLOTH FOR CLEANING.
4. DO NOT USE THIS PRODUCT NEAR WATER, FOR EXAMPLE, NEAR A BATHTUB, WASH BOWL, KITCHEN SINK OR LAUNDRY TUB, IN A WET BASEMENT, OR NEAR A SWIMMING POOL.
5. DO NOT PLACE THIS PRODUCT ON AN UNSTABLE CART, STAND OR TABLE. THE PRODUCT MAY FALL, CAUSING SERIOUS DAMAGE TO THE PRODUCT.
6. SLOTS AND OPENINGS IN THE CABINET AND THE BACK OF BOTTOM ARE PROVIDED FOR VENTILATION, TO PROTECT IT FROM OVERHEATING. THESE OPENINGS MUST NOT BE BLOCKED OR COVERED. THE OPENINGS SHOULD NEVER BE BLOCKED BY PLACING THE PRODUCT ON THE BED, SOFA, RUG OR ANY OTHER SIMILAR SURFACE. THIS PRODUCT SHOULD NEVER BE PLACED NEAR OR OVER A RADIATOR OR HEAT REGISTER. THIS PRODUCT SHOULD NOT BE PLACED IN A BUILT-IN INSTALLATION UNLESS PROPER VENTILATION IS PROVIDED.
7. NEVER PUSH OBJECTS OF ANY KIND INTO THIS PRODUCT THROUGH CABINET SLOTS AS THEY MAY TOUCH DANGEROUS VOLTAGE POINTS OR SHORT OUT PARTS THAT COULD RESULT IN A RISK OF FIRE OR ELECTRIC SHOCK. NEVER SPILL LIQUID OF ANY KIND ON THE PRODUCT.

8. TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT DISASSEMBLE THIS PRODUCT. BUT TAKE IT TO A QUALIFIED SERVICE FACILITY IF SERVICE OR REPAIR WORK IS REQUIRED. OPENING OR REMOVING COVERS MAY EXPOSE YOU TO DANGEROUS VOLTAGES OR OTHER RISKS. INCORRECT REASSEMBLY CAN CAUSE ELECTRIC SHOCK WHEN THE APPLIANCE IS SUBSEQUENTLY USED.

9. UNPLUG THIS PRODUCT FROM THE WALL OUTLET AND REFER SERVICING TO QUALIFIED SERVICE PERSONNEL UNDER THE FOLLOWING CONDITIONS:

- WHEN THE POWER SUPPLY CORD OR PLUG IS DAMAGED OR FRAYED.
  - IF LIQUID HAS BEEN SPILLED INTO THE PRODUCT.
  - IF THE PRODUCT HAS BEEN EXPOSED TO RAIN OR WATER.
  - IF THE PRODUCT DOES NOT OPERATE NORMALLY BY FOLLOWING THE OPERATING INSTRUCTIONS. ADJUST ONLY THOSE CONTROLS THAT ARE COVERED BY THE OPERATING INSTRUCTIONS, AS IMPROPER ADJUSTMENT OF OTHER CONTROLS MAY RESULT IN DAMAGE, AND MAY REQUIRE EXTENSIVE WORK BY A QUALIFIED TECHNICIAN TO RESTORE THE PRODUCT TO NORMAL OPERATION.
  - IF THE PRODUCT HAS BEEN DROPPED OR THE CABINET HAS BEEN DAMAGED.
  - IF THE PRODUCT EXHIBIT A DISTINCT CHANGE IN PERFORMANCE.
10. AVOID USING A TELEPHONE (OTHER THAN A CORDLESS TYPE) DURING AN ELECTRICAL STORM. THERE MAY BE A REMOTE RISK OF ELECTRIC SHOCK FROM LIGHTNING.
11. DO NOT USE THE TELEPHONE TO REPORT A GAS LEAK IN THE VICINITY OF THE LEAK.

## PLEASE SAVE THESE INSTRUCTIONS

# TELEDEX

# CL2200 SERIES USERS GUIDE

## 2.4 GHz Two-Line Digital Cordless Guestroom Telephone



### INCLUDED IN YOUR PACKAGE

Cordless Handset	AC Adapter
Base Unit	User Guide
NiMH Battery	10-foot, 4-wire RJ-11 Line Cord
Rubber Battery Screw Cover	15-foot, 8-wire RJ-45 Cable
Phillips Screw	Clear Plastic Overlay

### PREPARING TO USE THE CL2200 SERIES

1. Prepare to install the battery into the cordless handset by firmly pressing down on the top of the battery cover and sliding it off. If cover is secured with a screw, remove the screw first.
  2. Locate the lightly embossed numbers "1" and "2" on the battery's plastic connector.
  3. Insert the battery connector into the handset's connector with the embossed numbers facing up.
- Note:** The handset may "beep" when the battery is connected. This is not an indication that the telephone is ready to use. To obtain optimal performance of the telephone, be sure to charge the battery for 15 to 20 hours.
4. Replace the battery compartment cover and retaining screw.
  5. Insert the provided rubber screw cover.
  6. Turn the telephone base so the back panel is facing you. Insert either end of the RJ-45 cable into the jack on the back of the telephone labeled **LINE**.
  7. Insert the other end of the cable into the jack on the AC adapter labeled **PHONE**.
  8. Insert one end of the RJ-11 line cord into the jack on the AC adapter labeled **LINE**.
  9. Insert the other end of this line cord into a telephone jack.
  10. Plug the AC adapter into an unswitched electrical outlet.
  11. Once your telephone is connected, remove the plastic overlay and place the paper faceplate over the keys. Replace the plastic overlay by hooking the tabs on the overlay into the recessed slots located on both sides. The overlay is easiest to insert when the left or right side tabs are inserted first, and the middle of the overlay is slightly bowed to allow for insertion of the other tabs.
  12. Place the cordless handset on the base unit.

### CHARGING THE BATTERY

The rechargeable Nickel Metal Hydride (NiMH) battery must be fully charged before using the phone for the first time. It is recommended that that battery pack be charged for approximately 15 to 20 hours, without interruption, before use. To charge the battery, place the handset, keypad down, in the base unit. Make sure the **CHARGE LED** on the base lights. If the LED does not light:

1. Ensure that the AC adapter is plugged in.
2. Ensure that the AC adapter is not plugged into a switched electrical outlet.

3. Ensure that the handset charging contacts at the bottom of the handset are making good contact with the base unit's charging contacts.

### CLEANING THE BATTERY CONTACTS

To maintain a good charge, it is important to clean all charging contacts on the handset and base unit. Use a pencil eraser or other contact cleaner. **Do not use any liquids or solvents.**

### BATTERY SAFETY INSTRUCTIONS

1. Use only Teledex-approved battery replacements.
2. Dispose of used batteries according to local codes pertaining to NiMH batteries.
3. Do not dispose of batteries in fire, as they may explode
4. Charge the telephone's batteries only while in the telephone handset, and only by using the telephone base unit to charge. Do not attempt to remove the batteries and charge them in a separate charging unit.
5. Do not short-circuit the battery pack, as this may cause it to explode or catch fire.

### ADJUSTING THE RING VOLUME

The up and down volume keys will adjust the ringer volume of the telephone. Additionally, the CL2200 series telephone has an optional "ascending" ring volume mode, where the ring volume begins at the lowest setting, then automatically rings louder with each successive ring during an incoming call. To select the ascending ring volume mode, follow these steps:

#### For Line 1:

Press the **FLASH** key; then the **4** key; then the **STORE** key, then the number **1** on the keypad.

#### For Line 2:


Press the **FLASH** key; then the **4** key; then the **STORE** key, then the number **2** on the keypad.

### ADJUSTING SPEAKERPHONE VOLUME

The speakerphone has eight (8) levels. When the speakerphone is activated, the volume is initially set at level six (6). To adjust the speakerphone volume, locate the volume up/down keys, located on the front surface of the phone below the keypad. Pressing the "down" arrow key will decrease the volume level, while pressing the "up" arrow key will increase it.

### ADJUSTING HANDSET RECEIVE VOLUME

The handset has four (4) volume levels. The volume is initially set at level two (2). To adjust the handset volume, locate the volume up/down keys, located on the handset, below the "#" key. Pressing the "minus" (-) key will decrease the volume level, while pressing the "plus" (+) key will increase it.

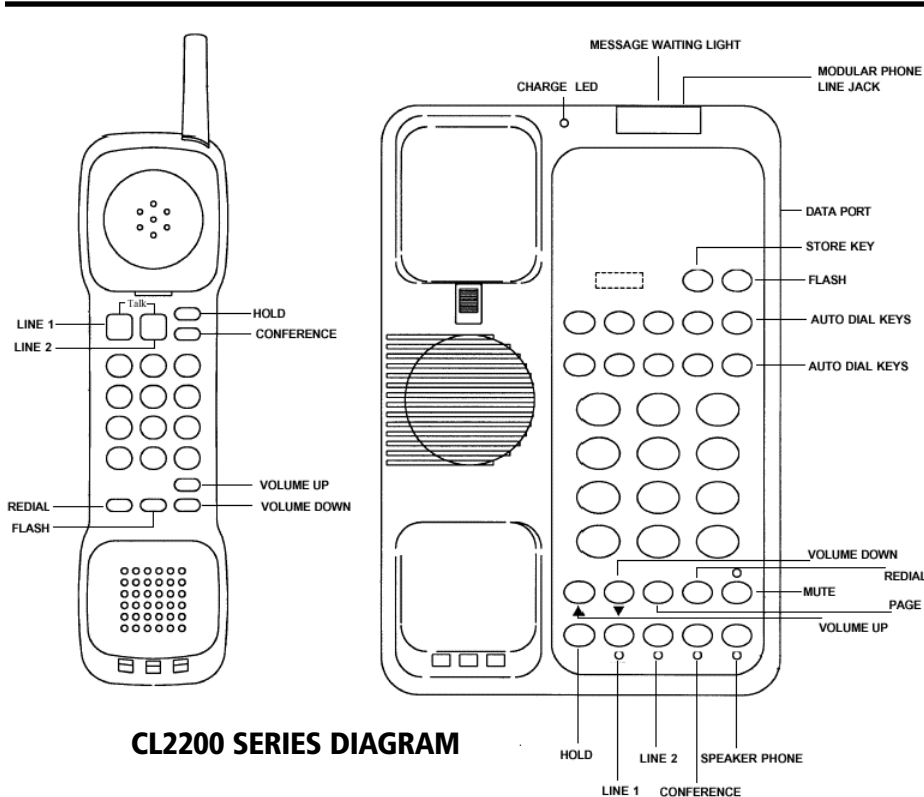

CL2200 SERIES DIAGRAM

### CONTACTING TELEDEX

**Telephone**  
(408) 363-3100  
(800) 794-8353

**Internet**  
[www.teledex.com](http://www.teledex.com)  
[store.teledex.com](http://store.teledex.com)

**Email**  
[sales@teledex.com](mailto:sales@teledex.com)

**Postal Mail**  
6311 San Ignacio Avenue  
San Jose, CA 95119 USA

# TELEDEX

Part Number 600-0480-49A  
Copyright © 2003 Teledex LLC  
ALL RIGHTS RESERVED

## AUTO DIAL KEYS

The CL2200 series has either five (5) or ten (10) programmable guest service (auto dial) keys, depending on the model you own. These keys can be programmed to automatically dial telephone numbers, or to activate telephone system features. To program the auto dial keys (programming can only be done from base unit):

1. With the faceplate removed, press the recessed **STORE** key.
2. Enter the desired telephone number (up to 15 digits in length) to be stored.
3. Press the **STORE** key again.
4. Press the auto dial key where the number is to be stored. Programming is now completed for that auto dial key. To program additional keys, repeat this process.

## SELECTING LINE 1 AND LINE 2

The CL2200 series employs PrimeLine/RingLine Select, which makes selecting the correct line as easy as lifting the handset. This feature prioritizes the ringing or idle line and reduces the confusion of line selection.

## RECEIVING A CALL

An audible ring and flickering red LED indicate an incoming call.

To answer the call using the handset while it is **not** on the base:

1. Pick up the handset.
2. Press the line key for the ringing line. The handset will go “off-hook” answering the ringing line.
3. To end the call, place the handset in the base unit cradle, or press the lit line key on the handset.

To answer the call using the handset while it is resting on the base:

1. Pick up the handset from the base. The phone will automatically connect to the correct, ringing line.
2. To end the call, replace the handset in the base unit cradle, or press the lit line key on the handset.

To answer the call using the speakerphone:

1. Press the line key for the ringing line. The speakerphone will go “off-hook”, answering the ringing line.
2. Or, press the **SPKR** key. The phone will automatically select the correct, ringing line.
3. To end the call, press the **SPKR** key again.

## PLACING A CALL

Using the handset:

1. Pick up the handset and select either line 1 or line 2. Listen for dial tone and dial the desired number.
2. After the call is complete, press the key for the selected line again to end the call.

Using the speakerphone:

1. Press key for either line 1 or line 2, or press **SPKR**.
2. Listen for dial tone, and dial the desired number, or press an auto dial key to dial a preprogrammed number.
3. After the call is complete, press the **SPKR** key to end call.

## REDIAL

The CL2200 series can automatically redial the last number dialed. On the handset, press the **REDIAL** key to redial the last number.

## CONFERENCE

The **CONF** key allows for three-way conversations. Depending on the situation, you may initiate a conference call using one of these methods:

User initiates two calls:

1. Place call to first party, then place them on hold by pressing the **HOLD** key.
2. Using the second line, place call to second party.
3. Once that party is on the line, press **CONF** to join the first caller with the second party and yourself.

User initiates one call:

1. After receiving a call from first party, place them on hold as above.
2. Using the second line, place call to second party.
3. Once that party is on the line, press **CONF** to join the first caller with the second party and yourself.

User includes two callers:

1. After receiving a call from first party, place them on hold as above.
2. After receiving call from second party, press **CONF** to join the first party with the second party and yourself.

To terminate a conference call, pressing a line key will maintain the connection with that line, while dropping the other line. To terminate the call entirely, press either the **CONF** key or **SPKR** key to disconnect both parties.

## USING THE HOLD KEY

The **HOLD** key places the call on hold locally at the cordless telephone.

To place a call on hold:

1. With a call active, press the red **HOLD** key on either the handset or base unit.
2. The red line LED will slowly blink, indicating the call is on hold.
3. If a conference call is active, pressing **HOLD** will place all connections on hold.

To remove a call from hold:

1. Press the line key of the call on hold. This will remove the call from hold, making the call active again.
2. The red line LED will return to steady illumination, indicating the line is active.
3. During a conference call, to remove both lines from hold, press the **CONF** key.

To change phones after placing a call on hold:

1. Place the call on hold as above.
2. Pick up the call at another telephone that is on the same line. The telephone will activate the line and remove the hold at the original telephone.

## TO MUTE THE SPEAKERPHONE

1. Press the **MUTE** key on the base unit. The red LED above the **MUTE** key will illuminate. The party on the other end will not be able to hear you when the **MUTE** LED is lit.
2. Press the **MUTE** key again to turn off the mute feature. The **MUTE** LED will go out.

## CONVERTING FROM DESK TO WALL MOUNT

The CL2200 series can be adapted for wall mounting applications. The conversion is easiest to make when the handset and cords are not connected.

1. Located on the handset cradle, above the speaker grill, is the wall/desk mount clip. Remove this clip by firmly pushing it upward towards the top of the phone.
2. Flip the clip over (top to bottom) so that the protruding edge is towards the top of the phone and replace it in its slot. This edge will hold the handset when the phone is mounted on the wall.
3. Turn the telephone over so the bottom is up, facing you. Place it on a non-abrasive surface to prevent scratching.
4. Locate and remove the mounting bracket. Firmly push back and pull up to remove two of the four retaining tabs.
5. Rotate the mounting bracket 180° degrees clockwise, so that the mounting eyelet on the bracket is facing in the same direction as the other mounting eyelet located on the bottom of the telephone.
6. Insert the top two retaining tabs of the mounting brackets into the mounting bracket slots (located near the middle of the telephone). Then firmly push down to insert the retaining tabs on the opposite side of the mounting bracket.
7. Connect a 15-foot RJ-45 cord into the **LINE** jack on the back of the phone.
8. Turn the telephone over, and slide the telephone down onto the mounting posts of the wall bracket. Ensure that both eyelets line up with the mounting posts.

## REQUIREMENTS OF PART 68 - FCC RULES

This device has been granted a registration number by the Federal Communications Commission, under Part 68 rules and regulations for direct connection to the telephone lines. In order to comply with these FCC rules, the following instructions must be carefully read and applicable portions followed completely:

1. Direct connection to the telephone lines may be made only through the standard modular cord furnished, to the utility installed jack. No connection may be made to party or coin phone lines. On the bottom of the phone is a label that contains among other information, the FCC Registration Number and the Ringer Equivalence number (REN) for this equipment. If requested this information must be provided to the telephone company. The **USOC Jack** for this equipment is **RJ11C**.
2. The telephone company, under certain circumstances, may temporarily discontinue and make changes in facilities and services which may affect the operation of the users' equipment: however, the user shall be given adequate notice in writing to allow the user to maintain uninterrupted service.
3. In certain circumstances, it may be necessary for the telephone company to request information from you concerning the equipment which you have connected to your telephone line. Upon request of the telephone company, provide the FCC registration number and the ringer equivalence number of the equipment which is connected to your line; this information will be found on the device.

4. If any of your telephone equipment is not operating properly, you should immediately remove it from the telephone line. It may cause harm to the telephone network.
5. If the telephone company notes a problem, they may temporarily discontinue service. When practical, they will notify you in advance disconnection. If advance notice is not feasible, the telephone company must; promptly notify you of such temporary discontinuance; afford the opportunity to correct the condition; inform you of your rights to bring a complaint to the FCC under their rules.
6. Repairs to the device may be made only by the manufacturer or an authorized service agency. This applies at any time during and after warranty. If unauthorized repair is performed, registration, connection to the telephone lines and remainder of warranty period all become null and void.
7. This equipment is hearing aid compatible.
8. This telephone must be connected behind a PBX.

## REQUIREMENTS OF PART 15 - FCC RULES

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is not a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Move the telephone away from the receiver; Consult the dealer or an experienced radio/TV technician for help. Any changes made by the user not approved by the manufacturer can void the user's authority to operate the telephone.

## INDUSTRY OF CANADA REQUIREMENTS

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements documents. The department does not guarantee the equipment will operate to the users satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe systems, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority or electrician, as appropriate.

## The Ringer Equivalence Number (REN) of this device is 0.7B.

Notice: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5. This telephone connects to the telephone network under the connecting arrangement code **CA11A**.