



UNIT@IP

Avanti 3020 set Avanti 3015D set User guide

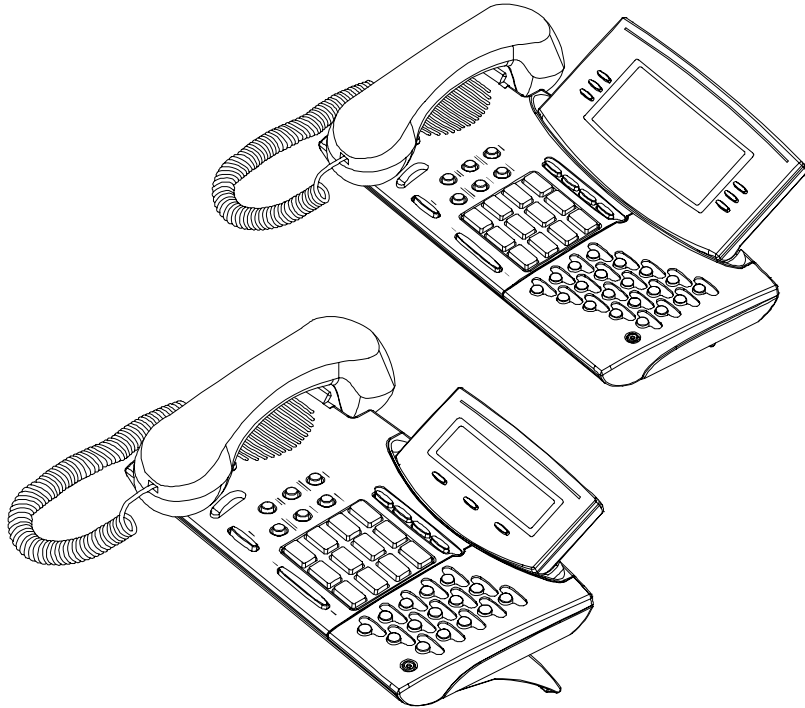

79-620-0010/A


 
Issue 1






79-620-0010/A, Issue 1


UNIT@IP

  **Avanti 3020 set
Avanti 3015D set
User guide**



    **Telrad Connegy, Inc.
Farmingdale, New York**









NOTICE

This publication refers to Telrad Connegy's Avanti 3020 set and Avanti 3015D set connected to Telrad Connegy's UNITE IP system, as of July, 1999.

  Telrad Connegy reserves the right to modify the equipment and the software described herein without prior notice. However, changes made to the equipment or to the software described herein do not necessarily render this publication invalid.






 
 
© 1999 Telrad Connegy Inc.,
Farmingdale, New York






CONTENTS

| | |
|---|----|
| ABOUT YOUR AVANTI TELEPHONE | 1 |
| TELEPHONE SET BUTTONS | 1 |
| SWITCHING FROM HANDSET TO HANDSFREE OPERATION | 6 |
| DISTINCTIVE RINGING | 7 |
| MUTE | 8 |
| HOT DIALPAD | 9 |
| INTERNAL CALLS | 10 |
| BARGE INTO A CONVERSATION | 11 |
| PAGE CALLS | 11 |
| ANSWERING CALLS | 12 |
| CALL WAITING | 13 |
| OUTSIDE CALLS | 14 |
| AUTOMATIC REDIAL | 15 |
| WAITING FOR AN AVAILABLE OUTSIDE LINE | 15 |
| CIRCUMVENT EXTENSION RESTRICTIONS | 16 |
| OBTAINING SPECIAL SERVICES VIA LINES DEFINED AS BEHIND AN EXCHANGE | 16 |
| HOLD | 17 |
| TRANSFERRING CALLS | 18 |
| CONFERENCE CALLS | 19 |
| PICKUP | 20 |
| MESSAGES | 21 |
| SENDING MESSAGES..... | 21 |
| RECEIVING MESSAGES | 22 |
| DELETING ALL MESSAGES..... | 22 |
| DO NOT DISTURB (DND) | 23 |
| DND MESSAGES | 23 |
| FORWARDING CALLS | 25 |
| CANCELING CALL FORWARD TO ME | 28 |
| ABBREVIATED DIALING | 29 |
| SPEED DIAL | 29 |
| MEMORY BUTTONS | 30 |
| PHONE BOOK | 30 |
| ALARM | 36 |
| TELEPHONE LOCK | 37 |
| DOOR UNIT | 38 |
| NOTE PAD | 39 |
| ADVANCED FEATURES | 40 |
| FEATURE CODES | 41 |

     

 

ABOUT YOUR AVANTI TELEPHONE

The Avanti 3020 and Avanti 3015D sets are equipped with onhook dialing, full speakerphone and hot dialpad capability, which enables you to make a call or operate any feature by pressing the dialpad buttons. You may also receive and disconnect calls, program features and perform all operations without lifting the handset.

You may lift the handset or switch between handsfree and handset operation at any time.

NOTE

 
This guide describes the regular operation of the telephone. The configuration of your particular system and telephone may introduce differences in operation. For example, some of the features and buttons described in this guide may not be available on your telephone set. For more information, see your System Administrator.

 
TELEPHONE SET BUTTONS

The Avanti 3020 set has six softkeys, three on either side of the display.

The Avanti 3015D set has three softkeys beneath the display.

Both sets have an array of programmable and fixed feature buttons (see Figure 1 and Figure 2).






NOTE


In this guide, telephone set fixed buttons appear in bold type, in capital letters and within square brackets, e.g., **[HOLD]**.

Softkeys appear in bold and italicized type, in capital letters within curly brackets. Some of the names of softkeys are slightly different on the Avanti 3020 set and the Avanti 3015D set. For example, the message softkey appears as **{SEND MSG}** on the Avanti 3020 set and as **{SND MG}** on the 3015D set. These differences are noted in appropriate sections of this guide.

 User-programmable button names appear in capital letters, e.g. SPEED DIAL.



 The programmable buttons have dual-color light indicators. The color and flash rate of the indicators show the status of the programmed line, feature or extension.



In general, red indicates non-availability (for example, a busy line); green indicates that you are using the feature or line, or that it is available to you.

 
 
 
 
Softkeys

Softkeys have several functions, which change according to the state of your telephone. A softkey's function, at any particular moment, is indicated on the telephone display.

To operate a displayed function, press the softkey adjacent to it (Avanti 3020 set) or beneath it (Avanti 3015D set).

User-programmable buttons

Some of the buttons on your telephone may be user-programmable SPEED DIAL or MEMORY buttons. You may program these to access extensions, features or outside lines.





Fixed feature buttons

The following fixed feature buttons appear on your Speakerphone set:

[HOLD]

This button places a call on hold.

[FEATURE]

 
Press **[FEATURE]** and then dial a feature access code to activate features (see the Feature codes table at the end of this guide).

[PICK UP]

Press this button to pick up calls.


[TRANSFER/CONFERENCE]

Press this button to transfer calls and when establishing and exiting conference calls.



NOTE

 The **[TRANSFER/CONFERENCE]** button is referred to as **[TRANSFER]** or **[CONFERENCE]**, depending on the operation being described.



[SPEED DIAL/PROGRAM]

This button is used for speed dialing and for programming various features.

 
 
 
[REDIAL/PAUSE]

 
This button lets you automatically redial the last outside number you dialed, after first accessing an outside line.

Pressing this button while dialing on an external line inserts a pause in a dialing sequence.

[LO HI]

This button adjusts the volume of the speaker, handset, headset, ringer and background music when any of these





is active.

Pressing this button when the telephone is idle changes the display contrast.

[FLASH]

Depending on system programming, this button is used to disconnect or to send Flash Signal to the connected remote exchange.

Programmable buttons

The following buttons on your set have already been programmed to perform specific functions. The System Administrator can program these buttons to perform other functions. If the function of certain buttons does not match those appearing in the figure at the beginning of this Guide, consult your System Administrator.

NOTE

With the default configuration, the following features are programmed on the four buttons above the dialpad: **[MSG]**, **[DND]**, **[MUTE]** and **[SPKR]**.

[MSG]

This button is used to send messages to other extensions and to reply to messages left at your extension.

[DND]

This button activates and deactivates Do Not Disturb.

 
 
 
 
 
[MUTE]

This button disables and enables your telephone microphone.

[SPKR]

For handsfree operation, press **[SPKR]** instead of lifting or replacing the handset.

Whenever this guide instructs you to lift or replace the handset, you may press **[SPKR]** instead.





DN buttons

DN buttons are buttons associated with specific Directory Numbers.

The first DN button is your Primary DN button, which has the same number as your extension. The Primary DN button is used for making and receiving most of your calls.

Whenever you pick up the handset, your Primary DN button, or - if it is not available - another DN button lights green.

If no DN buttons are available, no DN button lights, you do not receive dial tone, and you cannot place or answer calls.

DN buttons may be programmed in three different modes:

 
 
 
 
 
- **ringing mode** - the telephone rings and the DN button flashes green when a call is received.
- **flashing mode** - the DN button flashes green when a call is received, but there is no ringing.
- **delayed ringing mode** - a call rings first at another set or group of sets, for a programmed length of time, before beginning to ring at your set.

 
NOTES

Not all telephone sets are programmed with DN buttons. The instructions in this manual often contain references to DN indicators and displays of DN numbers. Disregard them if your telephone set is not programmed with DN buttons.

Many of the instructions offer several options, among them pressing a DN button. If your telephone set is not programmed with DN buttons, choose another option.

Some of the features operate slightly differently on a telephone set that is not programmed with DN buttons. These differences are pointed out in a





NOTE for each applicable feature. Consult your System Administrator for further details about the programming of your telephone set.

Outside line buttons

 
 
One or more of the buttons on your telephone may be associated with either specific lines or outside line groups. To access a line for dialing outside the system, press an outside line button.

Floating buttons

Calls on outside lines for which no button has been defined, may be associated with a button just for the duration of the call. These buttons are called “floating” buttons.

NOTE




Some of the access codes in your system may be different from those indicated here. If so, see your System Administrator for the correct codes.




SWITCHING FROM HANDSET TO HANDSFREE OPERATION

During a call conducted via the handset:

    1. Press **[SPKR]**.
2. Replace the handset and talk via the telephone set microphone.





DISTINCTIVE RINGING

 
 
 
 
 
 
You can program telephone sets located close to each other with distinctive rings, to enable you to identify which telephone is ringing. Nine different rings are available.

To change the ring for your telephone set

1. Press **[*]** and **[#]** simultaneously.
2. Press one of the dialpad buttons (**[1]** - **[9]**).

When you hear the ring that you want:

3. Press **[#]**.
4. Lift and replace the handset.
Your telephone set re-initializes and all telephone rings (internal, external, recall, etc.) sound with the distinctive ring selected.





MUTE

If you want to talk to someone in your office during a call, without the connected party hearing, you can disable the handset or telephone set microphone.

To enable or disable the microphone (MUTE)

- Press **[MUTE]** during a conversation.

To enable or disable the handset microphone (HANDSET MUTE)

During a handset call:

- Press **[HS MUTE]** (if programmed).

 
NOTE

 
If your set is Single Audio Path (SAP), pressing **[MUTE]** deactivates both microphones.

ALLOWING OTHER PEOPLE TO HEAR YOUR CONVERSATION (SPEAKER MONITOR)

While you are speaking through the handset, the conversation can be directed through your telephone speaker, so that people in your vicinity can hear the other end of the conversation.

1. Press **[FEATURE]**.
2. Press **[SPKR]**.
The **[SPKR]** button indicator turns on.
Both you and the other party are heard via the speaker.












HOT DIALPAD

The hot dialpad enables you to dial and activate features without lifting the handset or pressing **[SPKR]** first.

NOTE

       The instructions in this guide assume that you have hot dialpad capability.





INTERNAL CALLS

To place a non-ringing call

- Dial the extension number.

To place a ringing call

1. Dial tone access code [1].
2. Dial the extension number.

If the extension you called is busy (CALLBACK)

When you dial an extension and hear busy tone, you can activate the Callback feature:

 
 
 
 
 
 
1. On the Avanti 3020, press **{CALL BACK}**.
On the Avanti 3015D, press **{CLL BCK}**.

When the called extension becomes available, your telephone rings. Then:

2. Press **[SPKR]** or lift the handset.
You hear the called extension ringing.

To cancel Callback

- On the Avanti 3020, press **{CNCL CBACK}**.
On the Avanti 3015D, press **{CL CBK}**.



BARGE INTO A CONVERSATION

Depending on system programming you may be able to break into another conversation. When you dial an extension and hear busy tone:

- On the Avanti 3020, press **{BARGE IN}**.
On the Avanti 3015D, press **{BRG IN}**.
A warning tone is heard by all parties, depending on system programming.

PAGE CALLS

 
You can make announcements through an external page unit, or through the speakers of all telephones in a page zone.

1. Press **[FEATURE]**.
2. Dial the PAGE zone access code (**[4][1]** - **[4][8]**).
After the double tone burst:
3. Make your announcement.

To speak directly with a page initiator (MEET ME PAGE)

You can call a page initiator during a page call:

1. Lift the handset.
2. Press **[FEATURE]**.
3. Dial the MEET ME PAGE access code (**[6][6]**).
4. Dial the PAGE zone access code.



ANSWERING CALLS

When you receive a call an indicator flashes green on a telephone set that is programmed with DN buttons.

For internal calls the top line of the display shows the name of the caller and their extension number.

For external calls the display shows the trunk name and number. You usually also hear a ring, unless your set has been programmed not to ring.

NOTE

On outside line calls:

Telrad Connegy's UNITe IP systems support Caller Name and Caller Identification display.

If you have a **[TIME]** button, pressing it may display additional relevant information.

 
 
To answer a ringing or flashing call

 
- Pick up the handset
or
- Press the button that is flashing green.
After you answer the call the indicator of the DN or private trunk line lights steady green.

To answer an intercom call

To answer an intercom call coming through your telephone speaker:

- Talk through the microphone.
If you prefer, you may lift the handset instead.





CALL WAITING

You may hear either a ring or a beep, indicating a second call, while already engaged in a conversation. You can answer the call without disconnecting the first call.

To answer a second call

 
 
 
 
 
1. Press **[HOLD]**;
The first call is put on hold. The indicator for that line flashes green.
2. Press the DN or outside line button that is flashing green; you receive the second call.

 
To return to the first call

1. Press **[HOLD]**;
2. Press the flashing DN button.

NOTE

If your telephone does not have DN buttons, you cannot put an internal call on hold. This means that you cannot answer another arriving internal call without disconnecting the first internal call. In this case, you must hang up first. You can then answer the second call when it rings.





OUTSIDE CALLS

Outside calls may be placed by accessing an outside line (or group) or by using the Least Cost Routing (LCR) feature.

When the instructions tell you to access an outside line, you may:

- Dial an outside line number, an outside line group number or the LCR access code (usually **[9]**);
- Press an outside line or outside line group button;
- Press the LCR button.

Depending on system programming, the cost of your call may be displayed briefly at the end of the conversation.

To place an outside call

1. Obtain an outside line.
2. Dial the number.

See also, *ABBREVIATED DIALING*, below.

 
 
 
 
 
 
To redial the last outside number you dialed

1. Obtain an outside line.
2. Press **[REDIAL]**.

To save a frequently dialed outside number

After dialing the desired number, but before hanging up:

1. Press **[FEATURE]**
2. Dial the *SAVE/REPEAT* access code.



To dial the number saved

1. Access an outside line.
2. Press **[FEATURE]**.
3. Dial the SAVE/REPEAT access code.

AUTOMATIC REDIAL

If you dial an outside number and hear busy tone, you can have the system dial the number several times, at defined intervals.

When you hear busy tone:

- Press an **ARD** button.

When the outside party answers:

- Press **[SPKR]** or lift the handset.
If the dialed number rings, or if the system makes the maximum number of dialing attempts, the Automatic redial is deactivated.
- To temporarily deactivate or reactivate Automatic Redial
- Press the **ARD** button again.

NOTE

Several Automatic redials may be activated simultaneously by using more than one **ARD** button.

WAITING FOR AN AVAILABLE OUTSIDE LINE

To enter a trunk queue

When you try to select an outside line and hear busy tone:

1. Press **{TKQUE}**.
When an outside line becomes available, the system rings your extension. Then:
2. Press **[SPKR]** or lift the handset.
3. Listen for outside dial tone and dial the desired number.

To cancel trunk queue

4. On the Avanti 3020, press **{CNCL TKQUE}**.
On the Avanti 3015D, press **{CL TKQ}**.

CIRCUMVENT EXTENSION RESTRICTIONS (TRAVEL CLASS OF SERVICE)

You can dial an outside number from a toll-restricted telephone by temporarily assigning it your own extension's Class Of Service (COS) or a system-wide (Global) COS accessible only to privileged users.

 
1. Press **[TC]** (if defined) or dial the TRAVEL COS (Class Of Service) access code.
The display shows *ENTER NO:*
2. Dial your extension number - to apply your extension's COS,
or
Press **[*]** for a Global COS.
The display shows *ENTER CODE:*
3. Dial your ECC authorization code or a Global COS code.
The **[TC]** indicator (if defined) lights.
The Travel COS feature is active for a defined period.
4. Access an outside line and place a call.

OBTAINING SPECIAL SERVICES VIA LINES DEFINED AS BEHIND AN EXCHANGE (CENTREX OR PBX)

You may be able to access special services provided by a CENTREX or PBX exchange.

To access the services while connected to the outside line

1. Press **[FEATURE]**.
2. Press **[FLASH]**.



HOLD

There are two types of hold:

- **Exclusive hold:** the call can be retrieved only from your extension.
- **Inclusive hold:** the call can also be retrieved by other sets with a button for that appearance.

You cannot transfer a call that is on hold.

When you place a call on hold, you automatically receive dial tone and can make a page call or dial to another extension. If you do not receive dial tone, this means that no DN is available.

To place a call on exclusive hold

- Press **[HOLD]** once.
The indicator flashes green on your set and red on other sets with a button for that appearance.

 
 
 
 
 
 
To place a call on inclusive hold

 
- Press **[HOLD]** twice.
The indicator flashes green on all sets that have a button for that appearance.

Depending on the programming of your extension, the first press of hold may activate Inclusive hold, and the second press, Exclusive hold. See your System Administrator.

To pick up a call from hold

- Press the flashing button of the call on hold.





TRANSFERRING CALLS

 
 
 
You can transfer a call to another extension:

1. Press **[TRANSFER]**.
2. Dial the extension number.
3. Announce the call when the other party answers and then hang-up.

To retrieve a transferred call

If you have not yet hung up and the other party has not yet answered the transferred call, you may retrieve the transferred call.

- Press the line button associated with the call.



CONFERENCE CALLS

A total of eight parties, any of which may be on outside lines, can participate in a conference.

To establish a conference

1. Make the first call.
2. On the Avanti 3020, press **{CONFERENCE}**.
On the Avanti 3015D, press **{CONF}**.
3. Make the next call.

After the call is answered:

 
4. Press **{JOIN}**.

Repeat steps 2 through 4 to add up to five more parties to the conference, using the **[CONFERENCE]** button instead of the softkey (in step 2).

If there are more conference participants a **{NEXT}** softkey appears. Press it to view the rest of the list of participants. After pressing **{NEXT}** you can return to the previous display by pressing **{PREVIOUS}** (3020 set) or **{PREV}** (3015D set).

To remove an outside line party from the conference (if a **[DROP]** button is programmed for your set)

1. Press the softkey of the outside line you want to remove from the conference.
2. Press **[DROP]**.



PICKUP

 
 
 
 
You can answer a call at another extension, without leaving your desk.

To pick up a call on hold or ringing at another extension

1. Press **[PICK UP]**.
2. Dial the number of the extension at which the call is ringing or on hold.

To pick up a call ringing in your pickup group

- Press a MEMORY button programmed with GROUP PICK UP.
or
 1. Press **[PICK UP]**.
 2. Press **[*]**.
See *ABBREVIATED DIALING* for instructions on how to program MEMORY buttons.





MESSAGES

If after dialing an extension, there is no answer or you hear busy tone, you can send a basic message or a message from a defined list, which appears on the display of the extension you called.

When you send a basic message, display telephones show “CALL” followed by your extension name or number (e.g. “CALL STEVE”).

When you send a defined message, display telephones show the text of the message, followed by your extension name or number e.g. (“GONE OUT STEVE”).

SENDING MESSAGES

To send a basic message

After dialing an extension:

 
 
 
 
 
1. Press **[MSG]**.
2. Hang up.
The message is sent.

To select and send a defined message

You can select a message from a defined list (see a list of system messages at the end of this guide).

After dialing an extension:

1. Press **[MSG]**.
2. Enter a message number (two digits; e.g. 08).
Or you can scroll through the message list with **[LO HI]**. If the message includes asterisks (*), you may edit it using the dialpad. Enter the digits on the dialpad; they appear on the screen in place of the asterisks.





3. On the Avanti 3020, press **{SEND MSG}**
On the Avanti 3015D, press **{SND MG}**.
4. Hang up. The message is sent.

Canceling the message process

You may cancel the message process at any time:

- Press **[FLASH]**.

RECEIVING MESSAGES

When messages have been left at your extension, your **[MSG]** indicator lights and you hear a broken dial tone when you lift the handset or press **[SPKR]**. The display informs you of messages waiting for you.

To read your messages

- Press **[MSG]** (when lit; not when flashing).

To scroll through your messages

- Press **[LO HI]**.

To call the message sender

1. Press **[SPKR]**.
2. Press **[MSG]**.

To delete a message

 
 
 
 
 
While the message is displayed:

1. Press **[MSG]** (when lit; not when flashing).
2. Use **[LO HI]** to scroll to the message you wish to delete.
3. Press **[#]**.
4. Hang up.

DELETING ALL MESSAGES

To delete all messages left at your telephone

1. Press **[#]**.
2. Press **[MSG]**.
3. Hang up.



DO NOT DISTURB (DND)

If you do not want calls to ring at your telephone, temporarily, you can activate the DND feature.

NOTE

If your telephone set is not programmed with DN buttons, the DND indication is slightly different.

If the **[DND]** button flashes red, this indicates that your set is programmed for Call forward. You can deactivate Call forward by pressing the flashing **[DND]** button.

To place your telephone in do not disturb mode

- Press **[DND]**.
The DND indicator lights steady red and no calls ring at your telephone. Internal callers hear busy tone and see your DND message, if programmed. If your set is programmed for DND call forwarding or for Call forward, calls are forwarded.

To cancel DND mode

- Press **[DND]**.
The DND indicator goes off and calls ring at your set.

 
DND MESSAGES

You can select a defined message that appears on the display of telephones which call your extension, while it is in DND mode. You can also ask the System Administrator to program additional messages.







To program a DND message

1. Press **[FEATURE]**.
2. Press **[SPEED DIAL/PROG]**.
3. Press **[DND]** or
On the Avanti 3020, **{DND MSG}**
On the Avanti 3015D, **{DND MG}**.
4. Enter a message number,
or,
Press **[LO HI]** repeatedly to scroll through the available messages (see the DND Messages table at the end of this guide for a complete list of available messages).
If the message includes asterisks (*), you may edit the message by pressing the desired digits on the dialpad.
The numbers you dial appear in the message, in place of the asterisks.
5. Press **{SAVE}**.



To cancel your DND message

    1. Press **[#]**.
2. Press **[SPEED DIAL/PROGRAM]**.
3. Press **[DND]** or
On the Avanti 3020, **{DND MSG}**
On the Avanti 3015D, **{DND MG}**.



FORWARDING CALLS

You may program your telephone set to forward your calls to another extension.

To program call forwarding (Avanti 3020)

1. If your set does not have DN buttons, skip to step 2.
If you want to program forwarding for a specific DN, first press the desired DN button.
If more than one set with a button for the same DN is authorized to forward calls for that DN, the last programming performed overrides the previous.
2. Press **{CALL FWD}**.
If you have a set in PBX mode and are authorized to do so, you can program call forwarding for all your DNs at once. Press [*].
3. Press **{CALL FWD}**, **{BUSY}**, or **{NOANS}**, depending on whether you want to forward calls unconditionally, only when your set is busy, or only calls that are not answered.
4. Press **{ALL}**, **{INT}**, or **{EXT}**, depending on whether you want to forward all calls, only internal calls, or only external calls.
5. Enter the new destination for Call forwarding.

NOTE

Instead of dialing the extension number, you may press a MEMORY button programmed with an extension number (for internal calls only) - or press a SPEED DIAL button (or press **[SPEED DIAL/PROGRAM]** and a SPEED DIAL memory bin number) for internal or external calls, as determined by

 
 


the contents of the memory. Calls are forwarded to the contents of the MEMORY button or SPEED DIAL bin. If you change the contents of the SPEED DIAL bin, calls are forwarded to the new destination. This does not apply to the MEMORY button.

6. Hang up.

To cancel call forwarding (Avanti 3020)




1. If your set does not have DN buttons, skip to step 2.
If you want to cancel forwarding for a specific DN, first press the desired DN button.
2. Press **[#]**.
3. Press **{CALL FWD}**.
4. Press **{CALL FWD}**, **{BUSY}**, or **{NOANS}**.
5. Press **{ALL}**, **{INT}**, or **{EXT}**, depending on the kind of call forwarding you want to cancel.
6. Hang up.



To program call forwarding (Avanti 3015D)

1. If your set does not have DN buttons, skip to step 2.
If you want to program forwarding for a specific DN, first press the desired DN button.
If more than one set with a button for the same DN is authorized to forward calls for that DN, the last programming performed overrides the previous.
2. Press **[FEATURE]** and dial the code that designates in which situation you want your calls forwarded:

| In order to program | Dial |
|------------------------|--------------------------------|
| Call forward always | [F][L] or [3][5] |
| Call forward busy | [F][B] or [3][2] |
| Call forward no answer | [F][N] or [3][6] |
3. If you have a set in PBX mode and are authorized to do so, you can program call forwarding for all your DN's at once. Press **[*]**.

   





4. Dial the code designating the calls you want forwarded:

| In order to program | Dial |
|---------------------|--------------------------|
| All calls | [A] or [2] |
| External calls | [E] or [3] |
| Internal calls | [I] or [4] |

5. Enter the new destination for Call forwarding.

NOTE

  Instead of dialing the extension number, you may press a MEMORY button programmed with an extension number (for internal calls only) - or press a SPEED DIAL button (or press **[SPEED DIAL/PROGRAM]** and a SPEED DIAL memory bin number) for internal or external calls, as determined by the contents of the memory. Calls are forwarded to the contents of the MEMORY button or SPEED DIAL bin. If you change the contents of the SPEED DIAL bin, calls are forwarded to the new destination. This does not apply to the MEMORY button.







6. Hang up.

To cancel call forwarding (Avanti 3015D)

1. If your set does not have DN buttons, skip to step 2.
If you want to cancel forwarding for a specific DN, first press the desired DN button.
2. Press **[#]**.
3. Press **[FEATURE]**.
4. Dial the code that designates in which situation you want your call forwarding canceled:

| In order to program | Dial |
|------------------------|--------------------------------|
| Call forward always | [F][L] or [3][5] |
| Call forward busy | [F][B] or [3][2] |
| Call forward no answer | [F][N] or [3][6] |

   

 

5. Dial the code designating the type of call forwarding that you want to cancel:

| In order to program | Dial |
|----------------------------|--------------------------|
| All calls | [A] or [2] |
| External calls | [E] or [3] |
| Internal calls | [I] or [4] |

 
 
 
 
 
 
6. Hang up.

 
CANCELING CALL FORWARD TO ME

If another set has programmed your telephone set as its forwarding destination and you do not wish to be disturbed by those calls, you can cancel your status as a call forwarding destination.

To cancel Call Forward to me

1. Press **[#]**.
2. On the Avanti 3020, press **{FLW TO ME}**.
On the Avanti 3015D, press **{FL 2ME}**.
3. Dial the extension number whose calls you no longer want forwarded to your set.
or
Press **[*]** if you wish to cancel all Call Forward to me, from all sets.





ABBREVIATED DIALING

This section describes several ways of abbreviating dialing. Save/Repeat and Redial are described in Outside Calls, above.

SPEED DIAL

Speed dial shortens the procedure of dialing outside numbers by using speed dial buttons and speed dial memories (called “bins”).

To speed dial an outside number

 
- Press [**SPEED DIAL/PROGRAM**] and dial the speed dial code (three digits),
or
Press the appropriate SPEED DIAL button.

 
To program a speed dial bin number or speed dial button

1. Press [**FEATURE**].
2. Press [**SPEED DIAL/PROGRAM**].
3. Do one of the following:
Dial a speed dial code (three digits; e.g. 003),
or
Press the SPEED DIAL button to be programmed.
4. Dial an outside line access code followed by the number you want to store.
5. Hang up.

NOTE

Pauses may be entered, where needed, in a speed dial sequence by pressing [**REDIAL/PAUSE**].





MEMORY BUTTONS

 
Memory buttons are used for one-press dialing of extensions and feature access codes.

To dial with a MEMORY button

- Press the programmed button.

To program a MEMORY button

1. Press **[FEATURE]**.
2. Press **[SPEED DIAL/PROGRAM]**.
3. Press the MEMORY button to be programmed.
4. Dial the desired extension number (up to four digits)
or
Press **[FEATURE]** and then dial the desired feature code.
See the Feature Codes Table at the end of this guide.
5. Hang up.







PHONE BOOK

You can use the Phone Book feature to dial a number from your private Phone Book list (which you program), or from one of the ten Phone Book lists your System Administrator may have programmed.

The Phone Book entries are stored in speed dial bins in alphabetical order. When you program a Phone Book entry, it is stored in an available speed dial bin and has a name associated with it. If you change the number stored in that speed dial bin by the method described on the previous page ("**To program a speed dial bin number or speed dial button**"), you also change the number for the Phone Book entry.

    You can use the Phone Book feature to dial a number only when your telephone set is in idle state. You can make entries into the Phone Book when the telephone is idle or during a conversation, by programming a speed dial bin with the number and name.



General key functions

Use the **[LO HI]** button to scroll through the menu of lists and through the entries in the Phone Book lists. If you only see the name, press the **[LO HI]** button to view the number.

Press **[FEATURE]** to return to the previous display.

Press **{EXIT}** to exit from the Phone Book feature.

Press **[MUTE]** to delete the last character(s) you entered.

Press **[HOLD]** to save your programming and continue programming another entry.

To save your programming and exit from the Phone Book feature:

Press **[PROGRAM]**.

To dial a number from the Phone Book

(from idle state only)

1. On the Avanti 3020, press **{PHONE BOOK}**.
On the Avanti 3015D, press **[FEATURE]** and the feature access code for the desired Phone Book list (see your System Administrator).
2. On the Avanti 3020, press **{PRIVATE}**, or the softkey to the left of the system Phone Book list you want to access.
3. Press **[HI]** to view the list
4. Use the **[LO HI]** button to scroll through the list or use the dialpad to enter appropriate characters until the name appears on the display.
5. On the Avanti 3020, press the softkey on the left side of the appropriate name.
On the Avanti 3015D, press **[PAUSE]**.
The Phone Book feature automatically dials the number.

If you want to see details of the entry before dialing the number on the Avanti 3020 telephone set, press the softkey on the right side of the appropriate name.

 
With the Avanti 3015D telephone set, press **[TRANSFER]**. The display shows the name for the entry, the number of the speed dial bin (e.g. 003) where the entry is stored, and the telephone number for the entry.

You can then press **{DIAL}** to dial the number, **{UPDATE}** to change the name or number for the entry, or **{REMOVE}** to delete the entry from the Phone Book.

To program your private Phone Book list

For each entry in your private Phone Book list, you enter both a name and a telephone number.

1. On the Avanti 3020, press **{PHONE BOOK}**.
On the Avanti 3015D, press the programmed button for the private Phone Book list, or press **[FEATURE]** and the feature access code for the private Phone Book list.
2. On the Avanti 3020, press **{PRIVATE}**.
3. On the Avanti 3020, press **{ADD NEW}**.
On the Avanti 3015D, press **{ADD}**.
4. Enter the characters in the name (up to 16) by using the dialpad.
The table at the end of this section shows the dialpad equivalents of each character.
5. Press **{NUMBER}**.
6. Enter up to 16 digits for the telephone number.
7. Press **[HOLD]**.
The previous display returns so that you can continue programming the next available speed dial bin.
8. After programming all the entries for the list:
On the Avanti 3020, press **{SAVE&EXIT}** ;
On the Avanti 3015D, press **{EXIT}**.









To delete an entry from your private Phone Book

1. Access Phone Book as if you are going to dial a number (steps 1-4 in “**To dial a number from the Phone Book**” above) for the entry you want to delete.
2. On the Avanti 3020 telephone set, press the softkey to the right of the entry,
On the Avanti 3015D telephone set, press **[TRANSFER]**.
3. Press **{REMOVE}**.

To revise an entry in your private Phone Book

      1. Access the entry you want to revise.
2. On the Avanti 3020 telephone set, press the softkey to the right of the entry,
On the Avanti 3015D telephone set, press **[TRANSFER]**.
3. Press **{UPDATE}**.
Enter the correct characters for the name.
Use **[MUTE]** for backspacing.
4. If you want to change the number:
Press **{NUMBER}**, or skip to step 6 to leave the number unchanged.
5. Enter the correct number.
6. Press **[PROGRAM]**.



Phone Book dialing equivalents

| dialpad number | for the following character -- press the dialpad button the following number of times, rapidly | | | | |
|----------------|--|-----|---------|------|------|
| | one | two | three | four | five |
| 1 | 1 | _ | "space" | / | |
| 2 | A | B | C | 2 | |
| 3 | D | E | F | 3 | |
| 4 | G | H | I | 4 | |
| 5 | J | K | L | 5 | |
| 6 | M | N | O | 6 | |
| 7 | P | Q | R | S | 7 |
| 8 | T | U | V | 8 | |
| 9 | W | X | Y | Z | 9 |
| 0 | 0 | | | | |

As shown in the above table, you press the dialpad button once for the first letter appearing on it, twice for the second letter appearing on it, and three times for the third letter appearing on it.

With each press of the button, the corresponding character appears on the display.

 
If you want to enter two characters from the same button on the dialpad, for example D followed by E, wait two seconds between entering characters (until you see the cursor "_" at the next position), or press the **[NEXT]** button to indicate you have finished programming that character.

Enter "Z" by pressing **[9]** four times.

Enter "Q" by pressing **[7]** two times.

Enter an underline by pressing **[1]** twice.

Enter a slash by pressing **[1]** four times.









Warning signal


You hear a three-beep warning tone:

- If you try to access a Phone Book list that you are not authorized to use;
- If you try to save a name without entering a number for it;
- If you try to add a new name to your private list when you have no available speed dial bins; or
- If you try to access a list that has no names defined.

Caller ID

       If you receive a call made from a telephone number that appears in your Phone Book, and if your system supports Caller ID, the name programmed for that number in the Phone Book appears on your telephone display, instead of the number.





ALARM

Your telephone can sound an alarm ring at a programmed time.

To program an alarm time

 
 
 
 
 
 
1. On the Avanti 3020 set, press **{PROGRAM}**.
On the Avanti 3015D set, press **{PROG}**.
2. Press **{TIME}**.
3. Dial the four-digit alarm time (HH:MM) using the 24 hour format (e.g. 1530 for 3:30 pm).
4. Press **{SAVE}**.

 
To cancel the alarm setting

1. Press **[#]**.
2. Press **[FEATURE]**.
3. Dial TIME ALARM access code **[8][2]**.
4. Hang up.

To stop the alarm ring

- Press **[SPKR]** twice or lift and replace the handset.





TELEPHONE LOCK

 
 
 
 
 
 
You can prevent people from making outside calls from your telephone.

 
To lock your telephone

1. Dial the LOCK access code.
Display telephones show *ENTER CODE*:
2. Dial your Executive Credit Code (see your System Administrator).
3. Hang up.
The telephone lock dialing restrictions are in effect.
The **[LOCK]** button, if defined, lights.

To unlock your telephone

- Repeat the above procedure.





DOOR UNIT

Your system may have a door unit equipped with an intercom and electric door latch. When a visitor presses the doorbell, up to four system extensions ring.

When the door bell rings

If your telephone is ringing:

- Press **[SPKR]** or lift the handset.

 
 
 
 
 
 
If another extension is ringing:

 
- Dial the PAGE zone access code associated with the door unit,
or
Press the flashing **[DOOR]** button, if defined.
You can now speak with the person at the door.

To open the electric door latch

While connected to the door unit:

- Press **[*]**.
The door latch opens.












NOTE PAD

You can save a number of up to 16 digits during a call.

1. Press **[FEATURE]**.
2. Press **[SPEED DIAL/PROGRAM]** twice.
3. Dial an available speed dial bin number (three digits) or press an available SPEED DIAL button.
4. Enter up to 16 digits.
5. Press **[SPEED DIAL/PROGRAM]**.

       To dial the number saved, do a regular Speed Dial using the Speed Dial bin number or button you used to save the number (see *ABBREVIATED DIALING*).












ADVANCED FEATURES

This section lists some advanced features which you can activate from your telephone. Details concerning the operation of these features can be found in the UNITE IP Systems Operating Instructions manual.

       - Account code (voluntary, reminder, forced);
- Answering a second incoming call;
- Background music;
- Camp on;
- Conference loop;
- Confirmed transfer;
- Dial attendant;
- DISA;
- Executive Credit Code (ECC) programming;
- Executive intercom;
- External Call Forward;
- Floating buttons;
- Hot line;
- Intrusion;
- Meet me conference;
- Pick up;
- Last hold;
- Page transfer;
- System speed dial;
- Trunk patch - Retrieve trunk patch.





FEATURE CODES

Features can be activated by pressing the **[FEATURE]** button and then dialing a feature access code.

 
The default feature codes (see next page) reflect the feature initials, using the letters on the dialpad buttons.

For example:


To access Barge In

- Press **[FEATURE]** followed by the dialpad buttons corresponding to the letters BI (Barge In).





That is,



| | | |
|----------------|------------|------------|
| FEATURE | 2 | 4 |
| | ABC | GHI |

 

    The feature codes in your system may have been changed. If so, enter the updated feature access codes in the “Access method” column of the Feature codes table.



Feature codes

| Feature name | Abbreviation | Access method |
|-----------------------------|--------------|-----------------|
| ACCOUNT CODE | AT | [FEATURE][2][8] |
| ACD LOGIN (1) | - | - |
| ACD LOGOUT (1) | - | - |
| ALL/GROUP | - | [*] |
| ATTENDANT | - | [0] |
| BACKGROUND MUSIC 1 | BM | [FEATURE][2][6] |
| BACKGROUND MUSIC 2-4 (1)(3) | - | - |
| BARGE IN | BI | [FEATURE][2][4] |
| CALL ACCOUNT MONITOR (1) | - | - |
| CALLBACK/QUEUE | CB | [FEATURE][2][2] |
| CALL FORWARD-ALWAYS | FL | [FEATURE][3][5] |
| CALL FORWARD-BUSY | FB | [FEATURE][3][2] |
| CALL FORWARD-NO ANSWER | FN | [FEATURE][3][6] |
| CANCEL | - | [#] |
| CLIR (1)(2) | - | - |
| CONFERENCE LOOP 1-10 (1) | - | - |
| DIRECTORY 1 THROUGH 9 (1) | - | - |
| DIRECTORY 10 (HELP) (1) | - | - |
| DROP (from conference) (1) | - | - |
| END OF DIALING/SEND | - | [FEATURE][#] |
| EXECUTIVE CREDIT CODE | EX | [FEATURE][3][9] |
| FEATURE | - | [7] |
| FLASH SIGNAL(1) | FS | [FEATURE][3][7] |
| FLIP FLOP | FF | [FEATURE][3][3] |
| GROUP PICKUP (1) | - | - |
| INTRUSION | - | [6] |
| LAST HOLD | LH | [FEATURE][5][4] |
| LEAST COST ROUTING (1) | - | - |
| LOCK (1) | - | - |

(1) Access method not assigned by default.

(2) Only available on ISDN PRI calls.

(3) In the UNITe IP 400 up to eight; in the UNITe IP 1000 up to 24.

Not all of the above features are available on every type of telephone set.

Feature codes (Continued)

| Feature name | Abbreviation | Access method |
|------------------------------------|---------------|---|
| MEET ME CONFERENCE 1-5 (1) | - | - |
| MEET ME PAGE | MM | [FEATURE][6][6] |
| MESSAGE | ME | [FEATURE][6][3] |
| NIGHT SERVICE (1) | - | - |
| PAGE - INTERNAL 1 through 8 | I1 through I8 | [FEATURE][4][1] through [4][8] |
| PAGE - EXTERNAL 1 through 8 (1) | X1 through X8 | - |
| PHONE BOOK (private list) | - | [FEATURE][7][1] |
| PHONE BOOK (system lists 1 to 10) | - | [FEATURE] [7][2][1] to [7][2][1][0] |
| PICKUP | PU | [FEATURE][7][8] |
| PROGRAM | PM | [FEATURE][7][6] |
| REDIAL | RL | [FEATURE][7][5] |
| SAVE/REPEAT | SR | [FEATURE][7][7] |
| SPEED DIAL | SD | [FEATURE][7][3] |
| TIME ALARM | TA | [FEATURE][8][2] |
| TONE | - | [1] |
| TONE DIAL (DTMF) (1) | - | - |
| TRAVEL COS (1) | - | - |
| TRUNK PATCH | TP | [FEATURE] [8][7] |
| TRUNK SPEED DIAL (1) | - | - |
| VOICE MESSAGE (1) | - | - |

(1) Access method not assigned by default.

(2) Only available on ISDN PRI calls.

(3) In the UNITe IP 400 up to eight; in the UNITe IP 1000 up to 24.

Not all of the above features are available on every type of telephone set.

DND messages

| Message number | Default message | Updated message |
|----------------|--------------------------|-----------------|
| 01 | BE BACK SOON | |
| 02 | BE BACK AT ** : ** (1) | |
| 03 | BE BACK ON ** - ** (1) | |
| 04 | OUT UNTIL ** : ** (1) | |
| 05 | OUT FOR THE DAY | |
| 06 | OUT OF OFFICE | |
| 07 | OUT OF TOWN | |
| 08 | OUT ON A CALL | |
| 09 | OUT FOR LUNCH | |
| 10 | ON VACATION | |
| 11 | ON A TRIP | |
| 12 | ON BREAK | |
| 13 | AWAY FROM DESK | |
| 14 | GONE HOME | |
| 15 | BUSY UNTIL ** : ** (1) | |
| 16 | CALL * * * * * (1) | |
| 17 | CALL ME AT * * * * * (1) | |
| 18 | CALL LATER | |
| 19 | CALL TOMORROW | |
| 20 | DO NOT DISTURB | |
| 21 | IN A MEETING | |
| 22 | IN CONFERENCE | |
| 23 | WITH A CLIENT | |
| 24 | WITH A GUEST | |
| 25 | WITH A PATIENT | |
| 26 | UNAVAILABLE | |
| 27 | LEAVE MSG AT * * * (1) | |
| 28 | TAKE MSG AT * * * * (1) | |
| 29 | | |
| 30 | | |

(1) When editing messages, enter digits in place of the asterisks.

System messages



| Message number | Default message | Updated message |
|----------------|-----------------------|-----------------|
| 01 | CALL_ (Basic message) | |
| 02 | CALL * * * * * (1) | |
| 03 | CALL HOME | |
| 04 | CALL ME | |
| 05 | GONE OUT | |
| 06 | READ MAIL | |
| 07 | VOICE MAIL | |
| 08 | CALL BOSS | |
| 09 | TAKE MSGS | |
| 10 | GONE HOME | |
| 11 | JOB DONE | |
| 12 | IN TROUBLE | |
| 13 | CLIENT | |
| 14 | BRING WORK | |
| 15 | ANY NEWS? | |
| 16 | REPORT DUE | |
| 17 | COME HERE | |
| 18 | MEET. NOW | |
| 19 | MEMO READY | |
| 20 | TYPE LETTR | |
| 21 | WELL DONE | |
| 22 (2) | | |
| 23 | | |
| 24 | | |
| 25 | | |
| 25 | | |
| 27 | | |
| 28 | | |
| 29 | | |
| 30 | | |

(1) When editing messages, enter digits in place of the asterisks.

(2) Messages 22 to 30 are to be defined by the customer.



  Printed in Israel



79-620-0010/A, Issue 1

