

Roadster Correction Codes. Codes are updated every week and are valid as of 5/20/2022.

Correction Code	Name	FRT	Model
00010905	108000 Mile / 108 Month Service	3.2	Roadster
00011005	120000 Mile / 120 Month Service	4	Roadster
00019905	Annual Service	1	Roadster
00020007	Firmware Update - Repair	0.3	Roadster
00020010	Remote – Known Characteristic of Current Firmware	0.25	Roadster
00020020	Remote – Over the Air Update	0.25	Roadster
00030400	Courtesy Inspection	0.1	Roadster
00030500	Perform State Inspection - Texas	0.1	Roadster
00030800	Perform Belgium Safety Inspection	1	Roadster
00030900	Perform Hawaii State Inspection	0.35	Roadster
00031000	Perform New York State Inspection	0.2	Roadster
00031100	Perform Missouri State Inspection	0.25	Roadster
00031300	Vehicle Transfer Inspection	0.1	Roadster
00031500	Perform Nova Scotia Provincial Motor Vehicle Inspection	0.5	Roadster
00031600	Norway EU Inspection Control	0.8	Roadster
00031700	Norway EU Post Inspection Control	0.4	Roadster
00032000	Used Vehicle Inspection	1.2	Roadster
00032100	Used Vehicle Final Quality Check	0.3	Roadster
00032200	Pre-Loaner Vehicle Inspection	1	Roadster
00032700	Perform Germany MOT Pre-Inspection	0.4	Roadster
00032800	Perform Germany MOT Post-Inspection	0.4	Roadster
00039000	Used Vehicle Intake Inspection (UVIS Only)	0	Roadster
00040100	Perform Validation Test Drive	0.3	Roadster
00040900	Virginia Safety Inspection	0.5	Roadster
00041100	NSW e-Safety Inspection (Pink Slip)	0.3	Roadster
00041110	NSW e-Safety Inspection (Blue Slip)	0.7	Roadster
00050007	Roadster (Dismantle)	0	Roadster
00100004	General Diagnosis	0.5	Roadster
00100014	General Diagnosis - No Trouble Found	0.1	Roadster
00100024	Remote Diagnosis	0.3	Roadster
00100034	Repair Plan Confirmation	0.05	Roadster
1027521	Assistance with Refund of Reservation		Roadster
7000005	Mobile Ranger Service (includes travel)	0	Roadster
7000010	TRAVEL	0.25	Roadster
7000022	Fluid Disposal (Remove & Replace)	0.5	Roadster
7000060	Valet Service	0	Roadster
7000070	Tesla (Internal Loaner or Rental)	0	Roadster
7000090	Roadside Assistance - Tow	0	Roadster
7000200	Extended Service Plan - Deductible	1	Roadster
7000400	Shipping/Handling	0	Roadster
7000405	Vehicle Storage	0	Roadster
7000410	Placement of Documentation in Glove Box	0.05	Roadster
7100001	NO LABOR PERFORMED	0	Roadster
7100002	Seasonal Tire Storage	1	Roadster
10001105	Raise Vehicle - 2 Stands	0.4	Roadster
10010007	Tesla Body Repair - Paint Supplies	0	Roadster
10010008	Tesla Body Repair - Miscellaneous Labor	0	Roadster
10010010	Tesla Body Repair - Frame Labor	0	Roadster

10010011	Tesla Body Repair - Structural	0	Roadster
10010501	Chin Spoiler Assembly (Remove & Install)	0.7	Roadster
10010502	Chin Spoiler Assembly (Remove & Replace)	0.8	Roadster
10010601	Bumper Assembly - Front - Remove for Access (Remove & Install)	2.05	Roadster
10010602	Bumper Assembly - Front (Remove & Replace)	2.3	Roadster
10010701	Fender Assembly - Front - LH (Remove & Install)	1.15	Roadster
10010702	Fender Assembly - Front - LH (Remove & Replace)	1.3	Roadster
10010801	Fender Assembly - Front - RH (Remove & Install)	1.15	Roadster
10010802	Fender Assembly - Front - RH	1.25	Roadster
10010902	Bumper Assembly - Rear (Remove & Replace)	1.95	Roadster
10011002	Spoiler - Rear (Remove & Replace)	0.1	Roadster
10012702	Armature Assembly - Bumper - Front - Roadster 1.5 (Remove & Replace)	6.3	Roadster
10012802	Seal - Decking - Rear (Remove & Replace)	0.1	Roadster
10012902	Diffuser Trim - Rear (Remove & Replace)	0.55	Roadster
10013002	Seal - Trunk (Remove & Replace)	0.1	Roadster
10013102	Bumper Assembly - Rear (Remove & Replace)	1.95	Roadster
10013202	Trunk Assembly - Roadster 1.5 (Remove & Replace)	2.4	Roadster
10013402	Armature Assembly - Bumper - Front - Roadster 2.x (Remove & Replace)	6.1	Roadster
10013602	Shim - Trunk - Roadster 2.x (Remove & Replace)	2	Roadster
10013802	Trunk Assembly - Roadster 2.x (Remove & Replace)	2.3	Roadster
10019408	Paint Repair/Refinish	0	Roadster
10020302	Windshield Frame (including new Windshield) - Roadster 1.5 (Remove & Replace)	12.15	Roadster
10020402	Panel - Gutter - Windshield (Remove & Replace)	2.8	Roadster
10020602	Windshield Frame (including new Windshield) - Roadster 2.x (Remove & Replace)	11.95	Roadster
10020702	Bodyside Assembly - LH (Remove & Replace)	17.95	Roadster
10020802	Bodyside Assembly - RH (Remove & Replace)	17.8	Roadster
10021002	Duct - Bodyside - LH (Remove & Replace)	1.5	Roadster
10021102	Duct - Bodyside - RH (Remove & Replace)	1.5	Roadster
10040102	Crash Structure - Assembly - Roadster 1.5 (Remove & Replace)	11	Roadster
10040302	Crash Structure - Assembly - Roadster 2.x (Remove & Replace)	10.8	Roadster
10040401	Raise Vehicle on 2 Post Lift (Remove & Install)	0.6	Roadster
10050102	Condenser - Inlet Duct - Lower - Front - Roadster 1.5 (Remove & Replace)	6.75	Roadster
10050202	Condenser - Inlet Duct - Upper - Front - Roadster 1.5 (Remove & Replace)	6.75	Roadster
10050302	Condenser - Exit Duct - Hood - Front (Remove & Replace)	0.2	Roadster
10050402	Condenser - Exit Duct - Hood - Rear (Remove & Replace)	0.3	Roadster
10050602	Condenser - Inlet Duct - Lower - Front - Roadster 2.x (Remove & Replace)	6.55	Roadster
10050702	Condenser - Inlet Duct - Upper - Front - Roadster 2.x (Remove & Replace)	6.55	Roadster
10091002	Vane - Hood - Front (Remove & Replace)	0.75	Roadster
10091102	Vane - Hood - Rear (Remove & Replace)	0.75	Roadster
10091402	Panel - Hood - Rear (Remove & Replace)	1.5	Roadster
10091602	Hood Assembly (Remove & Replace)	2.4	Roadster
10091702	Spring - Bump stop Hood (Remove & Replace)	0.1	Roadster
10091802	Hinge - Hood - LH (Remove & Replace)	2.35	Roadster
10091902	Hinge - Hood - RH (Remove & Replace)	2.35	Roadster
10092202	Cable Assembly - Hood Release (Remove & Replace)	2.2	Roadster
10092302	Latch - Hood - LH (Remove & Replace)	0.15	Roadster
10092402	Latch - Hood - RH (Remove & Replace)	0.15	Roadster
10092502	Striker - Hood - LH (Remove & Replace)	0.1	Roadster
10092602	Striker - Hood - RH (Remove & Replace)	0.1	Roadster
10100008	Tesla Body Repair - Mechanical Labor	0	Roadster
10108608	Tesla Body Repair - Body Labor	0	Roadster

10108808	Tesla Body Repair - Sublet	0	Roadster
10109008	Structural Body Repair	0	Roadster
10109108	Non-Structural Body Repair	0	Roadster
10109608	Tesla Body Repair - Insurance Pay	0	Roadster
10112102	Latch - Trunk Lid - RH (Remove & Replace)	0.15	Roadster
10112302	Strut - Trunk Lid (Remove & Replace)	0.1	Roadster
10112402	Latch - Trunk Lid - LH (Remove & Replace)	0.15	Roadster
10112502	Rod - Actuator to Rotor (Remove & Replace)	0.45	Roadster
10112602	Rod - Lock to Rotor (Remove & Replace)	0.15	Roadster
10112702	Rod - Emergency Release (Remove & Replace)	0.15	Roadster
10112802	Cable - Trunk Lid Release - LH (Remove & Replace)	0.5	Roadster
10112902	Cable - Trunk Lid Release - RH (Remove & Replace)	0.4	Roadster
10113002	Hinge - Trunk Lid - LH (Remove & Replace)	0.3	Roadster
10113102	Hinge - Trunk Lid - RH (Remove & Replace)	0.35	Roadster
10113202	Actuator - Trunk Lid Release (Remove & Replace)	0.45	Roadster
10113502	Trunk Lid Assembly (Remove & Replace)	0.25	Roadster
10113602	Lock Barrel Assembly - Trunk (Remove & Replace)	0.15	Roadster
10113702	Bracket - Actuator - Trunk Lid (Remove & Replace)	0.5	Roadster
10113802	Rotor - Trunk Lid - Actuator (Remove & Replace)	0.5	Roadster
10150302	Door Assembly - LH - Roadster 2.x (Remove & Replace)	2.8	Roadster
10150402	Door Assembly - RH - Roadster 2.x (Remove & Replace)	2.3	Roadster
10150602	Door Beam Assembly - LH (Remove & Replace)	1.55	Roadster
10150702	Door Assembly - LH - Roadster 1.5 (Remove & Replace)	2.9	Roadster
10150802	Door Assembly - RH - Roadster 1.5 (Remove & Replace)	2.45	Roadster
10150902	Door Beam Assembly - RH (Remove & Replace)	1.7	Roadster
10151002	Hinge - Door - LH (Remove & Replace)	1.1	Roadster
10151102	Hinge - Door - RH (Remove & Replace)	1.05	Roadster
10151202	Bearing - Hinge - Door - LH (Remove & Replace)	1.1	Roadster
10151302	Bearing - Hinge - Door - RH (Remove & Replace)	1.1	Roadster
10151402	Spring Plate - Door Check - LH (Remove & Replace)	0.95	Roadster
10151502	Spring Plate - Door Check - RH (Remove & Replace)	0.9	Roadster
10151602	Bracket - Door Beam Assembly - LH (Remove & Replace)	0.6	Roadster
10151702	Bracket - Door Beam Assembly - RH (Remove & Replace)	0.7	Roadster
10151802	Panel/Seal - Door - Lower - LH (Remove & Replace)	0.2	Roadster
10151902	Panel/Seal - Door - Lower - RH (Remove & Replace)	0.2	Roadster
10170702	Lock Set (Remove & Replace)	0.95	Roadster
10171202	Latch - Door - LH (Remove & Replace)	0.4	Roadster
10171302	Lock Barrel - Emergency Release - LH (Remove & Replace)	0.4	Roadster
10171402	Latch - Door - RH (Remove & Replace)	0.5	Roadster
10171602	Handle - Interior Release - Door - LH (Remove & Replace)	0.4	Roadster
10171702	Handle - Interior Release - Door - RH (Remove & Replace)	0.5	Roadster
10171802	Cable - Emergency Release (Remove & Replace)	0.35	Roadster
10171902	Cable - Interior Release - LH (Remove & Replace)	0.55	Roadster
10172002	Moulding - Door Switch - Ext - LH (Remove & Replace)	0.6	Roadster
10172102	Moulding - Door Switch - Ext - RH (Remove & Replace)	0.7	Roadster
10172202	Bracket - Switch Support - LH (Remove & Replace)	0.65	Roadster
10172302	Bracket - Switch Support - RH (Remove & Replace)	0.7	Roadster
10172402	Switch - Door Release - LH (Remove & Replace)	0.6	Roadster
10172502	Switch - Door Release - RH (Remove & Replace)	0.7	Roadster
10172602	Conrod - Bellcrank - LH (Remove & Replace)	0.55	Roadster
10172702	Conrod - Bellcrank - RH (Remove & Replace)	0.65	Roadster

10172802	Striker - Door - LH (Remove & Replace)	0.1	Roadster
10172902	Striker - Door - RH (Remove & Replace)	0.1	Roadster
10173002	Cable - Interior Release - RH (Remove & Replace)	0.6	Roadster
10182019	Customer Generated Quote - Issue (Transaction) Resolved - Bound		Roadster
10200108	Glass Chip Repair - Windshield	0.4	Roadster
10250601	Panel - Undershield - Front (Remove & Install)	1.05	Roadster
10250602	Panel - Undershield - Front (Remove & Replace)	1.05	Roadster
10250701	Panel - Undershield - Middle (Remove & Install)	0.5	Roadster
10250702	Panel - Undershield - Middle (Remove & Replace)	0.5	Roadster
10250802	Panel - Diffuser Tray - Rear (Remove & Replace)	0.45	Roadster
10250902	Rails - Diffuser Tray Rear - LH (Remove & Replace)	0.2	Roadster
10251002	Rails - Diffuser Tray Rear - RH (Remove & Replace)	0.2	Roadster
10302008	Clean Up Water Ingress	0	Roadster
10310202	Bracket - Towing Eye - Roadster 1.5 (Remove & Replace)	6.5	Roadster
10310302	Bracket - Towing Eye - Roadster 2.x (Remove & Replace)	6.3	Roadster
11010102	Windshield Assembly (Remove & Replace)	2.9	Roadster
11010400	Door Glass - RH - Adjust	0.6	Roadster
11010402	Door Glass - RH (Remove & Replace)	0.55	Roadster
11010500	Door Glass - LH - Adjust	0.4	Roadster
11010502	Door Glass - LH (Remove & Replace)	0.45	Roadster
11011002	Seal - Door/Roof - Front (Remove & Replace)	0.8	Roadster
11011102	Seal - Door/Roof - Rear (Remove & Replace)	0.9	Roadster
11011202	Seal - Door Glass - RH (Remove & Replace)	0.45	Roadster
11011302	Seal - Door Glass - LH (Remove & Replace)	0.35	Roadster
11011402	Window - Rear (Remove & Replace)	0.95	Roadster
11011502	Seal - Glass - A Post - RH (Remove & Replace)	0.75	Roadster
11011602	Seal - Glass - A Post - LH (Remove & Replace)	0.75	Roadster
11012202	Seal - B Post Trim - LH (Remove & Replace)	0.1	Roadster
11012302	Seal - B Post Trim - RH (Remove & Replace)	0.1	Roadster
11020302	Window Guide Rail - Front - LH (Remove & Replace)	0.5	Roadster
11020402	Window Guide Rail - Front - RH (Remove & Replace)	0.6	Roadster
11020502	Window Guide Rail - Rear - LH (Remove & Replace)	0.5	Roadster
11020602	Window Guide Rail - Rear - RH (Remove & Replace)	0.6	Roadster
11020702	Window Motor/Regulator Assembly - LH (Remove & Replace)	0.55	Roadster
11020802	Window Motor/Regulator Assembly - RH (Remove & Replace)	0.65	Roadster
11334002	Gas Strut - Trunk - LH (Remove & Replace)		Roadster
11334102	Gas Strut - Trunk - RH (Remove & Replace)		Roadster
11350010	Latch Integrity Check	0.5	Roadster
11350020	Actuator Integrity Check	0.5	Roadster
11501908	Clean Up Broken Glass	0	Roadster
12010902	Wheel Arch Liner - Upper - Front - LH (Remove & Replace)	0.4	Roadster
12011002	Wheel Arch Liner - Upper - Front - RH (Remove & Replace)	0.4	Roadster
12011102	Wheel Arch Liner - Rear - LH (Remove & Replace)	0.4	Roadster
12011202	Wheel Arch Liner - Rear - RH (Remove & Replace)	0.4	Roadster
12011302	Wheel Arch Liner - Lower - Front - LH (Remove & Replace)	0.4	Roadster
12011402	Wheel Arch Liner - Lower - Front - RH (Remove & Replace)	0.4	Roadster
12011502	Wheel Arch Liner - Forward - Rear - LH (Remove & Replace)	0.4	Roadster
12011602	Wheel Arch Liner - Forward - Rear - RH (Remove & Replace)	0.4	Roadster
12011702	Headlight Access Panel - LH (Remove & Replace)	0.1	Roadster
12011802	Headlight Access Panel - RH (Remove & Replace)	0.1	Roadster
12012002	Mudflap - Trailing Edge - Front - LH (Remove & Replace)	0.35	Roadster

12012102	Mudflap - Trailing Edge - Front - RH (Remove & Replace)	0.35	Roadster
12012202	Mudflap - Leading Edge - Front - LH (Remove & Replace)	0.35	Roadster
12012302	Mudflap - Leading Edge - Front - RH (Remove & Replace)	0.35	Roadster
12012402	Mudflap - Leading Edge - Rear - LH (Remove & Replace)	0.4	Roadster
12012502	Mudflap - Leading Edge - Rear - RH (Remove & Replace)	0.4	Roadster
12020102	Soft Top Assembly (Remove & Replace)	0.1	Roadster
12020402	Cable - Soft Top Tensioning - Front (Remove & Replace)	0.5	Roadster
12020502	Seal - Soft Top - RH (Remove & Replace)	0.5	Roadster
12020602	Seal - Soft Top - LH (Remove & Replace)	0.5	Roadster
12020702	Trim Panel - Soft Top - RH (Remove & Replace)	0.4	Roadster
12020802	Trim Panel - Soft Top - LH (Remove & Replace)	0.4	Roadster
12020902	Support Bow - Soft Top (Remove & Replace)	0.1	Roadster
12021002	Latch Plate - Front - RH (Remove & Replace)	0.5	Roadster
12021102	Latch Plate - Front - LH (Remove & Replace)	0.5	Roadster
12021202	Latch Plate - With Tongue - Rear - RH (Remove & Replace)	0.2	Roadster
12021302	Latch Plate - With Tongue - Rear - LH (Remove & Replace)	0.2	Roadster
12021402	Pocket - Stay to Header Rail - Front (Remove & Replace)	0.3	Roadster
12021502	Pocket - Stay to Roll Hoop Cover (Remove & Replace)	0.3	Roadster
12022002	Cable - Soft Top Tensioning - Rear (Remove & Replace)	0.5	Roadster
12031102	Grill - Bumper - Rear (Remove & Replace)	0.6	Roadster
12031202	Grill - Bumper - Front (Remove & Replace)	2.25	Roadster
12040202	Seal - Hardtop - RH (Remove & Replace)	0.7	Roadster
12040402	Mounting - Hardtop - Bracket - Front (Remove & Replace)	0.2	Roadster
12040602	Seal - Hardtop - Front (Remove & Replace)	0.7	Roadster
12040802	Seal - Hardtop - LH (Remove & Replace)	0.7	Roadster
12040902	Mounting - Hardtop - Bracket - Rear (Remove & Replace)	0.1	Roadster
12041002	Covering - Hardtop - Interior (Remove & Replace)	1.5	Roadster
12041102	Hardtop Assembly - Renew (Remove & Replace)	0.3	Roadster
12041202	Trim Panel - Hardtop - Front (Remove & Replace)	0.1	Roadster
12042001	Hardtop Assembly (Remove & Install)	0.3	Roadster
12050502	Tesla Badge - Front (Remove & Replace)	0.75	Roadster
12050602	Vehicle Configuration Badge (Remove & Replace)	0.5	Roadster
12050606	Vehicle Configuration Badge (Retrofit)	0.5	Roadster
12050607	Vehicle Configuration Badge (Remove)	0.05	Roadster
12052007	Paint Protection Film - Remove	0.5	Roadster
12070206	Install Tesla License Plate Frame	0.1	Roadster
12071001	License Plates (Install Onto Existing Brackets)	0.05	Roadster
12090102	Door Mirror Assembly - RH (Remove & Replace)	0	Roadster
12090202	Door Mirror Assembly - LH (Remove & Replace)	0	Roadster
12090302	Glass - Door Mirror - RH (Remove & Replace)	0.15	Roadster
12090402	Glass - Door Mirror - LH (Remove & Replace)	0.15	Roadster
12090502	Arm - Door Mirror - RH (Remove & Replace)	0.5	Roadster
12090602	Arm - Door Mirror - LH (Remove & Replace)	0.4	Roadster
13010102	Rail Assembly - Driver Seat (Remove & Replace)	0.4	Roadster
13010202	Rail Assembly - Passenger Seat - Roadster 1.5 (Remove & Replace)	1.25	Roadster
13010302	Rail Assembly - Passenger Seat - Roadster 2.x (Remove & Replace)	1.2	Roadster
13020102	Seat Assembly - Driver (Remove & Replace)	0.35	Roadster
13020202	Seat Assembly - Passengers - Roadster 1.5 (Remove & Replace)	1.15	Roadster
13020302	Lumbar Support - Inflatable - Driver (Remove & Replace)	0.4	Roadster
13020402	Valve - Lumbar Support - Driver (Remove & Replace)	0.15	Roadster
13020502	Lumbar Support - Inflatable - Passenger - Roadster 1.5 (Remove & Replace)	2.2	Roadster

13020602	Valve - Lumbar Support - Passenger (Remove & Replace)	0.1	Roadster
13020702	Heater Pads - Driver Seat (Remove & Replace)	0.1	Roadster
13021002	Seat Assembly - Passengers - Roadster 2.x (Remove & Replace)	1.3	Roadster
13021202	Lumbar Support - Inflatable - Passenger - Roadster 2.x (Remove & Replace)	2.15	Roadster
13021402	Heater Pads - Passenger Seat - Roadster 2.x (Remove & Replace)	2.05	Roadster
13270202	Seat Belt Reel Assembly - Driver (Remove & Replace)	0.85	Roadster
13270302	Seat Belt Buckle - Driver (Remove & Replace)	0.35	Roadster
13270402	Cover - D Loop (Remove & Replace)	0.1	Roadster
13270502	Seat Belt Reel Assembly - Passenger (Remove & Replace)	1.6	Roadster
13270602	Seat Belt Buckle - Passenger - Roadster 1.5 (Remove & Replace)	1	Roadster
13270702	Seat Belt Buckle - Passenger - Roadster 2.x (Remove & Replace)	1.15	Roadster
14010102	Pedal Box Assembly (Remove & Replace)	4	Roadster
14010302	Switch - Brake Light (Remove & Replace)	0.1	Roadster
14010402	Shaft - Brake Pedal (Remove & Replace)	4.5	Roadster
14010602	Brake Pedal (Remove & Replace)	4.5	Roadster
14010802	Bushings - Pedal Box (Remove & Replace)	4.6	Roadster
14011102	Accelerator Assembly (Remove & Replace)	1.05	Roadster
14011302	Spring - Pedal Return (Remove & Replace)	0.1	Roadster
14011402	Pedal Pad - Brake (Remove & Replace)	0.1	Roadster
14011502	Pedal Pad - Throttle (Remove & Replace)	0.1	Roadster
14053102	Trim - Dash Panel - Upper (Remove & Replace)	1.15	Roadster
14053302	Shroud - Steering Column - Lower (Remove & Replace)	0.2	Roadster
14053402	Dash Frame (Remove & Replace)	1.75	Roadster
14053502	Stowage Shelf - Dash Panel - Upper (Remove & Replace)	1.05	Roadster
14053602	Trim - Face Level - Vents/Radio (Remove & Replace)	0.3	Roadster
14053702	Shroud - Upper - Steering Column (Remove & Replace)	0.1	Roadster
14053802	Glove Box - Roadster 2.x (Remove & Replace)	0.2	Roadster
14100102	Trim - Instrument Pack (Remove & Replace)	0.2	Roadster
15050102	Mounting Block - Rear View Mirror (Remove & Replace)	0.2	Roadster
15050202	Mirror - Rear View (Remove & Replace)	0.1	Roadster
15050302	Sun Visor - Passenger (Remove & Replace)	0.1	Roadster
15050402	Sun Visor - Pivot Bracket (Remove & Replace)	0.1	Roadster
15050602	Sun Visor - Driver (Remove & Replace)	0.1	Roadster
15111002	Finisher - Liftgate - Rear Window - Upper (Remove & Replace)	0.1	Roadster
15111102	Trim - 'B' Post - LH (Remove & Replace)	0.95	Roadster
15111202	Trim - B Post - RH (Remove & Replace)	1.55	Roadster
15111302	Trim - Liftgate - Lower (Remove & Replace)	0.2	Roadster
15111602	Tray - Owners Manual - Roadster 1.5 (Remove & Replace)	1.35	Roadster
15111702	Tray - Owners Manual - Roadster 2.x (Remove & Replace)	1.3	Roadster
15130101	Panel - Door Trim - Front - RH (Remove & Install)	0.35	Roadster
15130201	Panel - Door Trim - Front - LH (Remove & Install)	0.25	Roadster
15130202	Panel - Door Trim - Front - LH (Remove & Replace)	0.5	Roadster
15130302	Panel - Door Trim - Front - RH (Remove & Replace)	0.55	Roadster
15130402	Bezel - Door Interior Release - LH (Remove & Replace)	0.4	Roadster
15130502	Bezel - Door Interior Release - RH (Remove & Replace)	0.4	Roadster
15130802	Panel - Door Insert - LH (Remove & Replace)	0.15	Roadster
15130902	Panel - Door Insert - RH (Remove & Replace)	0.15	Roadster
15131002	Pull Handle - Door - RH (Remove & Replace)	0.1	Roadster
15131102	Pull Handle - Door - LH (Remove & Replace)	0.1	Roadster
15131202	Bezel - Door Switch Pack - Driver (Remove & Replace)	0.3	Roadster
15131302	Bezel - Door Switch Pack - Passenger (Remove & Replace)	0.4	Roadster

15180102	Trim - Sill Panel - Front - LH (Remove & Replace)		Roadster
15180202	Trim - Sill Panel - RH (Remove & Replace)	0.2	Roadster
15180302	Kick Plate - Sill - LH (Remove & Replace)	0.05	Roadster
15180402	Kick Plate - Sill - RH (Remove & Replace)	0.05	Roadster
15180902	Trim - Dash - LH (Remove & Replace)	0.45	Roadster
15181002	Trim - Dash - RH (Remove & Replace)	0.25	Roadster
15181402	Trim - Fuse Box Lid (Remove & Replace)	0.1	Roadster
15181502	Trim - Touch Screen (Remove & Replace)	0.2	Roadster
15181602	Storage Bin - Lower (Remove & Replace)	0.1	Roadster
15190802	Trim - Center Console - Lower - Roadster 1.5 (Remove & Replace)	0.95	Roadster
15190902	Trim - Center Console - Roadster 1.5 (Remove & Replace)	1	Roadster
15191002	Trim - Power Socket - Roadster 1.5 (Remove & Replace)	0.85	Roadster
15191102	Trim - Footwell Divider - LH - Roadster 1.5 (Remove & Replace)	0.85	Roadster
15191202	Trim - Footwell Divider - RH - Roadster 1.5 (Remove & Replace)	0.85	Roadster
15191302	Bracket - Mounting - Foot Divider - Lower - Roadster 1.5 (Remove & Replace)	1.3	Roadster
15191402	Bracket - Mounting - Foot Divider - Upper (Remove & Replace)	1.2	Roadster
15191502	Trim - Gearshift Insert - Roadster 1.5 (Remove & Replace)	0.85	Roadster
15191602	Cover - Parking Brake (Remove & Replace)	0.1	Roadster
15191702	Gaiter - Parking Brake (Remove & Replace)	0.1	Roadster
15191802	Cup Holder - Roadster 1.5 (Remove & Replace)	0.75	Roadster
15191902	Trim - Center Console - Rear - Roadster 2.x (Remove & Replace)	0.1	Roadster
15192102	Trim - Center Console - Lower - Roadster 2.x (Remove & Replace)	0.45	Roadster
15192302	Trim - Center Console - Roadster 2.x (Remove & Replace)	0.55	Roadster
15192502	Trim - Power Socket - Roadster 2.x (Remove & Replace)	0.35	Roadster
15192702	Trim - Footwell Divider - LH - Roadster 2.x (Remove & Replace)	0.4	Roadster
15192902	Trim - Footwell Divider - RH - Roadster 2.x (Remove & Replace)	0.4	Roadster
15193102	Bracket - Mounting - Foot Divider - Lower - Roadster 2.x (Remove & Replace)	0.8	Roadster
15193302	Cup Holder - Roadster 2.x (Remove & Replace)	0.25	Roadster
15240302	Floor Panel - Center (Remove & Replace)	0.1	Roadster
15240402	Floor Panel - RH (Remove & Replace)	0.1	Roadster
15240502	Floor Panel - LH (Remove & Replace)	0.1	Roadster
15300102	Carpet - Footwell - LH - Roadster 1.5 (Remove & Replace)	1.05	Roadster
15300202	Carpet - Footwell - RH - Roadster 1.5 (Remove & Replace)	1.25	Roadster
15300502	Carpet - Bulkhead (Remove & Replace)	2.3	Roadster
15300602	Carpet - Sill - LH (Remove & Replace)	0.75	Roadster
15300702	Carpet - Sill - RH - Roadster 1.5 (Remove & Replace)	1.5	Roadster
15300802	Finisher - Carpet (Remove & Replace)	0.1	Roadster
15300902	Finisher - Carpet - Sill (Remove & Replace)	0.1	Roadster
15301002	Floor Mat - LH (Remove & Replace)	0	Roadster
15301102	Floor Mat - RH (Remove & Replace)	0.25	Roadster
15301302	Carpet - Footwell - RH - Roadster 2.x (Remove & Replace)	1.25	Roadster
15301502	Carpet - Footwell - RH - Roadster 2.x (RHD) (Remove & Replace)	0.35	Roadster
15301702	Carpet - Sill - RH - Roadster 2.x (Remove & Replace)	1.5	Roadster
15301902	Carpet - Sill - RH - Roadster 2.x (RHD) (Remove & Replace)	0.65	Roadster
16010002	Vehicle Electrical Isolation Procedure (Remove & Replace)	0.4	Roadster
16010102	Battery Assembly - Roadster 1.5/3.0 (Remove & Replace)	4.6	Roadster
16010202	Battery Assembly - Roadster 2.x/3.0 (Remove & Replace)	7.7	Roadster
16010500	Battery Capacity Test	1.5	Roadster
16011002	BATTERY - AUXILIARY - 12V - Roadster 2.x (Remove & Replace)	1.1	Roadster
16020103	Front Cover	2.2	Roadster
16020203	Cover - Battery Monitoring Board (BMB)	1.35	Roadster

16020303	Gasket - Cover - Battery Monitoring Board (BMB)	1.65	Roadster
16020403	Enclosure Leak Test	1	Roadster
16020503	Front Cover Seal	3.1	Roadster
16020603	Enclosure - Excess Sealant Removal	0.6	Roadster
16020703	Enclosure - Apply Additional Sealant	1	Roadster
16030103	Reducing Potential Difference Across the Battery (Front Cover Removed)	0.3	Roadster
16030203	Sheet Assembly - Initial Sheet	4.1	Roadster
16030303	Battery Monitoring Board (BMB)	1.5	Roadster
16030403	Auxiliary Power Supply (APS) - Battery	5.25	Roadster
16030503	Battery Safety Monitor (BSM)	4.3	Roadster
16030603	Main Wiring Harness	14.5	Roadster
16030703	Logic Connector	4.15	Roadster
16030803	Positive / B+ Cable to Power Electronics Module (PEM)	2.85	Roadster
16030903	Negative / B- Cable to Power Electronics Module (PEM)	3.15	Roadster
16031003	Busbar - Contactor to Power Electronics Module (PEM) Negative Cable	2.55	Roadster
16031103	HVAC Cable and Adapter Block Assembly	2.7	Roadster
16031203	Gasket - Power Electronics Module (PEM) Cable Adapter Block	2.7	Roadster
16031303	Cable Assembly - Auxiliary Power Supply - Output	2.8	Roadster
16031403	Cable - HVAC Fuse (50A) to Contactor	2.6	Roadster
16031503	Cable - Sense Fuse to Contactor	2.55	Roadster
16031603	Cable - APS Fuse to Contactor	2.55	Roadster
16031703	Cable - Auxiliary Power Supply to Ground Stud	4.55	Roadster
16031803	Immersion Sensor	14.35	Roadster
16031903	Contactor - Positive	4.45	Roadster
16032003	Contactor - Negative	4.2	Roadster
16032103	Service Disconnect Receptacle	4.55	Roadster
16032203	Shunt	4.5	Roadster
16032303	Pre-charge Resistor	4.2	Roadster
16032403	Pre-charge Relay	4.2	Roadster
16032503	E-Connector - Initial	2.8	Roadster
16032603	E-Connector Insulator - Initial	2.2	Roadster
16032703	Busbar - Sheet to Shunt - Negative	2.75	Roadster
16032803	Busbar - Sheet to Contactor - Positive	2.55	Roadster
16032903	Busbar - Shunt to Service Disconnect Receptacle	4.15	Roadster
16033003	Busbar - Service Disconnect Receptacle to Contactor	2.3	Roadster
16033103	3 Pole Fuse Holder	2.45	Roadster
16033203	2 Pole Fuse Holder	4.25	Roadster
16033303	Fuses - 3 Pole Fuse Holder	4.2	Roadster
16033403	Fuses - 2 Pole Fuse Holder	2.3	Roadster
16033503	HVAC Fuse Holder	2.65	Roadster
16033603	HVAC Fuse (50A)	2.55	Roadster
16033703	Boot Seal - Sheet - Initial Sheet	4.15	Roadster
16033903	Fuse - Sheet - Initial Sheet	4.25	Roadster
16034003	Connection Check	0.2	Roadster
16035003	Sheet Assembly - Each Additional Sheet	0.7	Roadster
16035103	Fuse - Sheet - Each Additional Sheet	0.9	Roadster
16035203	Boot Seal - Sheet - Each Additional Sheet	0.8	Roadster
16035503	E-Connector - Each Additional	0.3	Roadster
16035603	E-Connector Insulator - Each Additional	0.1	Roadster
16100102	Battery - Auxiliary - 12V (Remove & Replace)	1.1	Roadster
17010102	Harness - Mid (Remove & Replace)	18.8	Roadster



17010108	Harness - Mid - Repair	0.5	Roadster
17010202	Harness - Front - Roadster 1.5 (Remove & Replace)	15.75	Roadster
17010208	Harness - Front - Repair	0.5	Roadster
17010302	Harness - Front - Roadster 2.x (Remove & Replace)	17.15	Roadster
17010702	Harness - Driver Door (Remove & Replace)	0.5	Roadster
17010708	Harness - Driver Door - Repair	0.5	Roadster
17010802	Harness - Wheel Speed Sensor - Front - LH (Remove & Replace)	0.3	Roadster
17010902	Harness - Wheel Speed Sensor - Front - RH (Remove & Replace)	0.3	Roadster
17011002	Harness - Wheel Speed Sensor - Rear - LH (Remove & Replace)	0.4	Roadster
17011102	Harness - Wheel Speed Sensor - Rear - RH (Remove & Replace)	0.2	Roadster
17011202	Battery - 12V (Remove & Replace)	3.85	Roadster
17011208	Harness - Rear - Repair	0.5	Roadster
17011302	Harness - Rear - Roadster 2.x (Remove & Replace)	4.3	Roadster
17011608	Harness - Passenger Door - Repair	0.5	Roadster
17011702	Harness - Center Console - Roadster 1.5 (Remove & Replace)	0.9	Roadster
17011708	Harness - Center Console - Repair	0.5	Roadster
17011802	Harness - Aux Power Supply (Remove & Replace)	19.55	Roadster
17011808	Harness - Aux Power Supply - Repair	0.5	Roadster
17011902	Harness - Front - Negative - Roadster 1.5 (Remove & Replace)	3.2	Roadster
17011908	Harness - Front - Negative - Repair	0.5	Roadster
17012002	Harness - TCM to Transmission (Remove & Replace)	0.85	Roadster
17012008	Harness - TCM to Transmission - Repair	0.5	Roadster
17012102	Cable - High Voltage - Battery to PEM - Roadster 1.5 (Remove & Replace)	11.65	Roadster
17012202	Cable - High Voltage - PEM to Motor - Roadster 1.5 (Remove & Replace)	2.6	Roadster
17012302	Cable - High Voltage - Charge Port to PEM (Remove & Replace)	1.25	Roadster
17012402	Cable - High Voltage - Battery to HVAC (Remove & Replace)	18.8	Roadster
17013002	Harness - Center Console - Roadster 2.x (Remove & Replace)	0.4	Roadster
17013202	Harness - Front - Negative - Roadster 2.x (Remove & Replace)	2.9	Roadster
17013402	Cable - High Voltage - Battery to PEM - Roadster 2.x (Remove & Replace)	13.45	Roadster
17013502	Relay in Fuse Box - Any (Remove & Replace)	0.1	Roadster
17013602	Cable - High Voltage - PEM to Motor - Roadster 2.x (Remove & Replace)	3.7	Roadster
17015002	Connector - PEM APS (Remove & Replace)	0.35	Roadster
17030102	Horn (Remove & Replace)	0.25	Roadster
17030702	Module - Radiator Fan Control (Remove & Replace)	0.1	Roadster
17030802	Module - HomeLink® Transmitter (Remove & Replace)	1.05	Roadster
17030902	Receiver - Remote Keyless Entry (RKE) / Immobiliser - Roadster 1.5 (Remove & Replace)	1.05	Roadster
17031005	Transmitter - Remote Keyless Entry (RKE) - Battery	0.1	Roadster
17031102	Transmitter - Remote Keyless Entry (RKE) - Replace / Reprogram (Remove & Replace)	0.2	Roadster
17031202	Switchpack (Remove & Replace)	1.05	Roadster
17031302	Fuse in Fuse Box - Any (Remove & Replace)	0.1	Roadster
17031402	Module - HVAC - 12V Controller - Roadster 1.5 (Remove & Replace)	1.05	Roadster
17031502	Maxi Fuse - Under Dash (Remove & Replace)	0.1	Roadster
17031602	Switch - Inertia (Remove & Replace)	0.6	Roadster
17031702	Module - Wiper Delay (Remove & Replace)	0.1	Roadster
17031802	Relay - Horn (Remove & Replace)	0.1	Roadster
17032002	Receiver - Remote Keyless Entry (RKE) / Immobiliser - Roadster 2.x (Remove & Replace)	1.4	Roadster
17032202	Module - HVAC - 12V Controller - Roadster 2.x (Remove & Replace)	0.55	Roadster
17040102	Module - Vehicle Management System (VMS) - Roadster 1.5 (Remove & Replace)	0.1	Roadster
17040202	Module - GPS Receiver (Remove & Replace)	0.55	Roadster
17040402	Module - Vehicle Management System (VMS) - Roadster 2.x (Remove & Replace)	0.15	Roadster
17040602	Module - Transmission Control - Roadster 1.5 (Remove & Replace)	0.45	Roadster

17040702	Module - Transmission Control - Roadster 2.x (Remove & Replace)	3.2	Roadster
17040802	Antenna - GSM (Remove & Replace)	2	Roadster
17050202	Column Switch - High Beam/Turn (Remove & Replace)	0.25	Roadster
17050302	Column Switch - Wash/Wipe (Remove & Replace)	0.25	Roadster
17050602	Power Socket - Roadster 1.5 (Remove & Replace)	0.85	Roadster
17050702	Switch - Starter (Remove & Replace)	0.55	Roadster
17050802	Switch - Hazard Warning - Roadster 1.5 (Remove & Replace)	0.75	Roadster
17052102	Switch - Exterior Lighting - Roadster 1.5 (Remove & Replace)	0.15	Roadster
17052202	Switch - Trunk Release - Roadster 1.5 (Remove & Replace)	0.15	Roadster
17052302	Switch - Instrument Panel - Dimmer - Roadster 1.5 (Remove & Replace)	0.15	Roadster
17052402	LED - Alarm/CDL - Roadster 1.5 (Remove & Replace)	0.7	Roadster
17052502	Switch - Central Locking (Remove & Replace)	0.35	Roadster
17052602	Switch - Window Lift - Passenger (Remove & Replace)	0.45	Roadster
17052702	Switch - Trip/Odometer (Remove & Replace)	0.3	Roadster
17052802	Switch - Traction Control - Roadster 1.5 (Remove & Replace)	0.75	Roadster
17052902	Switch - Window Lift - Driver (Remove & Replace)	0.35	Roadster
17053002	Switch - Seat Heater - Roadster 2.x (Remove & Replace)	0.1	Roadster
17053102	Switch - Rear Fog Lamp - Roadster 2.x (Remove & Replace)	0.1	Roadster
17053202	Switch - Glove Box - Roadster 2.x (Remove & Replace)	0.45	Roadster
17053402	Power Socket - Roadster 2.x (Remove & Replace)	0.35	Roadster
17053602	Switch - Hazard Warning - Roadster 2.x (Remove & Replace)	0.25	Roadster
17053802	Switch - Exterior Lighting - Roadster 2.x (Remove & Replace)	0.1	Roadster
17054002	Switch - Trunk Release - Roadster 2.x (Remove & Replace)	0.1	Roadster
17054202	Switch - Instrument Panel - Dimmer - Roadster 2.x (Remove & Replace)	0.1	Roadster
17054402	Switch - Traction Control - Roadster 2.x (Remove & Replace)	0.1	Roadster
17063000	Check/Reset Fault Code & Print Diagnostic Report	0.25	Roadster
17063102	Driver Air bag (Remove & Replace)	0.25	Roadster
17063202	Clockspring - Air bag (Remove & Replace)	0.4	Roadster
17063302	Module - Air bag (Remove & Replace)	1.1	Roadster
17063402	Passenger Air bag (Remove & Replace)	1.3	Roadster
17063502	Cover - Passenger Air bag (Remove & Replace)	1	Roadster
17063602	Cover Clips - Passenger Air bag (Remove & Replace)	0.2	Roadster
17070202	Vehicle - Touch Screen - Roadster 1.5 (Remove & Replace)	0.1	Roadster
17070302	Instrument Pack (Remove & Replace)	0.35	Roadster
17070602	Vehicle - Touch Screen - Roadster 2.x (Remove & Replace)	0.35	Roadster
17100010	Harness Connector - Repair (Does Not Include Access Labor)	0.5	Roadster
17105006	Wire - Electrical Harness (Does Not Include Access Labor) (Overlay)	0	Roadster
17105008	Wire - Electrical Harness (Does Not Include Access Labor) (Repair)	0	Roadster
17105102	Connector Housing - Electrical Harness (Does Not Include Access Labor) (Remove & Replace)	0.2	Roadster
17105208	Connector Terminal - Electrical Harness (Does Not Include Access Labor) (Repair)	0	Roadster
17105306	Coaxial Cable - Electrical Harness (Does Not Include Access Labor) (Overlay)	0	Roadster
17108100	Low Voltage Circuit Integrity Check	1	Roadster
17110402	Tail Light Assembly - LH (Remove & Replace)	0.15	Roadster
17110502	Tail Light Assembly - RH (Remove & Replace)	0.1	Roadster
17110602	Lamp - Brake - High Mounted (Remove & Replace)	0.1	Roadster
17111002	Light - License Plate (Remove & Replace)	0.1	Roadster
17113002	Lamp - Side Repeater - Front - LH (Remove & Replace)	0.6	Roadster
17113102	Lamp - Reflex - Rear - LH (Remove & Replace)	0.6	Roadster
17113202	Lamp - Reflex - Rear - RH (Remove & Replace)	0.6	Roadster
17113302	Lamp - Side Repeater - Front - RH (Remove & Replace)	0.55	Roadster
17113402	Cover - Side Marker - Rear - LH (Remove & Replace)	0.6	Roadster

17113502	Cover - Side Marker - Rear - RH (Remove & Replace)	0.6	Roadster
17130000	Headlight - Adjust	0.3	Roadster
17130802	Headlight Assembly - LH (Remove & Replace)	1.1	Roadster
17130902	Headlight Assembly - RH (Remove & Replace)	1.1	Roadster
17131002	Shim - Headlight (Remove & Replace)	1.05	Roadster
17131102	Bulb - Low Beam (Remove & Replace)	0.15	Roadster
17131105	Bulb - Low Beam	0.15	Roadster
17131202	Bulb - High Beam (Remove & Replace)	0.15	Roadster
17131205	Bulb - High Beam	0.15	Roadster
17131302	Bulb - Side Light (Remove & Replace)	0.95	Roadster
17131305	Bulb - Side Light	0.95	Roadster
17131402	Bulb - Turn Signal (Remove & Replace)	0.15	Roadster
17131405	Bulb - Turn Signal	0.15	Roadster
17170102	Light - Interior - Rear Bulkhead (Remove & Replace)	0.1	Roadster
17170202	Bulb - 5w Interior (Remove & Replace)	0.1	Roadster
17170205	Bulb - 5w Interior	0.1	Roadster
17170302	Light - Ambient - Center Console (Remove & Replace)	0.1	Roadster
17170402	Light - Trunk Assembly (Remove & Replace)	0.1	Roadster
17210102	Wiper Motor Assembly - Roadster 1.5 (Remove & Replace)	1.2	Roadster
17210202	Wiper Motor Assembly - Roadster 2.x (Remove & Replace)	1	Roadster
17210302	Wiper Arm (Remove & Replace)	0.1	Roadster
17210402	Wiper Blade (Remove & Replace)	0.1	Roadster
17210405	Wiper Blade	0.1	Roadster
17210902	Cover - Wiper Motor (Remove & Replace)	0.1	Roadster
17211002	Pump - Windshield Washer Reservoir (Remove & Replace)	0.3	Roadster
17211102	Reservoir - Windshield Washer (Remove & Replace)	0.25	Roadster
17211202	Cap - Reservoir (Remove & Replace)	0.1	Roadster
17211302	Nozzle - Windshield Washer Jet (Remove & Replace)	0.2	Roadster
17211402	Non Return Valve (Remove & Replace)	0.15	Roadster
17211502	Pipe - Washer - Reservoir to Valve (Remove & Replace)	0.55	Roadster
17211602	Pipe - Washer - Valve to Nozzle (Remove & Replace)	0.15	Roadster
17270702	Module - iPod Interface (Remove & Replace)	0.65	Roadster
17270802	Amplifier - Audio System - Roadster 1.5 (Remove & Replace)	0.1	Roadster
17270902	Speaker - Door - LH/RH (Remove & Replace)	0.35	Roadster
17271002	Speaker - Rear - LH/RH (Remove & Replace)	0.1	Roadster
17271102	Subwoofer Speaker (Remove & Replace)	0.7	Roadster
17271302	Support Ring - Speaker - Rear - LH/RH (Remove & Replace)	0.1	Roadster
17271402	Harness - Amplifier - Roadster 1.5 (Remove & Replace)	0.15	Roadster
17271502	Grille - Speaker - Any (Remove & Replace)	0.1	Roadster
17271602	Head Unit - Audio System (Remove & Replace)	0.1	Roadster
17271702	Support Ring - Speaker - Dash - LH/RH (Remove & Replace)	0.1	Roadster
17271802	Module - SDAR Tuner (Remove & Replace)	0.65	Roadster
17271902	Module - SDAR Interface (Remove & Replace)	0.65	Roadster
17272002	Antenna - SDAR (Remove & Replace)	1.4	Roadster
17272102	Subwoofer Assembly - Roadster 1.5 (Remove & Replace)	5.95	Roadster
17272302	Amplifier - Audio System - Roadster 2.x (Remove & Replace)	0.1	Roadster
17272502	Amplifier - Audio System - Roadster 2.x (RHD) (Remove & Replace)	1.35	Roadster
17272702	Harness - Amplifier - Roadster 2.x (Remove & Replace)	0.15	Roadster
17272902	Harness - Amplifier - Roadster 2.x (RHD) (Remove & Replace)	1.35	Roadster
17273002	Camera - Rear View (Remove & Replace)	2.5	Roadster
17273102	Subwoofer Assembly - Roadster 2.x (Remove & Replace)	7.7	Roadster

17273506	Head Unit - Audio System - Roadster 2.5 (Retrofit)	1.15	Roadster
17280102	GPS Antenna - Navigation System (Remove & Replace)	1.2	Roadster
17290102	Module - Bluetooth® - Roadster 1.5 (Remove & Replace)	0.65	Roadster
17290202	Microphone - Bluetooth® (Remove & Replace)	1.2	Roadster
17290402	Module - Bluetooth® - Roadster 2.x (Remove & Replace)	1	Roadster
17330102	Navtrak Installation (EU Only) (Remove & Replace)	2	Roadster
17330602	Switch - Telescopic Front/Rear (Remove & Replace)	0.1	Roadster
17500805	Windshield Washer Fluid - Top Off	0	Roadster
18010108	A/C Odor Removal	0.7	Roadster
18010202	Actuator - Heater/AC Flaps - Roadster 1.5 (Remove & Replace)	3.1	Roadster
18010302	HVAC Assembly - Roadster 1.5 (Remove & Replace)	3.2	Roadster
18010402	Module - HVAC - High Voltage Controller - Roadster 1.5 (Remove & Replace)	0.8	Roadster
18010502	Sensor - Ambient Air Temperature (Remove & Replace)	2.65	Roadster
18010702	Actuator - Heater/AC Flaps - Roadster 2.x (Remove & Replace)	2.75	Roadster
18010902	HVAC Assembly - Roadster 2.x (Remove & Replace)	2.85	Roadster
18011102	Module - HVAC - High Voltage Controller - Roadster 2.x (Remove & Replace)	0.45	Roadster
18011202	Module - HVAC - High Voltage Controller - Roadster 2.x (RHD) (Remove & Replace)	0.45	Roadster
18031702	Pipe - High Pressure - Heat Exchanger - Roadster 1.5 (Remove & Replace)	19.7	Roadster
18031802	Pipe - Low Pressure Line - Roadster 1.5 (Remove & Replace)	21.35	Roadster
18031902	Pipe - Manifold to A/C Compressor (Remove & Replace)	2.55	Roadster
18032002	Pipe - High Pressure - Compressor to Condenser - Roadster 1.5 (Remove & Replace)	2.55	Roadster
18032202	Pipe - Low Pressure - Charge Port - Roadster 1.5 (Remove & Replace)	2.15	Roadster
18032302	Pipe - Low Pressure - Manifold - Roadster 1.5 (Remove & Replace)	2.6	Roadster
18032402	Pipe - HVAC - Receiver/Drier to Solenoid Valve - Rear - Roadster 1.5 (Remove & Replace)	21.35	Roadster
18032502	Pipe - Evaporator - Solenoid Valve to TXV - Roadster 1.5 (Remove & Replace)	2.6	Roadster
18032602	Receiver Drier - Roadster 1.5 (Remove & Replace)	2.3	Roadster
18032702	Compressor - Roadster 1.5 (Remove & Replace)	3.35	Roadster
18032802	Solenoid Valve - Heat Exchanger (Remove & Replace)	0.45	Roadster
18032902	Pressure Transducer - Roadster 1.5 (Remove & Replace)	1.75	Roadster
18033002	Fan - Condenser (Remove & Replace)	2.15	Roadster
18033102	Condenser (Remove & Replace)	2.25	Roadster
18033202	Solenoid Valve - Evaporator - Roadster 1.5 (Remove & Replace)	2.55	Roadster
18033302	A/C Refrigerant Recovery & Recharge (Add Refrigerant Part if Needed) (Remove & Replace)	1.4	Roadster
18033305	A/C Refrigerant Recovery & Recharge	1.4	Roadster
18033402	TXV Valve - Chiller (Remove & Replace)	2	Roadster
18033502	Pipe - High Pressure - Condenser to Receiver Drier - Roadster 1.5 (Remove & Replace)	2.3	Roadster
18033702	Pipe - High Pressure - Heat Exchanger - Roadster 2.x (Remove & Replace)	19.9	Roadster
18033902	Pipe - Low Pressure Line - Roadster 2.x (Remove & Replace)	21.15	Roadster
18034102	Pipe - Low Pressure - Manifold to Compressor - Roadster 2.x (Remove & Replace)	5.8	Roadster
18034302	Pipe - High Pressure - Compressor to Condenser - Roadster 2.x (Remove & Replace)	3	Roadster
18034502	Pipe - Low Pressure - Manifold - Roadster 2.x (Remove & Replace)	3.65	Roadster
18034702	Pipe - HVAC - Receiver/Drier to Solenoid Valve - Rear - Roadster 2.x (Remove & Replace)	20.15	Roadster
18034902	Pipe - Evaporator - Solenoid Valve to TXV - Roadster 2.x (Remove & Replace)	2.3	Roadster
18035102	Receiver Drier - Roadster 2.x (Remove & Replace)	2.1	Roadster
18035302	Compressor - Roadster 2.x (Remove & Replace)	3.55	Roadster
18035502	Solenoid Valve - Evaporator - Roadster 2.x (Remove & Replace)	2.45	Roadster
18035702	Pipe - High Pressure - Condenser to Receiver Drier - Roadster 2.x (Remove & Replace)	2.15	Roadster
18035902	Pressure Transducer - Roadster 2.x (Remove & Replace)	2.05	Roadster
18038927	AC Pipe Insulation Rework	0.15	Roadster
18070802	Blower Motor - HVAC - Roadster 1.5 (Remove & Replace)	3.25	Roadster
18071002	Blower Motor - HVAC - Roadster 2.x (Remove & Replace)	2.75	Roadster

18090502	Control Panel Assembly - HVAC - Roadster 1.5 (Remove & Replace)	0.9	Roadster
18090702	Control Panel Assembly - HVAC - Roadster 2.x (Remove & Replace)	0.4	Roadster
18120102	Air Distribution Unit - Roadster 1.5 (Remove & Replace)	3.2	Roadster
18120202	Actuator - Air Distribution - Roadster 1.5 (Remove & Replace)	1.3	Roadster
18120302	Hose - Inlet - Roadster 1.5 (Remove & Replace)	0.7	Roadster
18120502	Air Distribution Unit - Roadster 2.x (Remove & Replace)	4.15	Roadster
18120702	Actuator - Air Distribution - Roadster 2.x (Remove & Replace)	1.1	Roadster
18120902	Hose - Inlet - Roadster 2.x (Remove & Replace)	0.5	Roadster
18130102	Duct - Face Level Vent - Any (Remove & Replace)	1.5	Roadster
18130202	Vent - Face Level (Remove & Replace)	0.2	Roadster
18140102	Fresh Air Unit - Roadster 1.5 (Remove & Replace)	3.45	Roadster
18140202	Recirc Plenum Assembly - Open - LH - Roadster 1.5 (Remove & Replace)	3.25	Roadster
18140302	Actuator - Fresh Air Flap - Roadster 1.5 (Remove & Replace)	3.5	Roadster
18140502	Recirc Plenum Assembly - Open - RH - Roadster 1.5 (Remove & Replace)	3.5	Roadster
18140702	Fresh Air Unit - Roadster 2.x (Remove & Replace)	3.1	Roadster
18140902	Recirc Plenum Assembly - Open - LH - Roadster 2.x (Remove & Replace)	2.9	Roadster
18141102	Actuator - Fresh Air Flap - Roadster 2.x (Remove & Replace)	3.15	Roadster
18141302	Recirc Plenum Assembly - Open - RH - Roadster 2.x (Remove & Replace)	3.15	Roadster
18300200	Coolant System - Check and Fill	0.1	Roadster
19010202	Labels - Any (Remove & Replace)	0.25	Roadster
19010303	Labels - Battery Enclosure - Any	0.25	Roadster
19010401	VIN Label - Plate (Remove & Install)	0.05	Roadster
19011875	Print and Attach QC Compliance Label	0.05	Roadster
21062102	Salvage Vehicle SIM Card/Firmware Rectification (Remove & Replace)	0.2	Roadster
30010102	Chassis Tub Assembly (Remove & Replace)	60.15	Roadster
30010202	Subframe Assembly - Rear - Roadster 1.5 (Remove & Replace)	6.55	Roadster
30010402	Subframe Assembly - Rear - Roadster 2.x (Remove & Replace)	7.35	Roadster
30020102	Frame Assembly - Seat Belt Anchorage (Remove & Replace)	5.8	Roadster
30020202	Stay - Seat Belt Anchorage Frame - LH (Remove & Replace)	0.55	Roadster
30020402	Stay - Seat Belt Anchorage Frame - RH (Remove & Replace)	0.55	Roadster
31010102	Knuckle - Suspension - Front - LH (Remove & Replace)	0.95	Roadster
31010202	Knuckle - Suspension - Front - RH (Includes Alignment Check) (Remove & Replace)	0.95	Roadster
31010602	Hub - Front - LH (Remove & Replace)	0.4	Roadster
31010702	Hub - Front - RH (Remove & Replace)	0.4	Roadster
31010802	Steering Arm - RH (Remove & Replace)	0.45	Roadster
31010902	Steering Arm - LH (Remove & Replace)	0.45	Roadster
31011000	Shim - Camber Adjustment	0.35	Roadster
31011102	Spring & Damper Assembly - Front - LH (Remove & Replace)	0.35	Roadster
31011202	Damper - Front - LH (Remove & Replace)	0.55	Roadster
31011302	Spring - Front - LH (Remove & Replace)	0.55	Roadster
31011402	Bracket - Damper - Front - Upper - LH (Remove & Replace)	0.5	Roadster
31011502	Bracket - Damper - Front - Upper - RH (Remove & Replace)	0.4	Roadster
31011602	Ball Joint - Front - Any - Wishbone Removed (Remove & Replace)	0.2	Roadster
31011701	Shim - Caster Adjustment (Remove & Install)	0.5	Roadster
31011802	Wishbone Assembly - Front - Lower - LH (Remove & Replace)	0.5	Roadster
31011902	Wishbone Assembly - Front - Lower - RH (Remove & Replace)	0.5	Roadster
31012002	Link - Sway Bar - Front - LH (Remove & Replace)	0.3	Roadster
31012102	Sway Bar - Front (Remove & Replace)	0.9	Roadster
31012202	Bushing - Sway Bar - Front (Remove & Replace)	2.7	Roadster
31012302	Wishbone Assembly - Front - Upper - LH (Remove & Replace)	0.5	Roadster
31012402	Wishbone Assembly - Front - Upper - RH (Remove & Replace)	0.5	Roadster

31012502	Bush - Front - Wishbone Removed (Remove & Replace)	0.6	Roadster
31012902	Link - Sway Bar - Front - RH (Remove & Replace)	0.3	Roadster
31013002	Spring - Front - RH (Remove & Replace)	0.55	Roadster
31013102	Damper - Front - RH (Remove & Replace)	0.55	Roadster
31013302	Spring & Damper Assembly - Front - RH (Remove & Replace)	0.35	Roadster
31030102	Upright - Suspension - Rear - LH (Remove & Replace)	0.9	Roadster
31030202	Upright - Suspension - Rear - RH (Remove & Replace)	2.25	Roadster
31030602	Hub - Rear - RH (Remove & Replace)	0.65	Roadster
31030702	Hub - Rear - LH (Remove & Replace)	0.7	Roadster
31030802	Carrier - Ball Joint - LH (Remove & Replace)	0.4	Roadster
31030902	Carrier - Ball Joint - RH (Remove & Replace)	0.4	Roadster
31031002	Shim - Camber Adjustment - Rear (Remove & Replace)	0.35	Roadster
31031102	Wishbone Assembly - Rear - Lower - LH (Remove & Replace)	0.9	Roadster
31031202	Wishbone Assembly - Rear - Lower - RH (Remove & Replace)	0.9	Roadster
31031302	Ball Joint - Rear - Any - Wishbone Removed (Remove & Replace)	0.2	Roadster
31031602	Wishbone Assembly - Rear - Upper - LH (Remove & Replace)	0.55	Roadster
31031702	Wishbone Assembly - Rear - Upper - RH (Remove & Replace)	0.55	Roadster
31031802	Ball Joint - Track Control Arm - Outer - LH (Remove & Replace)	0.35	Roadster
31031902	Spherical Joint - Track Control Arm - Inner - LH (Remove & Replace)	0.75	Roadster
31032002	Track Control Arm Assembly - Rear - LH (Remove & Replace)	4.5	Roadster
31032102	Spring & Damper Assembly - Rear - LH (Remove & Replace)	0.35	Roadster
31032202	Damper - Rear - LH (Remove & Replace)	0.55	Roadster
31032302	Spring - Rear - LH (Remove & Replace)	0.65	Roadster
31032402	Bush - Rear - Wishbone Removed (Remove & Replace)	0.6	Roadster
31032500	Four Wheel Alignment	2.75	Roadster
31032600	Four Wheel Alignment Check	0.15	Roadster
31032702	Spring & Damper Assembly - Rear - RH (Remove & Replace)	0.35	Roadster
31032802	Damper - Rear - RH (Remove & Replace)	0.55	Roadster
31032902	Spring - Rear - RH (Remove & Replace)	0.65	Roadster
31033002	Bracket - Rear Sway Bar - LH (Remove & Replace)	0.4	Roadster
31033102	Sway Bar - Rear (Remove & Replace)	0.55	Roadster
31033202	Bracket - Rear Sway Bar - RH (Remove & Replace)	0.4	Roadster
31033302	Bushing - Sway Bar - Rear (Remove & Replace)	0.45	Roadster
31033402	Drop Link - Sway Bar - Rear - LH (Remove & Replace)	0.35	Roadster
31033602	Drop Link - Sway Bar - Rear - RH (Remove & Replace)	0.35	Roadster
31033702	Track Control Arm Assembly - Rear - RH (Remove & Replace)	4.5	Roadster
31033802	Ball Joint - Track Control Arm - Outer - RH (Remove & Replace)	0.35	Roadster
31034002	Spherical Joint - Track Control Arm - Inner - RH (Remove & Replace)	0.75	Roadster
31100100	Suspension Adjustment - Front and Rear - Roadster 2.x	0.55	Roadster
31100105	Suspension Adjustment - Front and Rear - Roadster 2.x	0.55	Roadster
32010102	Steering Rack (Remove & Replace)	1.75	Roadster
32010202	Gaiter - Steering Rack - LH (Remove & Replace)	1.75	Roadster
32010302	Tie Rod End - LH (Remove & Replace)	0.35	Roadster
32010402	Shaft - Steering Column - Lower (Remove & Replace)	0	Roadster
32010502	Toe Adjustment - Front (Remove & Replace)	0.3	Roadster
32010505	Toe Adjustment - Front	0.3	Roadster
32010602	Tie Rod End - RH (Remove & Replace)	0.35	Roadster
32010702	Gaiter - Steering Rack - RH (Remove & Replace)	1.75	Roadster
32010802	Seal - Steering Rack (Remove & Replace)	1.65	Roadster
32010900	Steering Geometry	1	Roadster
32050502	Steering Lock (Remove & Replace)	0.75	Roadster

32051802	Steering Wheel (Remove & Replace)	0.35	Roadster
32051902	Steering Column (Remove & Replace)	1.3	Roadster
33010102	Brake Rotor - Front - LH (Remove & Replace)	0.35	Roadster
33010105	Brake Disc - Front - LH	0.4	Roadster
33010202	Brake Rotor - Rear - LH (Remove & Replace)	0.4	Roadster
33010205	Brake Disc - Rear - LH	0.4	Roadster
33010302	Brake Caliper - Front - RH (Remove & Replace)	0.55	Roadster
33010402	Brake Caliper - Front - LH (Remove & Replace)	0.55	Roadster
33010502	Brake Caliper - Rear - RH (Remove & Replace)	0.6	Roadster
33010602	Brake Caliper - Rear - LH (Remove & Replace)	0.6	Roadster
33010702	Brake Pads - Front - Set (Remove & Replace)	0.55	Roadster
33010705	Brake Pads - Front - Set	0	Roadster
33010802	Brake Pads - Rear - Set (Remove & Replace)	0.55	Roadster
33010805	Brake Pads - Rear - Set	0	Roadster
33010905	Brake Pads & Rotors - Front - Set	0.75	Roadster
33011005	Brake Pads & Rotors - Rear - Set	0.85	Roadster
33011102	Brake Rotor - Front - RH (Remove & Replace)	0.35	Roadster
33011105	Brake Disc - Front - RH	0.4	Roadster
33011202	Brake Rotor - Rear - RH (Remove & Replace)	0.4	Roadster
33011205	Brake Disc - Rear - RH	0.4	Roadster
33011505	Brake Pads & Rotors - Vehicle - Set	1.65	Roadster
33013005	Brake Pads/Calipers - Clean and Lubricate (With Wheels Removed)	0.5	Roadster
33030102	Master Cylinder (Remove & Replace)	0	Roadster
33030202	Brake Hose - Flexible - Front - RH (Remove & Replace)	0.7	Roadster
33030302	Brake Hose - Flexible - Front - LH (Remove & Replace)	0.7	Roadster
33030402	Brake Hose - Flexible - Rear - RH (Remove & Replace)	0.5	Roadster
33030502	Brake Hose - Flexible - Rear - LH (Remove & Replace) (Add Brake Fluid 1060099-00A if Needed)	0.5	Roadster
33030602	Pipe - ABS Module to Front - RH - Roadster 1.5 (Remove & Replace)	1.7	Roadster
33030702	Pipe - ABS Module to Front - LH (Remove & Replace)	0	Roadster
33030802	Pipe - Bodyside Front - Rear - RH - Roadster 1.5 (Remove & Replace)	20.45	Roadster
33030902	Pipe - Bodyside Front - Rear - LH (Remove & Replace)	20.05	Roadster
33031002	Brake Pipe - Rear to Flexi - LH (Remove & Replace)	1.6	Roadster
33031102	Brake Pipe - Rear to Flexi - RH (Remove & Replace)	0.35	Roadster
33031200	Brake Fluid Check	0.1	Roadster
33031202	Brake Fluid Bleed/Flush (Remove & Replace) (Add Brake Fluid 1060099-00A if Needed)	0.85	Roadster
33031302	Servo Assembly (Remove & Replace)	1	Roadster
33031402	Pipe - Master Cylinder - Front to ABS Module (Remove & Replace)	1	Roadster
33031502	Pipe - Master Cylinder - Rear to ABS Module (Remove & Replace)	0	Roadster
33031602	Pipe - ABS to RH Sill Pipe - Roadster 1.5 (Remove & Replace)	1.7	Roadster
33031702	Pipe - ABS to LH Sill Pipe (Remove & Replace)	0	Roadster
33031902	Hose - Vacuum Pump to Servo - Roadster 1.5 (Remove & Replace)	1.2	Roadster
33032102	Reservoir Cap - Master Cylinder (Remove & Replace)	0.1	Roadster
33032200	ABS MIL Light - Check/Reset	0.2	Roadster
33032302	Vacuum Pump (Remove & Replace)	0.3	Roadster
33032402	Reservoir - Master Cylinder (Remove & Replace)	0.3	Roadster
33032502	ABS Modulator Assembly (Remove & Replace)	1.6	Roadster
33032702	Pipe - ABS Module to Front - RH - Roadster 2.x (Remove & Replace)	1.5	Roadster
33032902	Pipe - ABS Module to Front - RH - Roadster 2.x (RHD) (Remove & Replace)	1.3	Roadster
33033102	Pipe - Bodyside Front - Rear - RH - Roadster 2.x (Remove & Replace)	20.25	Roadster
33033302	Pipe - ABS to RH Sill Pipe - Roadster 2.x (Remove & Replace)	1.5	Roadster
33033502	Pipe - ABS to RH Sill Pipe - Roadster 2.x (RHD) (Remove & Replace)	1.3	Roadster

33033702	Hose - Vacuum Pump to Servo - Roadster 2.x (Remove & Replace)	1.2	Roadster
33033902	Hose - Vacuum Pump to Servo - Roadster 2.x (RHD) (Remove & Replace)	1.25	Roadster
33050102	Parking Brake Lever - Roadster 1.5 (Remove & Replace)	0.85	Roadster
33050202	Cable - Primary - Parking Brake - Roadster 1.5 (Remove & Replace)	1.15	Roadster
33050302	Cable - Secondary - Parking Brake - Roadster 1.5 (Remove & Replace)	0.6	Roadster
33050402	Cable - Secondary - Parking Brake - Roadster 2.x (Remove & Replace)	0.6	Roadster
33050502	Switch - Parking Brake - Roadster 1.5 (Remove & Replace)	0.75	Roadster
33050602	Parking Brake - Adjust (Remove & Replace)	0.5	Roadster
33050702	Grip - Parking Brake (Remove & Replace)	0.1	Roadster
33050902	Parking Brake Lever - Roadster 2.x (Remove & Replace)	1	Roadster
33051002	Parking Brake Lever - Roadster 2.x (RHD) (Remove & Replace)	1	Roadster
33051102	Cable - Primary - Parking Brake - Roadster 2.x (Remove & Replace)	1.3	Roadster
33051302	Switch - Parking Brake - Roadster 2.x (Remove & Replace)	0.9	Roadster
34010102	Wheel - Front - LH (Remove & Replace)	0.7	Roadster
34010105	Tire Rotation	0.3	Roadster
34010202	Wheel - Rear - LH (Remove & Replace)	0.7	Roadster
34010302	Tire - Front - LH (Remove & Replace)	1	Roadster
34010402	Tire - Rear - LH (Remove & Replace)	1	Roadster
34010602	Module - TPMS Control Unit (Remove & Replace)	1.15	Roadster
34010702	Module - TPMS Antenna - Front (Remove & Replace)	1.1	Roadster
34010802	Module - TPMS Trigger - Rear - LH/RH (Remove & Replace)	0.5	Roadster
34010902	Wheel Sensor - TPMS (Remove & Replace)	0.7	Roadster
34010905	Wheel Sensor - TPMS	0.55	Roadster
34011000	Inspect Wheel (Cosmetic Inspection)	0.1	Roadster
34011102	Wheel - Front - RH (Remove & Replace)	0.7	Roadster
34011106	Wheel Lock Set - Install	0.45	Roadster
34011202	Wheel - Rear - RH (Remove & Replace)	0.7	Roadster
34011302	Module - TPMS Antenna (Remove & Replace)	0.4	Roadster
34011402	Module - TPMS Trigger - Front - LH/RH (Remove & Replace)	0.1	Roadster
34011502	Tire - Front - RH (Remove & Replace)	1	Roadster
34011602	Tire - Rear - RH (Remove & Replace)	1	Roadster
34012005	Tires - Front - Set	1	Roadster
34012105	Tires - Rear - Set	1	Roadster
34012205	Tires - Vehicle - Set	1	Roadster
34012302	Wheel Sensor - TPMS - Front - LH (Remove & Replace)	0.65	Roadster
34012402	Wheel Sensor - TPMS - Front - RH (Remove & Replace)	0.65	Roadster
34012501	Wheels - Vehicle - Set (Remove & Install)	0.4	Roadster
34012502	Wheel Sensor - TPMS - Rear - LH (Remove & Replace)	0.65	Roadster
34012508	Wheels - Vehicle - Set (Cosmetic Refinish)	2	Roadster
34012602	Wheel Sensor - TPMS - Rear - RH (Remove & Replace)	0.65	Roadster
34013000	Check Tire Tread Depth	0.05	Roadster
34013205	Rebalance 4 Tires	0.9	Roadster
34013305	Tire - Front - LH - Rebalance	0.35	Roadster
34013405	Tire - Front - RH - Rebalance	0.35	Roadster
34013505	Tire - Rear - LH - Rebalance	0.35	Roadster
34013605	Tire - Rear - RH - Rebalance	0.35	Roadster
34014005	Seasonal Wheel and Tire Set Swap	0.4	Roadster
34014105	Seasonal Tire Swap on Existing Wheels	1	Roadster
34014505	Accessory Wheel/Tire Package Assembly	1.1	Roadster
34015000	TPMS Control Unit Programming	0.3	Roadster
34015008	Wheel - Front - LH (Cosmetic Refinish)	0.5	Roadster



34015022	Cap - Wheel - Front - LH (Remove & Replace)	0.15	Roadster
34015108	Wheel – Front – RH (Cosmetic Refinish)	0.5	Roadster
34015122	Cap - Wheel - Front - RH (Remove & Replace)	0.15	Roadster
34015208	Wheel – Rear – LH (Cosmetic Refinish)	0.5	Roadster
34015222	Cap - Wheel - Rear - LH (Remove & Replace)	0.15	Roadster
34015308	Wheel – Rear – RH (Cosmetic Refinish)	0.5	Roadster
34015322	Cap - Wheel - Rear - RH (Remove & Replace)	0.15	Roadster
34015401	Install Wheel Caps - Set	0.05	Roadster
34016008	Tire - Front - LH - Repair	0.3	Roadster
34016108	Tire - Front - RH - Repair	0.3	Roadster
34016208	Tire - Rear - LH - Repair	0.3	Roadster
34016308	Tire - Rear - RH - Repair	0.3	Roadster
34020700	Set Tire Pressure	0.05	Roadster
34020800	Automated Tire Pressure Check	0	Roadster
34020900	Check and Adjust Tire Pressure	0.05	Roadster
34022015	Tire - Supplemental (Rebalance)	0.15	Roadster
39010302	Line Fuses - PEM - Roadster 1.5 (Remove & Replace)	1.6	Roadster
39010402	Line Fuses - PEM - Roadster 2.x (Remove & Replace)	0.5	Roadster
39010502	Fan Assembly - PEM - Roadster 1.5 (Remove & Replace)	1.3	Roadster
39010602	Fan Assembly - PEM - Roadster 2.x (Remove & Replace)	0.45	Roadster
39010702	Power Electronics Module (PEM) - Roadster 1.5 (Remove & Replace)	0.9	Roadster
39010802	Power Electronics Module (PEM) - Roadster 2.x (Remove & Replace)	1.55	Roadster
40010702	Drive Motor Assembly - Roadster 1.5 (Remove & Replace)	3.55	Roadster
40010802	Bearings - Ceramic Ball - Motor - Roadster 1.5 (Remove & Replace)	3.55	Roadster
40010902	Module - Motor Encoder - Roadster 1.5 (Remove & Replace)	2.6	Roadster
40011002	Fan Assembly - Motor (Remove & Replace)	0.45	Roadster
40011102	Mounting - Power Train - LH - Roadster 1.5 (Remove & Replace)	1.7	Roadster
40011202	Mounting - Power Train - RH - Roadster 1.5 (Remove & Replace)	1.75	Roadster
40011302	Mounting - Power Train - Lower (Remove & Replace)	4.05	Roadster
40011402	G10 Insulator Ring - Roadster 1.5 (Remove & Replace)	2.95	Roadster
40011502	Insulator Bushes - Motor to Transmission - Roadster 1.5 (Remove & Replace)	3.1	Roadster
40011602	Shroud - Motor - Upper - Roadster 1.5 (Remove & Replace)	2.1	Roadster
40011702	Shroud - Motor - Lower - Roadster 1.5 (Remove & Replace)	2.45	Roadster
40011902	Duct - Fan to Shroud Assembly (Remove & Replace)	0.55	Roadster
40012001	Power Train - Remove for access - Roadster 1.5 (Remove & Install)	2.5	Roadster
40012101	Motor - Transmission Split - Roadster 1.5 (Remove & Install)	2.8	Roadster
40012302	Drive Motor Assembly - Roadster 2.x (Remove & Replace)	4.4	Roadster
40012502	Bearings - Ceramic Ball - Motor - Roadster 2.x (Remove & Replace)	4.65	Roadster
40012702	Module - Motor Encoder - Roadster 2.x (Remove & Replace)	3.7	Roadster
40012902	Mounting - Power Train - LH - Roadster 2.x (Remove & Replace)	3.55	Roadster
40013102	Mounting - Power Train - RH - Roadster 2.x (Remove & Replace)	2.85	Roadster
40013302	G10 Insulator Ring - Roadster 2.x (Remove & Replace)	4.1	Roadster
40013502	Insulator Bushes - Motor to Transmission - Roadster 2.x (Remove & Replace)	4.05	Roadster
40013702	Shroud - Motor - Upper - Roadster 2.x (Remove & Replace)	3.2	Roadster
40013902	Shroud - Motor - Lower - Roadster 2.x (Remove & Replace)	3.6	Roadster
40014101	Power Train - Remove for access - Roadster 2.x (Remove & Install)	2.8	Roadster
40014301	Motor - Transmission Split - Roadster 2.x (Remove & Install)	3.9	Roadster
44012302	Door - Charge Port (Remove & Replace)	0.4	Roadster
44012402	Hinge - Door - Charge Port (Remove & Replace)	0.85	Roadster
44012502	Light Ring Assembly - Charge Port (Remove & Replace)	0.65	Roadster
44012602	Seal - Charge Port (Remove & Replace)	0.1	Roadster

44013102	Busbars - Charge Port to HV Battery (Remove and Replace)	0.55	Roadster
44509100	High Voltage Circuit Integrity Check	2	Roadster
45001400	Noise/Vibration: Verify And Inspect On-Site	0.3	Roadster
45001409	NVH Inspection - No Trouble Found	0.3	Roadster
45001500	NVH Inspection - Vehicle Familiarization	0.3	Roadster
46010000	Cooling System - Refill & Bleed	0.45	Roadster
46010105	Cooling System - Drain & Refill	1.6	Roadster
46012302	Coolant Pump (Remove & Replace)	1.4	Roadster
46012402	Coolant Hose - Manifold to Pump (Remove & Replace)	1.25	Roadster
46012602	Breather Hose - Heat Exchanger to Reservoir (Remove & Replace)	0.65	Roadster
46012702	Coolant Hose - Manifold to Heat Exchanger (Remove & Replace)	1.25	Roadster
46012802	Heat Exchanger (Remove & Replace)	2.95	Roadster
46012902	Reservoir Assembly - Coolant (Remove & Replace)	0.5	Roadster
46013002	Reservoir Cap - Coolant (Remove & Replace)	0.1	Roadster
46013102	Coolant Manifold - Battery (Remove & Replace)	2.4	Roadster
46013103	Coolant Manifold - Battery (Assembly Removed)	1.5	Roadster
46013202	Hoses - Any - Manifold to Battery (Remove & Replace)	1.2	Roadster
46013203	Hoses - Any - Manifold to Battery (Assembly Removed)	0.1	Roadster
46013302	Coolant Heater - Roadster 1.5 (Remove & Replace)	1.6	Roadster
46013402	Glycol Sensor - Roadster 1.5 (Remove & Replace)	3.15	Roadster
47030100	Transmission Fluid - Check	0.6	Roadster
47030102	Transmission Fluid - Replace (Remove & Replace)	0.7	Roadster
47030105	Transmission Fluid	0.25	Roadster
47030302	Transmission Assembly - Replace - Roadster 1.5 (Remove & Replace)	3.4	Roadster
47030402	Drive Coupler - Motor to Transmission - Roadster 1.5 (Remove & Replace)	3	Roadster
47030602	Transmission Assembly - Replace - Roadster 2.x (Remove & Replace)	4.55	Roadster
47030802	Drive Coupler - Motor to Transmission - Roadster 2.x (Remove & Replace)	4.15	Roadster
47031002	Actuator - Park Lock - Roadster 1.5 (Remove & Replace)	1.1	Roadster
47031202	Actuator - Park Lock - Roadster 2.x (Remove & Replace)	1.75	Roadster
47051002	Gear Selector Assembly - Roadster 1.5 (Remove & Replace)	1	Roadster
47051102	Gear Selector Button - Roadster 2.x (Remove & Replace)	0.45	Roadster
47051202	Gear Selector Control Board - Roadster 2.x (Remove & Replace)	0.5	Roadster
47051402	Gear Selector Assembly - Roadster 2.x (Remove & Replace)	0.4	Roadster
47150102	Driveshaft Assembly - LH (Remove & Replace)	1.05	Roadster
47150202	Driveshaft Assembly - RH (Remove & Replace)	1.05	Roadster
47150302	Gaiter - Driveshaft - Outer - LH (Remove & Replace)	1.35	Roadster
47150402	Gaiter - Driveshaft - Outer - RH (Remove & Replace)	1.35	Roadster
47150902	CV Joint Assembly - Outer - LH (Remove & Replace)	1.35	Roadster
47151002	CV Joint Assembly - Outer - RH (Remove & Replace)	1.35	Roadster
50010102	Mobile Connector - UMC (Remove & Replace)	0.1	Roadster
50020102	ASSEMBLY - HOME CONNECTOR (Remove & Replace)	0	Roadster
50030102	Assembly - Fast Charger (Remove & Replace)	0	Roadster
61010007	Tesla Body Repair - Paint Labor	0	Roadster
70000105	Third Party Transport	1	Roadster
70000305	Miscellaneous Labor	0	Roadster
70000505	Tire Disposal	1	Roadster
70001405	Valet Service (Tech)	0	Roadster
70001605	Valet Service Declined	0	Roadster
70001805	Courtesy Inspection Declined	0	Roadster
70002005	Non-Tesla (Rental)	0	Roadster
70002405	Rental Car Declined	0	Roadster

70003005	Third-party shuttle service provided (+)	0	Roadster
70003105	Third-party shuttle service provided (-)	0	Roadster
70003205	Third-party shuttle service declined	0	Roadster
70003605	Airport/Train Station Shuttle Provided	0	Roadster
70003805	Tesla Airport Service	1	Roadster
70004005	Roadster Vehicle Extended Service Agreement, 1 Year	0	Roadster
70004105	No Labor Performed - Customer Did Not Authorize Repairs	0	Roadster
70004505	No Labor Performed - Part Replaced	0	Roadster
70004807	Window Tint Removal	2.15	Roadster
70004817	Window Tint Install (Charlotte Only)	1.45	Roadster
70005005	Rebuilt Vehicle Inspection Complete and Rebuild Approved	0	Roadster
70005505	Car Wash Declined	0	Roadster
70005600	Parts Counter Sales Outside of Network (Over the Counter Sales)	0	Roadster
70005700	Scrap Part Sale Over the Counter	0	Roadster
70005805	Payment Collection Required	1	Roadster
70006005	Body Repair Concierge Service (Japan)	0	Roadster
70010200	Exterior Component/Panel/Glass Adjustment - 0.2	0.2	Roadster
70010400	Exterior Component/Panel/Glass Adjustment - 0.4	0.4	Roadster
70010600	Exterior Component/Panel/Glass Adjustment - 0.6	0.6	Roadster
70011050	Interior Component/Trim/Seal Adjustment - 0.05	0.05	Roadster
70011150	Interior Component/Trim/Seal Adjustment - 0.15	0.15	Roadster
70011300	Interior Component/Trim/Seal Adjustment - 0.3	0.3	Roadster
70014255	Additional Work Required - Corrosion Present - 0.25	0.25	Roadster
70014505	Additional Work Required - Corrosion Present - 0.5	0.5	Roadster
70014995	Additional Work Required - Corrosion Present - 1	1	Roadster
70015000	Test To Confirm Water Ingress No Longer Present	0.25	Roadster
70020105	Paint - Sublet	0	Roadster
70020205	Wheel Alignment - Sublet	0	Roadster
70020305	Upholstery - Sublet	0	Roadster
70020315	Seat Upholstery Repair (Internal)	1	Roadster
70020325	Seat Upholstery Steaming	0.25	Roadster
70020405	Accessory Installation - Sublet	0	Roadster
70020505	Wheel Refinish - Sublet	0	Roadster
70021005	Welding - Sublet	0	Roadster
70021105	Dent Repair - Sublet	0	Roadster
70021205	Hood Alignment - Sublet	0	Roadster
70021305	Liftgate Alignment - Sublet	0	Roadster
70021405	Door Alignment - Sublet	0	Roadster
70021505	Exterior Trim - Sublet	0	Roadster
70021605	Window Adjustment -Sublet	0	Roadster
70021705	Exterior Lighting - Sublet	0	Roadster
70021905	Windshield Wipers - Sublet	0	Roadster
70022105	High Mounted Brake Lamp - Sublet	0	Roadster
70022305	Vehicle Detailing - Sublet	0	Roadster
70023005	RIV Inspection - Sublet	0	Roadster
70023105	Israel Ordinance 309 Inspection - Sublet	1.79	Roadster
70060005	Thread Repair	0	Roadster
72000005	Vehicle Loaner Late Return Fee	1	Roadster
73010008	Remarketing - Photos	0	Roadster
73020008	Remarketing - Detail	0	Roadster
91001005	Print And Attach Used Car Buyers Guide	0.05	Roadster

91020105	Car Wash (Hand Wash)	0.4	Roadster
91020115	Car Wash (Mechanical Wash)	0.2	Roadster
91020205	Detail I	1	Roadster
91020305	Detail II	2	Roadster
91020405	Detail III	3	Roadster
91020908	Vehicle Cleaning - General	0	Roadster
91021517	Install Used Vehicle Label	0.2	Roadster
91022005	Charge Vehicle	0	Roadster
91022407	Vehicle Configuration Update	0.05	Roadster
91029006	Mobile Service Hub Repair	0	Roadster
91041002	Loaner Tire/Wheel (Remove & Replace)	0.2	Roadster
91041108	Loaner Wheel Reunite	0	Roadster
91041200	Loaner Tire/Wheel Quality Inspection	0.1	Roadster
94990002	No Correction Code Added to DealerTrack Correction (Remove & Replace)	0	Roadster
KIT-12-01	KIT LABOR-INTERIOR SOUND REDUCTION (Remove & Install)	8	Roadster
KIT-17-01	KIT LABOR XENON HL RETROFIT R2.X (Remove & Install)	2	Roadster
KIT-17-02	DDIN RADIO AND BACKUP CAMERA INSTALL (Remove & Replace)	12.5	Roadster
KIT-31-01	KIT LABOR-ADJUSTABLE SUSPENSION (Remove & Install)	5	Roadster
KIT-CF-01	KIT LABOR-CARBON FIBER DOOR SILLS (Remove & Install)	0.5	Roadster
KIT-CF-02	KIT LABOR-CARBON FIBER OUTER DASH PANELS (Remove & Replace)	1	Roadster
KIT-CF-03	KIT LABOR CARBON FIBER INSTRUMENT BINNACLE	0.5	Roadster
KIT-CF-04	KIT LABOR CARBON FIBER STEREO TRIM	1.5	Roadster
KIT-CF-05	KIT LABOR CARBON FIBER DRIVE BUTTON TRIM	0.5	Roadster
KIT-CF-06	KIT LABOR-CARBON FIBER INTERIOR SET	3	Roadster
KIT-CF-07	KIT LABOR-CARBON FIBER HOOD VANES	2	Roadster
KIT-CF-08	KIT LABOR-CARBON FIBER REAR SPOILER	0.3	Roadster
KIT-CF-09	KIT LABOR-CARBON FIBER FRONT SPOILER	1	Roadster
KIT-CF-10	KIT LABOR-CARBON FIBER BODY SIDE DUCTS	3	Roadster
KIT-CF-11	KIT LABOR CARBON FIBER REAR AIR DIFFUSER (Remove & Install)	1	Roadster
KIT-CF-12	KIT LABOR-CARBON FIBER EXTERIOR SET (Remove & Replace)	8	Roadster
KIT-CF-13	KIT LABOR-CARBON FIBER HARDTOP	0.3	Roadster
manualline	Manual Line	1	Roadster
MEM09011	GSM CONNECTIVITY CHECK (Remove & Install)	0.1	Roadster
MEM09013	ESS BLEED TEST PROCEDURE	0.5	Roadster
RCL0931001	WHEEL BEARING HUB BOLT TORQUE (Remove & Install)	1.5	Roadster
T010915007	FLOOR MAT INSPECTION	0.1	Roadster
T010916008	APS WATER INGRESS INSPECTION	0.7	Roadster
T010931003	FRONT DAMPER RESERVOIR HOSE INSPECTION	0.4	Roadster
T011010008	WHEEL ARCH LINER BRACKETS - INSPECTION ONLY	0.1	Roadster
T011010012	INSP. L&R DOOR BUTTONS, NO PROBLEM FOUND	0.1	Roadster
T011016007	BATTERY PACK IMBALANCE SCAN, NPF	0.5	Roadster
T011016010	INSPECT BMB COVER SCREWS, NO FURTHER WORK	0.1	Roadster
T011017001	ROADSTER 1.5 POWER SHARE ADAPTER INSTALLATION	0.3	Roadster
T011017002	ROADSTER 2.0 POWER SHARE ADAPTER VISUAL INSPECT.	0.1	Roadster
T011017004	CHECK FOR FUSE AND LABEL, NO ACTION REQUIRED, ALL	0.1	Roadster
T011017005	INSPECT AUX BATT FUSE VOLTAGE	0.3	Roadster
T011018009	DRAIN CONDENSATION TUBE FOR VALVE - INSPECTION	0.1	Roadster
T011034011	CHECK TPMS ANTENNA CONNECTORS, NO PROBLEMS FOUND	0.9	Roadster
T011047006	INSPECT 'DRIVE' BUTTON, NO PROBLEM FOUND	0.7	Roadster
T011131001	MEASURE LOWER CONTROL ARM CLEARANCE, NO ADJ REQ'D	0.3	Roadster
T011131002	MEASURE RIDE HEIGHT, NO FURTHER WORK PERFORMED	0.2	Roadster

T011146003	REPLACE COOLANT CAMPAIGN	2.5	Roadster
T020917006	INSPECT SIRIUS TUNER, NO REPLACEMENT REQUIRED	0.3	Roadster
T020917009	INSPECT HARNESS NO WORK PERFORMED	0.1	Roadster
T021010008	WHEEL ARCH LINER BRACKETS - BOND INTO PLACE	1.5	Roadster
T021010012	INSP. L&R DOOR BUTTONS, R&R LEFT SWX PLATE ONLY	0.9	Roadster
T021016007	BATTERY PACK IMBALANCE SCAN, BMB REPLACED	2	Roadster
T021016010	INSPECT BMB COVER SCREWS, RE-TORQUE TO SPEC	0.3	Roadster
T021017002	ROADSTER 2.0 POWER SHARE ADAPTER INSTALLATION	0.3	Roadster
T021017004	NEW FUSE AND/OR LABEL REQUIRED, INSTALL NEW FUSE	0.1	Roadster
T021017005	INSPECT AUX BATT FUSE VOLTAGE, REPLACE SWITCHPACK	1.6	Roadster
T021018009	DRAIN CONDENSATION TUBE FOR VALVE - REMOVE VALVE	0.1	Roadster
T021034011	CHECK TPMS ANTENNA CONNECTORS, FIXED CONNECTION(S)	0.9	Roadster
T021047006	INSPECT 'DRIVE' BUTTON, PERFORM HARNESS REWORK	1	Roadster
T021131001	MEASURE LOWER CONTROL ARM CLEARANCE, ADJ REQ'D	0.3	Roadster
T021131002	MEASURE RIDE HEIGHT, ADJUST SPRING PERCH TO SPEC	1.5	Roadster
T031010012	INSP. L&R DOOR BUTTONS, R&R RIGHT SWX PLATE ONLY	0.9	Roadster
T041010012	INSP. L&R DOOR BUTTONS, R&R L&R SWX PLATES	1.7	Roadster
TCC-CC-MFA4	Reset Multi Factor Authentication / Passcode		Roadster
TSB0907005	TSB0907005	1.4	Roadster
TSB0910001	DOOR HINGE SEALING	1.5	Roadster
TSB0910002	CLSR PANEL SEALING	1.5	Roadster
TSB0915007	FLOOR MAT UPGRADE	1.5	Roadster
TSB0916008	APS WATER INGRESS REPAIR	1	Roadster
TSB0917006	SIRIUS TUNER EXCESSIVE DRAW	0.6	Roadster
TSB0917009	HVAC PRESSURE TRANSDUCER WIRING MODIFICATION	0.4	Roadster
TSB0918004	HVAC CONTROLLER PTC CONTROLLER BOARD CHANGE	0.4	Roadster
TSB0931003	FRONT DAMPER RESERVOIR HOSE	0.5	Roadster
TSB0939003	PEM TEMP SENSOR CONNECTOR	0	Roadster
TSB0947005	TRANSMISSION VENT RETROFIT	1.4	Roadster
XXXX	Voided job (legacy TMIR)	200	Roadster
XXXXXXXX	Voided Correction (legacy TMIR)	155	Roadster