


Thank you for using our products.


**INSTALLATION INSTRUCTIONS
 AMT MULTITONE APPLIANCES
 AMT-12/24-NYC**


Use this product according to this instruction manual. Please keep this instruction manual for future reference.

GENERAL:

AMT Multitone Appliances are UL Listed for Fire Protective Service, General Signaling Service and UL Standard 464 for Audible Signal Appliances. They are listed for both indoor and outdoor use with the backboxes specified in these instructions. (See Mounting Options A,B,C,D,E,F,G). Wheelock's AMT Appliances are unique multitone alarm appliances with separate input terminals for each sound. They are the ideal choice for Halon Protection Systems and emergency signaling systems where distinctive multiple alarm conditions are required. Eight groups of three self-prioritized sound outputs are provided with separate electrically isolated input terminals for each sound (see Table 2 and 4 for sound selections). Sound output can be field set to provide either HIGH (HI) dBA or STANDARD (STD) dBA sound output level. AMT Multitone Appliances can be field set for either 12VDC or 24VDC operation and are designed for use with either filtered or unfiltered (full-wave-rectified) input voltage. All inputs are polarized for compatibility with standard reverse supervision of circuit wiring by Fire Alarm Control Panel (FACP).

NOTE: All **CAUTIONS** and **WARNINGS** are identified by the symbol . All warnings are printed in bold capital letters.

 **WARNING: PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT. FAILURE TO COMPLY WITH ANY OF THE FOLLOWING INSTRUCTIONS, CAUTIONS AND WARNINGS COULD RESULT IN IMPROPER APPLICATION, INSTALLATION AND/OR OPERATION OF THESE PRODUCTS IN AN EMERGENCY SITUATION, WHICH COULD RESULT IN PROPERTY DAMAGE AND SERIOUS INJURY OR DEATH TO YOU AND/OR OTHERS.**

 **WARNING: THE AMT MULTITONE APPLIANCES MUST BE FIELD SET TO THE DESIRED INPUT VOLTAGE, dBA SOUND OUTPUT LEVEL AND ALARM TONE BEFORE THEY ARE INSTALLED. THIS IS DONE BY PROPERLY INSERTING A JUMPER PLUG AND ADJUSTING A FOUR POSITION SWITCH IN ACCORDANCE WITH THESE INSTRUCTIONS. INCORRECT SETTINGS WILL RESULT IN IMPROPER PERFORMANCE AND MAY DAMAGE THE PRODUCT, WHICH COULD RESULT IN PROPERTY DAMAGE AND SERIOUS INJURY OR DEATH TO YOU AND/OR OTHERS.**

 
SPECIFICATIONS:

Table 1: dBA Ratings for AMT Multitone Appliance


Tone	Rated Reverberant dBA At 10 Feet Per UL 464			
	At Minimum Input Voltage		At Nominal Input Voltage	
	HI	STD	HI	STD
Bell	82	75	85	79
Code 3 Tone	85	79	88	82
Vibrating Chimes	79	73	82	75

Table 2: Current Ratings for AMT Multitone Audible Appliances

Tone	Tone Description	Maximum RMS Current (AMPS)							
		24VDC		24VRMS		12VDC		12VRMS	
		HI	STD	HI	STD	HI	STD	HI	STD
Bell	1560 Hz Modulated (0.07 Sec. ON/Repeat)	0.057	0.026	0.040	0.028	0.117	0.031	0.150	0.057
Code 3 Tone	500 Hz (ANSI S3.41 Temporal Pattern)	0.060	0.030	0.051	0.031	0.168	0.052	0.216	0.100
Vibrating Chime	700Hz (1.0 Sec. Decay/Repeat)	0.041	0.020	0.044	0.029	0.090	0.028	0.108	0.042

 **WARNING: CHECK THE MINIMUM AND MAXIMUM OUTPUT OF THE POWER SUPPLY AND STANDBY BATTERY AND SUBSTRACT THE VOLTAGE DROP FROM THE CIRCUIT WIRING RESISTANCE TO DETERMINE THE APPLIED VOLTAGE TO THE SIGNALING APPLIANCE.**

 **WARNING: FOR UL APPLIANCES THESE APPLIANCES WERE TESTED TO THE OPERATING VOLTAGE LIMITS OF 16-33 VOLTS FOR 24V APPLICATIONS AND 8.0-17.5 VOLTS FOR 12V APPLICATIONS USING FILTERED (DC) OR UNFILTERED FULL-WAVE-RECTIFIED (FWR). DO NOT APPLY 80% AND 110% OF THESE VOLTAGE VALUES FOR SYSTEM OEPRATION.**

 **WARNING: MAKE SURE THAT THE TOTAL RMS CURRENT REQUIRED BY ALL APPLIANCES THAT ARE CONNECTED TO THE SYSTEM'S PRIMARY AND SECONDARY POWER SOURCES, NAC CIRCUITS, OR WHEELLOCKS POWER SUPPLIES DO NOT EXCEED THE POWER SOURCES' RATED CAPACITY OR THE CURRENT RATINGS OF ANY FUSES ON THE CIRCUITS TO WHICH THESE APPLIANCES ARE WIRED. OVERLOADING POWER SOURCES OR EXCEEDING FUSE RATINGS COULD RESULT IN LOSS OF POWER AND FAILURE TO ALERT OCCUPANTS DURING AN EMERGENCY, WHICH COULD RESULT IN PROPERTY DAMAGE AND SERIOUS INJURY OR DEATH TO YOU AND/OR OTHERS.**

When calculating the total currents: Use Table 2 to determine the highest value of “RMS Current” for an individual AMT (across the expected operating voltage range of the AMT’s), then multiply these values by the total number of AMT’s; be sure to add the currents for any other appliances powered by the same source and include any required safety factors.


If the peak current exceeds the power supplies’ peak capacity, the output voltage provided by the power supplies may drop below the listed voltage range of the appliances connected to the supply and the voltage may not recover in some types of power supplies. For example, an auxiliary power supply that lacks filtering at its output stage (either via lack of capacitance and/or lack of battery backup across the output) may exhibit this characteristic.

The AMT Multitone audible appliances produce a brief inrush current that lasts for just 2 microseconds but can reach a peak value of 8.0 Amps (11.2 amps for FWR input).

AMT MULTITONE SETTINGS:

The Jumper Plug (DP1) and Switch (SW1) of the AMT Multitone Appliances, shown in Figure 1, are used to set the input voltage dBA sound output level and alarm tone. The factory settings are shown below. **Read these instructions carefully before changing any of these factory settings.**

Figure 1:
PC Board Layout Showing Location of Jumper Plug (DP1) and Switch (SW1)

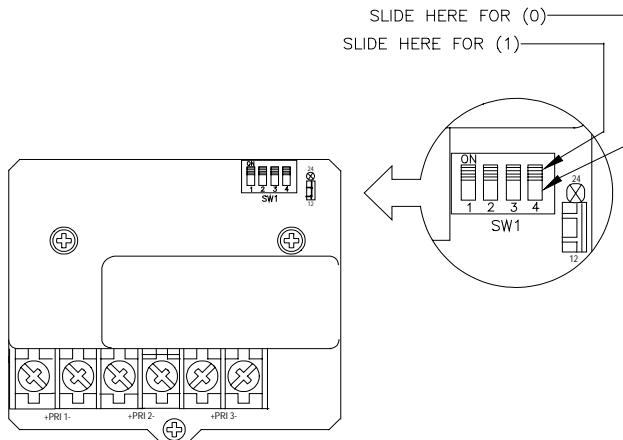

The Factory Settings are:

24VDC: DP1 SET ON 24
HIGH dBA: SW1 POS 1 = 1

Priority 1 (PRI 1) HORN TONE: }
Priority 2 (PRI 2) BELL TONE: } SW1 POS 2, 3, 4 = 1, 1, 1
Priority 3 (PRI 3) SIREN TONE: }


Notes:

1. Set desired input voltage and dBA sound output level as follows (Refer to Figures 2 and 3).
2. AMT Multitone Appliances are field set for input voltage and dBA sound output level by inserting a Jumper Plug (DP1) and adjusting a four position Switch (SW1) as shown in Table 3 and Figures 2 and 3. Use DP1 to select the desired voltage and SW1 Position 1 to select the dBA sound output level.

Input Voltage and Decibel Level		DP1 and SW1 Settings
24 VDC/HIGH	dBA:	Set DP1 on 24; set SW1 POS 1 on 1
24 VDC/STD	dBA:	Set DP1 on 24; set SW1 POS 1 on 0
12 VDC/HIGH	dBA:	Set DP1 on 12; set SW1 POS 1 on 1
12 VDC/STD	dBA:	Set DP1 on 24; set SW1 POS 1 on 1


(Factory Setting)

Figure 2:
Jumper Plug (DP1) Settings

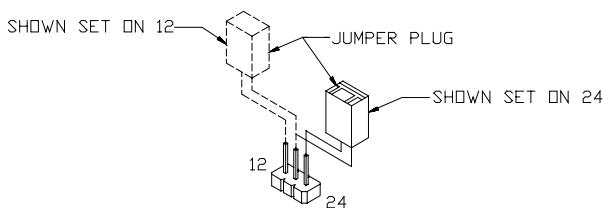

(Use Needle Nose Pliers to Lift and Properly Insert the Jumper Plug)

Figure 3:
Switch (SW1) Settings

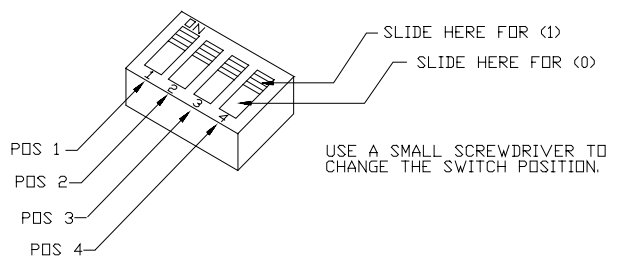


⚠ WARNING: DO NOT APPLY 24VDC INPUT IF THE JUMPER PLUG (DP1) IS SET ON 12. THIS CAN DAMAGE THE UNIT. DOUBLE CHECK THE JUMPER PLUG (DP1) AND SWITCH (SW1) SETTINGS TO MAKE SURE THEY ARE CORRECT. IMPROPER SETTINGS CAN DAMAGE THE UNIT OR RESULT IN NO SOUND OUTPUT OR A dBA SOUND OUTPUT LEVEL THAT IS BELOW THE MINIMUM CODE REQUIREMENTS FOR PUBLIC MODE FIRE PROTECTION, WHICH COULD RESULT IN PROPERTY DAMAGE AND SERIOUS INJURY OR DEATH TO YOU AND/OR OTHERS.

NOTES:



1. The prioritized tones contained in each group is factory pre-set which can not be changed.
2. The Code 3 Horn and Code 3 Tone (set on HIGH dBA) incorporate the temporal pattern specified by ANSI/NFPA for standard emergency evacuation signaling. They should be used only for fire evacuation signaling and not for any other purpose.

The Bell Tone can be used on coded systems with a minimum On-Time of 1/4 second if the audible and strobe are wired to operate independently. All other tones are recommended for use only on continuous (non-coded) systems.

WIRING DIAGRAMS:

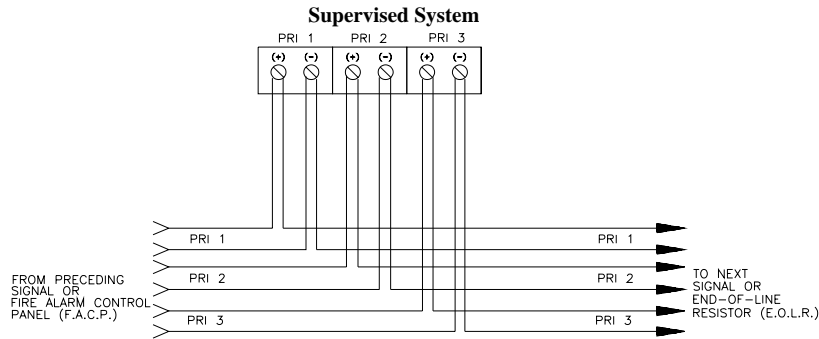


- Isolated inputs are provided for independent supervision and actuation of the three audible inputs.

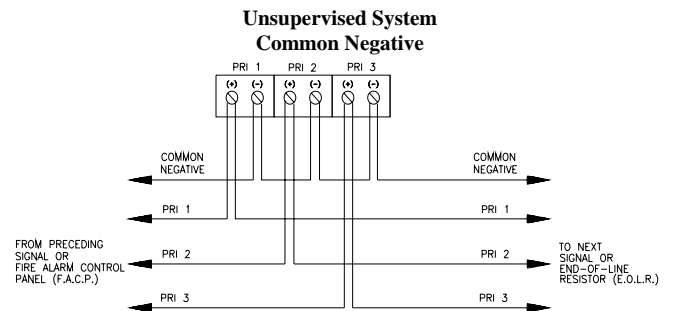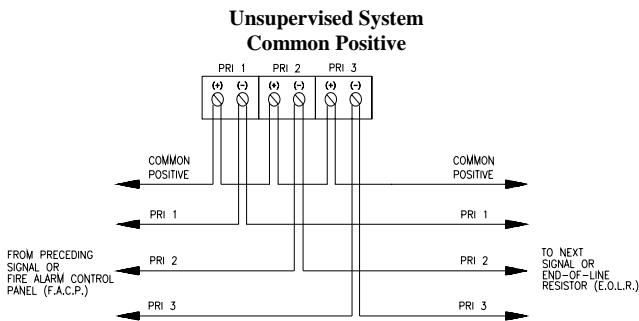

- For applications not requiring supervision: connect all positive (+) terminals to the power source. The negative (-) terminal for each appliance will actuate the appliance.

- For applications not requiring supervision: connect all negative (-) terminals to the power source. The positive (+) terminal for each appliance will actuate the appliance.

 In case of simultaneous inputs, the three audible outputs are self-prioritized as follows: 1st priority= PRI 1; 2nd priority = PRI 2; 3rd priority = PRI 3. Leave any unused inputs disconnected.




1. AMT Multitone appliance models have in-out wiring terminals that accept two #12 to #18 American Wire Gauge (AWG) wires at each screw terminal. Strip leads 3/8 inches and connect to screw terminals.
2. Break all in-out wire runs on supervised circuits to assure integrity of circuit supervision as shown on left. The polarity shown in the wiring diagrams is for operation of the appliances. The polarity is reversed by the FACP during supervision.

MOUNTING OPTIONS:

CAUTION: The following figures show the maximum number of field wires (conductors) that can enter the backbox used with each mounting option. If these limits are exceeded, there may be insufficient space in the backbox to accommodate the field wires and stresses from the wires could damage the product.

Although the limits shown for each mounting option comply with the National Electrical Code (NEC), Cooper Wheelock recommends use of the largest backbox option shown and the use of approved stranded field wires, whenever possible, to provide additional wiring room for easy installation and minimum stress on the product from wiring.

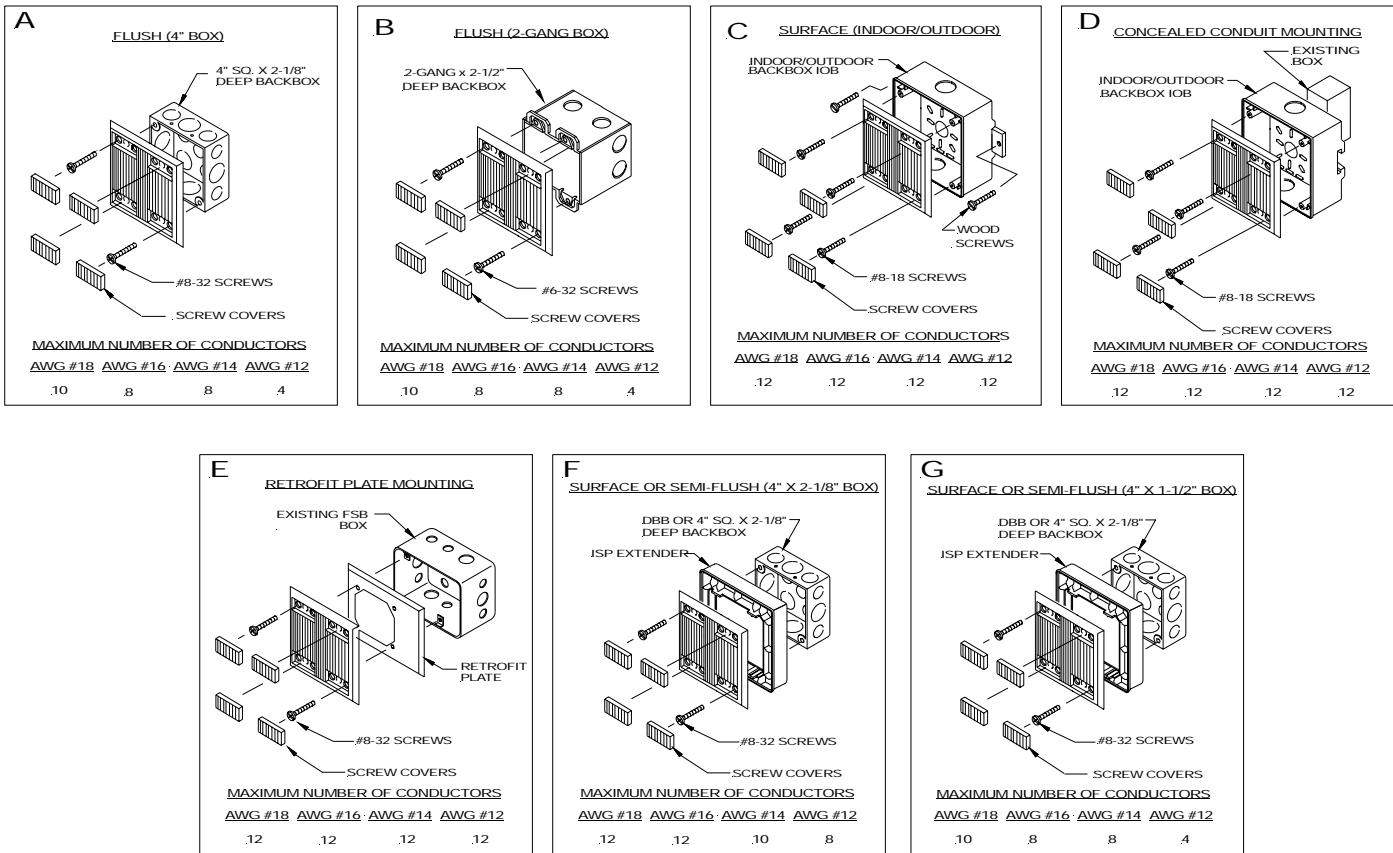

AMT Appliances can be wall or ceiling mounted.

MOUNTING PROCEDURES:

CAUTION: If sheathed multiconductor cable or 3/4" conduit fittings are used, check that installed product has sufficient clearance and wiring room prior to installing backboxes and conduit.

1. AMT Multitone Appliances can be flush mounted to a standard 4 inch square by 2-1/8 inch deep electrical box (Figure A) or a standard 2-gang by 2-1/2 inch minimum deep electrical box (Figure B).
2. Select largest backbox shown in Mounting Options where possible, to provide additional wiring room for easy installation.
3. Conduit entrance to backboxes should be selected to insure sufficient wiring clearance for installed equipment. When extension rings are required, conduit should enter through backbox, not extension ring. Use Steel City #53151/1-1/2" deep or #53171/2-1/8" deep extension rings or equal with same area cut out in back.
4. The AMT-12/24 model can also be surface mounted to Wheelock's Indoor/Outdoor Backbox (Model IOB) for indoor/outdoor use (Figure C).
5. The AMT-12/24 model is supplied with four snap-in covers to hide the mounting holes and provide an attractive installation. The snap-in covers are interchangeable and have slots on each end so they can be removed if necessary (by prying them up with a thin blade screwdriver). To insert snap-in cover, slide one side partially into mounting hole recess; align the cover so that snap-in cover and grille are parallel to each other (not tilted) and snap cover into place.
6. The IOB surface backbox has 1/2 inch conduit knockouts on two sides. It has a variety of knockouts on the back for mounting it to recessed electrical boxes and for wire entrances (Figure D). It can also be mounted to a surface with the two mounting ears that are supplied. The ears slide into slots on the back of the box. Use appropriate anchors for the wood screws that are supplied with the box (if necessary).
7. For outdoor use, the IOB includes a prefastened gasket and four hole plugs. Use the mounting ears to secure the box (do not use the back knockouts). Use the hole plugs to seal the unused mounting holes on the AMT Multitone grille (press them in securely from the back side of the grille). Mount the unit to the IOB with the four #8-18 screws supplied with the box.
8. All models are UL Listed for indoor and outdoor use with a temperature range of -31° F to +150° F (-35° C to +66° C) and maximum humidity of 98%, ± 2% RH.

WARNING: A SMALL POSSIBILITY EXISTS THAT THE USE OF MULTIPLE STROBES WITHIN A PERSON'S FIELD OF VIEW, UNDER CERTAIN CIRCUMSTANCES, MIGHT INDUCE A PHOTO-SENSITIVE RESPONSE IN PERSONS WITH EPILEPSY. STROBE REFLECTIONS IN A GLASS OR MIRRORED SURFACE MIGHT ALSO INDUCE SUCH A RESPONSE. TO MINIMIZE THIS POSSIBLE HAZARD, COOPER WHELOCK STRONGLY RECOMMENDS THAT THE STROBES INSTALLED SHOULD NOT PRESENT A COMPOSITE FLASH RATE IN THE FIELD OF VIEW WHICH EXCEEDS FIVE (5) Hz AT THE OPERATING VOLTAGE OF THE STROBES. COOPER WHELOCK ALSO STRONGLY RECOMMENDS THAT THE INTENSITY AND COMPOSITE FLASH RATE OF INSTALLED STROBES COMPLY WITH LEVELS ESTABLISHED BY APPLICABLE LAWS, STANDARDS, REGULATIONS, CODES AND GUIDELINES.

NOTE: NFPA 72/ANSI 117.1 conform to ADAAG Equivalent Facilitation Guidelines in using fewer, higher intensity strobes within the same protected area.

⚠ WARNING: IF AMT MULTITONE APPLIANCES ARE OPERATED WITHIN 15 INCHES OF A PERSON'S EAR, THEY CAN PRODUCE A SOUND PRESSURE LEVEL THAT EXCEEDS THE MAXIMUM 120 dBA PERMITTED BY ADA AND OSHA RULES. EXPOSURE TO SUCH SOUND LEVELS CAN RESULT IN DAMAGE TO A PERSON'S HEARING.

⚠ WARNING: NFPA CODES REQUIRE SIGNALING APPLIANCES TO BE SUPERVISED. CHECK TO BE CERTAIN THAT UNSUPERVISED SIGNALING APPLIANCES DO NOT VIOLATE ANY APPLICABLE CODES.

The AMT Multitone products and these instructions are copyrighted by Cooper Wheelock and contain proprietary, confidential and trade secrets of Cooper Wheelock. No part of the AMT Multitone products and these instructions may be photocopied, printed or reproduced in any form or modified, adapted, changed or enhanced, or converted to another programming language, or used to create updated, related or derivative works, without the prior written consent of Wheelock. No part of the AMT Multitone shall be decompiled, disassembled or reverse engineered.

⚠ CAUTION: Check the installation instructions of the manufacturers of other equipment used in the system for any guidelines or restrictions on wiring and/or locating Notification Appliance Circuits (NAC) and notification appliances. Some system communication circuits and/or audio circuits, for example, may require special precautions to assure electrical noise immunity (e.g. audio crosstalk).

ANY MATERIAL EXTRAPOLATED FROM THIS DOCUMENT OR FROM COOPER WHEELLOCK MANUALS OR OTHER DOCUMENTS DESCRIBING THE PRODUCT FOR USE IN PROMOTIONAL OR ADVERTISING CLAIMS, OR FOR ANY OTHER USE, INCLUDING DESCRIPTION OF THE PRODUCT'S APPLICATION, OPERATION, INSTALLATION AND TESTING IS USED AT THE SOLE RISK OF THE USER AND COOPER WHEELLOCK WILL NOT HAVE ANY LIABILITY FOR SUCH USE.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) Reorient or relocate the receiving antenna, 2) Increase the separation between the equipment and receiver, 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected, and 4) Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty

Cooper Wheelock, Inc. products must be used within their published specifications and must be PROPERLY specified, applied, installed, operated, maintained, and operationally tested in accordance with these instructions at the time of installation and at least twice a year or more often in accordance with local, state and federal codes, regulations and laws. Specification, application, installation, operation, maintenance, and testing must be performed by qualified personnel for proper operation in accordance with all of the latest National Fire Protection Association (NFPA), Underwriters' Laboratories (UL), Underwriters' Laboratories of Canada (ULC), National Electrical Code (NEC), Occupational Safety and Health Administration (OSHA), local, state, county, province, district, federal and other applicable building and fire standards, guidelines, regulations, laws and codes including, but not limited to, all appendices and amendments and the requirements of the local authority having jurisdiction (AHJ). Cooper Wheelock, Inc. products when properly specified, applied, installed, operated, maintained, and operationally tested as provided above are warranted against mechanical and electrical defects for a period of three years from date of manufacture (as determined by date code). Correction of defects by Cooper Wheelock, Inc providing repairs or a replacement shall be at Cooper Wheelock, Inc.'s sole discretion and shall constitute fulfillment of all warranty obligations. The foregoing limited warranty shall immediately terminate in the event any part not furnished by Cooper Wheelock, Inc. is installed in the product. The foregoing limited warranty specifically excludes any software required for the operation of or included in a product. **COOPER WHEELLOCK, INC. MAKES NO REPRESENTATION OR WARRANTY OF ANY OTHER KIND, EXPRESS, IMPLIED OR STATUTORY WHETHER AS TO MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER MATTER.**

Users are solely responsible for determining whether a product is suitable for the user's purposes, or whether it will achieve the user's intended results. There is no warranty against damage resulting from misapplication, improper specification, abuse, accident, or other operating conditions beyond Cooper Wheelock, Inc.'s control.

Some Cooper Wheelock, Inc. products contain software. With respect to those products, Cooper Wheelock, Inc. does not warranty that the operation of the software will be uninterrupted or error-free or that the software will meet any other standard of performance, or that the functions or performance of the software will meet the user's requirements. Cooper Wheelock, Inc. shall not be liable for any delays, breakdowns, interruptions, loss, destruction, alteration, or other problems in the use of a product arising out of or caused by the software.

The liability of Cooper Wheelock, Inc. arising out of the supplying of a product, or its use, whether based on warranty, negligence, or otherwise, shall not in any case exceed the cost of correcting defects as stated in the limited warranty and upon expiration of the warranty period all such liability shall terminate. Cooper Wheelock, Inc. is not liable for labor costs incurred in removal, reinstallation, or for damage of any type whatsoever, including but not limited to, loss of profit or incidental or consequential damages. The foregoing shall constitute the sole remedy of the purchaser and the exclusive liability of Cooper Wheelock, Inc.

In no case will Cooper Wheelock, Inc.'s liability exceed the purchase price paid for a product.

Limitation of Liability

Cooper Wheelock, Inc.'s liability on any claim of any kind, including negligence, breach of warranty, or otherwise, for any loss or damage resulting from, arising out of, or connected with any contract, or from the manufacture, sale, delivery, resale, repair or use of any product shall be limited to the price applicable to the product or part thereof which gives rise to the claim. Cooper Wheelock, Inc.'s liability on any claim of any kind shall cease immediately upon the installation in the product of any part not furnished by Cooper Wheelock, Inc. In no event shall Cooper Wheelock, Inc. be liable for any claim of any kind unless it is proven that our product was a direct cause of such claim. **FURTHER, IN NO EVENT, INCLUDING IN THE CASE OF A CLAIM OF NEGLIGENCE, SHALL COOPER WHEELLOCK, INC. BE LIABLE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the preceding limitation may not apply to all purchasers.