HL-L6300DW

brother

Quick Setup Guide

Read the Product Safety Guide first, then read this Quick Setup Guide for the correct installation procedure.

The latest manuals are available at the Brother Solutions Center: solutions.brother.com/manuals.

D01GSZ001-00
USA/CAN
Version C

Unpack the machine and check the components

Drum Unit and Toner Cartridge Assembly (pre-installed)

Installation CD-ROM

AC Power Cord

Quick Setup Guide

Product Safety Guide

Watch our Video FAQs for help with setting up your Brother machine: solutions.brother.com/videos.
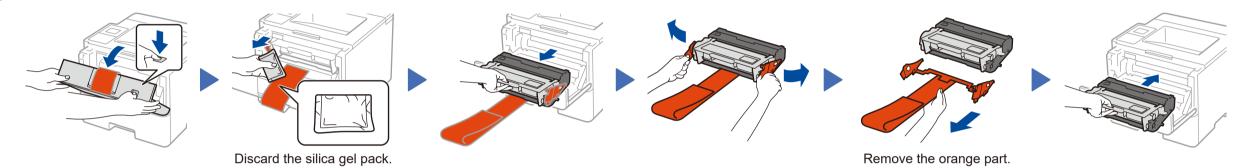
NOTE:
- Manuals in Spanish for this model are available on the Brother Solutions Center. (USA only): solutions.brother.com/manuals
  Los manuales en español de este modelo están disponibles en el Brother Solutions Center. (Solamente en los Estados Unidos): solutions.brother.com/manuals
- You must purchase the correct interface cable for the interface you want to use.

  USB cable
  We recommend using a USB 2.0 cable (Type A/B) that is no more than 6 feet (2 meters) long.
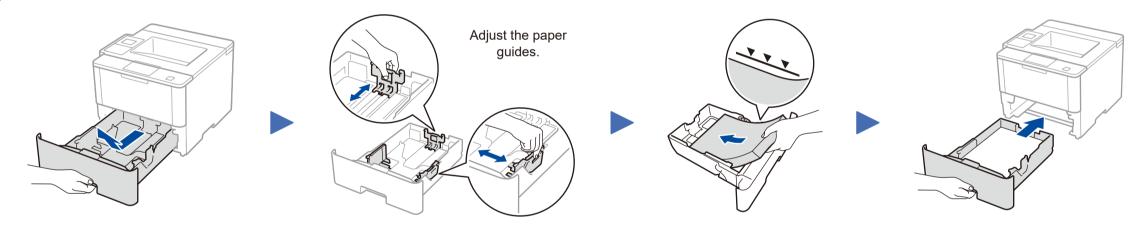
  Network cable
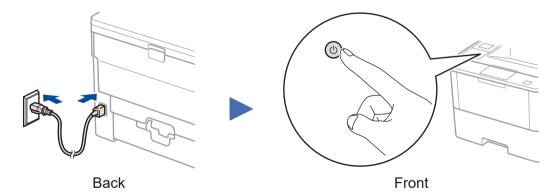 Use a straight-through Category 5 (or greater) twisted-pair cable.

---

1 Remove the packing materials and install the drum unit and toner cartridge assembly
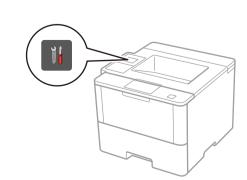

Discard the silica gel pack.

Remove the orange part.

---

2 Load paper in the paper tray

Adjust the paper guides.

---

3 Connect the power cord and turn on the machine

Back

Front

---

4 Select your language (if needed)

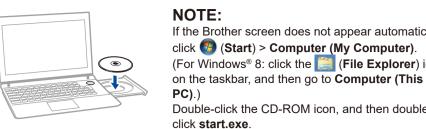**1.** On the machine's Touchscreen, press 🔧[Settings] > [General Setup] > [Local Language].

2. Press your language.

3. Press 🏠.

5 Connect your machine and install software

Brother regularly updates firmware to add features and fix identified problems. To check for the latest firmware, visit solutions.brother.com/up1.

Windows® computer with CD-ROM drive

NOTE:
If the Brother screen does not appear automatically, click (**Start**) > **Computer (My Computer)**. (For Windows® 8: click the (**File Explorer**) icon on the taskbar, and then go to **Computer (This PC)**.)
Double-click the CD-ROM icon, and then double-click **start.exe**.

Choose your Connection Type:

Follow the on-screen instructions to continue installation.

Follow the on-screen instructions to continue installation. ▶ **Finish**

Macintosh/Windows® computer without CD-ROM drive

Download the full driver and software package from the Brother Solutions Center.
(Macintosh) solutions.brother.com/mac
(Windows®) solutions.brother.com/windows

If using a wireless network connection:
When the **Wireless Device Setup** screen appears, select **Setup without a USB cable (Recommended)**.

When instructed, go to your machine's LCD.
a. Press the **WiFi** icon on the LCD.
b. Press [WLAN Assistant].

NOTE:
If the LCD screen is blank, press to wake up the device.

Follow the on-screen instructions to continue installation. ▶ **Finish**

NOTE:
• When finished, restart your computer.
• If connection is unsuccessful, see *Cannot set up your machine?* below.

WiFi Alternate wireless configuration method (Setup Wizard)

Restart your wireless access point/router.

Find your
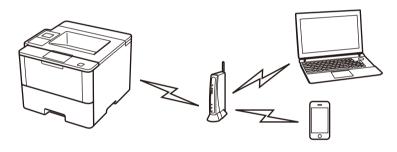SSID: XXXXXXX
Network key: XXXX

If you cannot find this information, ask your network administrator or wireless access point/router manufacturer.
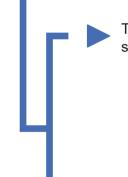
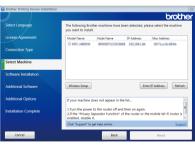Press WiFi > [Setup Wizard] > [Yes].

Select the SSID.
Enter the Network key.

The LCD displays [Connected.].

To use with your computer, follow Step 5 until the **Select Machine** screen appears, listing all machines in your network.

Select your machine.

Follow the on-screen instructions to continue installation. ▶ **Finish**

NOTE:
• When finished, restart your computer.
• If connection is unsuccessful, see *Cannot set up your machine?* below.

To use with your mobile device, go to *Print using your mobile device*.

For Network Users: Important Notice for Network Security
The default Web Based Management password is located on the back of the machine and marked "**Pwd**". We recommend immediately changing the default password to use network tools/utilities securely and to protect your machine from unauthorized access.

Print using your mobile device

Before printing from your mobile device, your machine must be configured according to step 5 or WiFi *Alternate wireless configuration method (Setup Wizard)*.

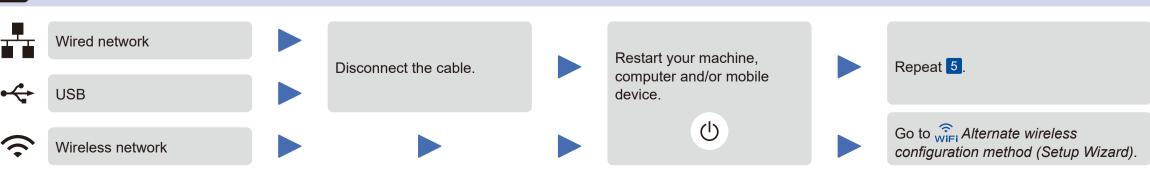Download "Brother iPrint&Scan" to start using your machine with mobile devices.
solutions.brother.com/ips

Works with Apple AirPrint
AirPrint is available for OS X and iOS users.
For more information, see the *AirPrint Guide* on your model's **Manuals** web page.
solutions.brother.com/manuals

? Cannot set up your machine?

Wired network	▶						
USB	▶	Disconnect the cable.	▶	Restart your machine, computer and/or mobile device.	▶	Repeat 5.	
Wireless network	▶		▶		▶	Go to WiFi *Alternate wireless configuration method (Setup Wizard)*.	

NOTE:
If you repeat these steps and connection is still unsuccessful, please visit the Brother Solutions Center at: http://support.brother.com.

Brother support website http://support.brother.com